



Manuals.plus /

› Nictemaw /

› Nictemaw Portable Washing Machine Model NIC-55841-W User Manual

Nictemaw NIC-55841-W

Nictemaw Portable Washing Machine User Manual

Model: NIC-55841-W

1. PRODUCT OVERVIEW

The Nictemaw Portable Washing Machine, Model NIC-55841-W, is a fully automatic compact laundry solution designed for small living spaces such as apartments, RVs, homes, and dormitories. It features a 17.8 lbs (2.4 Cu.ft) capacity, 10 wash programs, and 8 water level options for versatile laundry care. This machine is equipped with a drain pump for efficient water removal and focuses on washing and spin-drying, removing up to 95% of water from clothes.



Figure 1: Nictemaw Portable Washing Machine, Model NIC-55841-W.

Key Features:

- **Effortless Operation:** 10 wash programs and 8 water level options with one-touch operation and an intuitive LED screen.
- **Powerful Performance:** Built-in drain pump and extended drain hose for efficient water removal. Note: This machine does not have a drying function, but performs high-speed rotary drying to remove 95% of water.
- **Large Capacity & Space Saving:** 17.8 lbs (2.4 Cu.ft) honeycomb stainless steel inner tub, lightweight and compact with side handles and adjustable bases.
- **Advanced Laundry Solutions:** Autonomous imbalance detection and correction, soundproof cotton for quiet operation, and a self-cleaning function.
- **User-friendly Details:** 24-hour delayed start, child lock, honeycomb-shaped stainless steel inner tank, fluff stain filter, and a transparent lid.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can result in serious injury or damage.

General Safety:

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and movement during operation.
 - Do not connect the machine to a hot water source. Use only cold water for the inlet.
 - Keep children and pets away from the appliance during operation. Utilize the child lock feature for added safety.
 - Do not overload the machine. Refer to the capacity guidelines to avoid damage and ensure effective cleaning.
 - Unplug the appliance from the power outlet when not in use or before cleaning and maintenance.
 - Never operate the machine with a damaged power cord or plug. Contact customer service for repairs.
 - Avoid placing heavy objects on the machine or standing on it.
-

3. SETUP

Proper setup is crucial for the optimal performance and longevity of your Nictemaw Portable Washing Machine. Follow these steps carefully.

Unpacking:

1. Carefully remove the washing machine from its packaging.
2. Remove any protective foam base and concave plastic pieces from the bottom of the machine. These are for shipping protection only.
3. Install the provided base cover onto the bottom of the machine, ensuring it clicks securely into position.

Placement:

- Place the washing machine on a firm, level surface. Use the adjustable feet to ensure stability and minimize vibration.
- Ensure there is adequate space around the machine for ventilation and hose connections.
- Ideal for apartments, RVs, homes, and dormitories due to its compact size and portability.



Figure 2: The portable washing machine is suitable for various small living spaces.

Connecting Hoses:

1. **Water Inlet Hose:** Connect the inlet hose to the water inlet valve on the back of the washing machine. Securely tighten the connection.
2. Attach the other end of the inlet hose to a suitable faucet using the provided faucet adapter if necessary. Ensure a tight seal to prevent leaks.
3. **Drain Hose:** Connect the extended drain hose to the drain outlet on the machine. Position the other end of the drain hose into a sink, tub, or drain pipe, ensuring it is secured to prevent dislodging during drainage.

Your browser does not support the video tag.

Video 1: Installation guide for the Nictemaw Portable Washing Machine, demonstrating unpacking, hose connections, and leveling.

4. OPERATING INSTRUCTIONS

Operating your Nictemaw Portable Washing Machine is straightforward with its intuitive control panel.

Control Panel Overview:



Figure 3: The control panel features 10 programs and 8 water level options for customized washing.

Starting a Wash Cycle:

1. **Load Laundry:** Open the transparent lid and place your clothes evenly inside the honeycomb stainless steel inner tub. Do not overload.
2. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the tub with the clothes.
3. **Power On:** Press the 'Power' button to turn on the machine.
4. **Select Water Level:** Press the 'Water Level' button to choose from 8 available water levels based on your laundry load size.
5. **Select Program:** Press the 'Program' button to cycle through the 10 wash programs (e.g., Standard, Spin, Quick Wash, Large, Air Dry, Soak, Wash, Wash Rinse, Normal, Rinse Spin).
6. **Start Cycle:** Press the 'Start/Pause' button to begin the wash cycle. The LED screen will display the remaining

time.

Your browser does not support the video tag.

Video 2: Demonstration of the Nictemaw Portable Washing Machine's features and ease of use, including loading, selecting programs, and starting a cycle.

Special Functions:

- **Child Lock:** To activate, press and hold the 'Water Level' and 'Program' buttons simultaneously for 3 seconds. This freezes the control panel to prevent accidental changes.
 - **24-hour Delayed Start:** Use this function to set a delayed start time for your wash cycle, fitting into your busy schedule.
 - **Spin-Dry:** The machine performs a high-speed rotary spin to remove up to 95% of water from clothes, preparing them for air drying. It does not have a heating element for full drying.
-

5. MAINTENANCE

Regular maintenance ensures your Nictemaw Portable Washing Machine remains efficient and extends its lifespan.

Cleaning the Lint Filter:

- The removable fluff stain filter effectively collects lint, hair, and other debris.
- Regularly remove and clean the filter to maintain optimal washing performance and prevent clogs.



Figure 4: Key components including the detachable filter for easy maintenance.

Tub Self-Cleaning Function:

- The machine includes a self-cleaning function to keep the inner tub clean and prevent dirt accumulation.
- Activate this function periodically to ensure a hygienic washing environment.

TUB AIR DRY SELF CLEANING

High-pressure pulse jet water scours the tub wall to prevent dirt from accumulating



Figure 5: The tub self-cleaning mechanism uses high-pressure water jets to maintain cleanliness.

General Cleaning:

- Wipe down the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter any issues with your washing machine, refer to the following common problems and solutions.

Common Issues:

- **Excessive Vibration/Noise:** Ensure the machine is on a level surface and the adjustable feet are properly set. Check for unevenly distributed laundry inside the tub; the machine can autonomously detect and correct imbalance.

- **Water Not Draining:** Verify that the drain hose is not kinked or blocked. Ensure the drain pump is functioning correctly and the hose is positioned properly for drainage.
- **Machine Not Starting:** Check if the power cord is securely plugged in. Ensure the 'Power' button has been pressed and a program selected before pressing 'Start/Pause'.
- **Water Leaks:** Inspect all hose connections (inlet and drain) for tightness. Ensure the faucet adapter is correctly installed.

For issues not covered here, please contact customer service.

7. SPECIFICATIONS

Feature	Specification
Brand Name	Nictemaw
Model Info	NIC-55841-W
Product Dimensions	18.7 x 18.5 x 33 inches (D x W x H)
Capacity	17.8 Lbs / 2.4 Cubic Feet
Installation Type	Freestanding
Special Features	24h Delay Start, Child Lock, High Efficiency, Vibration Reduction
Color	White
Control Console	Push Button
Access Location	Top Load
Voltage	110 Volts
Material Type	Stainless Steel
Included Components	Drain Hose, Inlet Hose-Faucet Adaptor
Cycle Options	Air dry, Heavy Duty, Normal, Quick Wash, Rinse

8. WARRANTY & SUPPORT

Nictemaw is committed to providing excellent customer service and product reliability.

- **Warranty:** This product comes with a 2-year warranty.
- **Customer Service:** For any issues or concerns, please contact our 7/24H customer service team. Refer to your purchase documentation for contact details.