

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bellemave](#) /

› [Bellemave Triple Bunk Bed \(Model FST00213-T-BB1\) Instruction Manual](#)

Bellemave FST00213-T-BB1

Bellemave Triple Bunk Bed (Model FST00213-T-BB1) Instruction Manual

Model: FST00213-T-BB1 | Brand: Bellemave

INTRODUCTION

Thank you for choosing the Bellemave Triple Bunk Bed. This instruction manual provides essential information for the safe assembly, operation, and maintenance of your new bunk bed. Please read this manual thoroughly before assembly and retain it for future reference. This metal bunk bed is designed for versatility, offering a twin over twin configuration that can also be separated into three individual twin beds.

SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always assemble the bunk bed according to the provided instructions to ensure structural stability.
- Do not exceed the maximum weight capacity: **400 lbs for the upper bed** and **450 lbs for each bottom bed**
- The upper bunk is not suitable for children under six years of age.
- Use the guardrails to prevent falls. Ensure guardrails are properly installed and secured at all times.
- Be aware of the risk of falling from a significant height when using the upper bunk.
- Ensure the mattress used on the upper bunk does not exceed 6 inches in thickness and is at least 5 inches below the top of the guardrail.
- Periodically check and ensure that all connectors are tight.
- Do not allow horseplay on or under the bed.
- Always use the ladder for entering and exiting the upper bunk.
- Prohibit more than one person on the upper bunk.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. Refer to the parts list included in your packaging. If any parts are missing or damaged, do not proceed with assembly and contact customer support immediately.

- Metal frame components for three twin beds.
- Guardrails for the upper bunk.
- Integrated ladder.
- Metal slats for mattress support.
- All necessary hardware (screws, bolts, nuts, washers).
- Assembly tools (e.g., Allen wrench).
- Instruction manual.

SETUP / ASSEMBLY INSTRUCTIONS

Assembly is required for this triple bunk bed. It is recommended that two adults assemble this product. Each part is numbered for straightforward assembly. All necessary tools are included.

Step 1: Unpack and Identify Components

Carefully unpack all components from the boxes. Lay them out on a clean, soft surface (like a carpet) to prevent scratches. Identify each part using the provided parts list and ensure all hardware is present.

Step 2: Assemble the Base Frames

Begin by assembling the base frames for the two lower twin beds. Connect the side rails to the headboards and footboards using the provided bolts and nuts. Do not fully tighten bolts until all components are loosely assembled.



Image: Close-up view of the sturdy metal frame connection points, illustrating how the bed components are joined together with bolts for stability.

Step 3: Install Bed Slats

Once the base frames are assembled, insert the metal slats into the designated slots or attach them to the support rails. These slats provide crucial support for your mattress and eliminate the need for a box spring.



Image: An aerial view of the assembled metal bed frame, showcasing the integrated metal slats that provide robust mattress support.

Step 4: Assemble the Upper Bunk Frame

Assemble the frame for the upper bunk, similar to the lower beds. Attach the guardrails to the upper bunk frame. Ensure the guardrails are securely fastened as they are critical safety components.



Image: Detail of the upper bunk, highlighting the secure attachment of the full-length guardrails and the integrated ladder for safe access.

Step 5: Attach Upper Bunk to Lower Frames

Carefully lift the assembled upper bunk frame and attach it to the designated connection points on the lower bed frames. Secure all connections with the provided hardware. Ensure the ladder is also firmly attached.



Image: The complete Bellemave Triple Bunk Bed assembly, showcasing the twin over twin configuration with an additional twin bed at the side.

Step 6: Final Tightening

Once all components are in place and loosely assembled, go back and fully tighten all bolts and screws. Do not overtighten. Ensure the bed is stable and level before use.

OPERATING INSTRUCTIONS

Standard Triple Bunk Configuration

In its standard configuration, the bed features a twin over twin bunk with an additional twin bed positioned alongside the lower bunk. This setup is ideal for maximizing sleeping space in compact rooms.

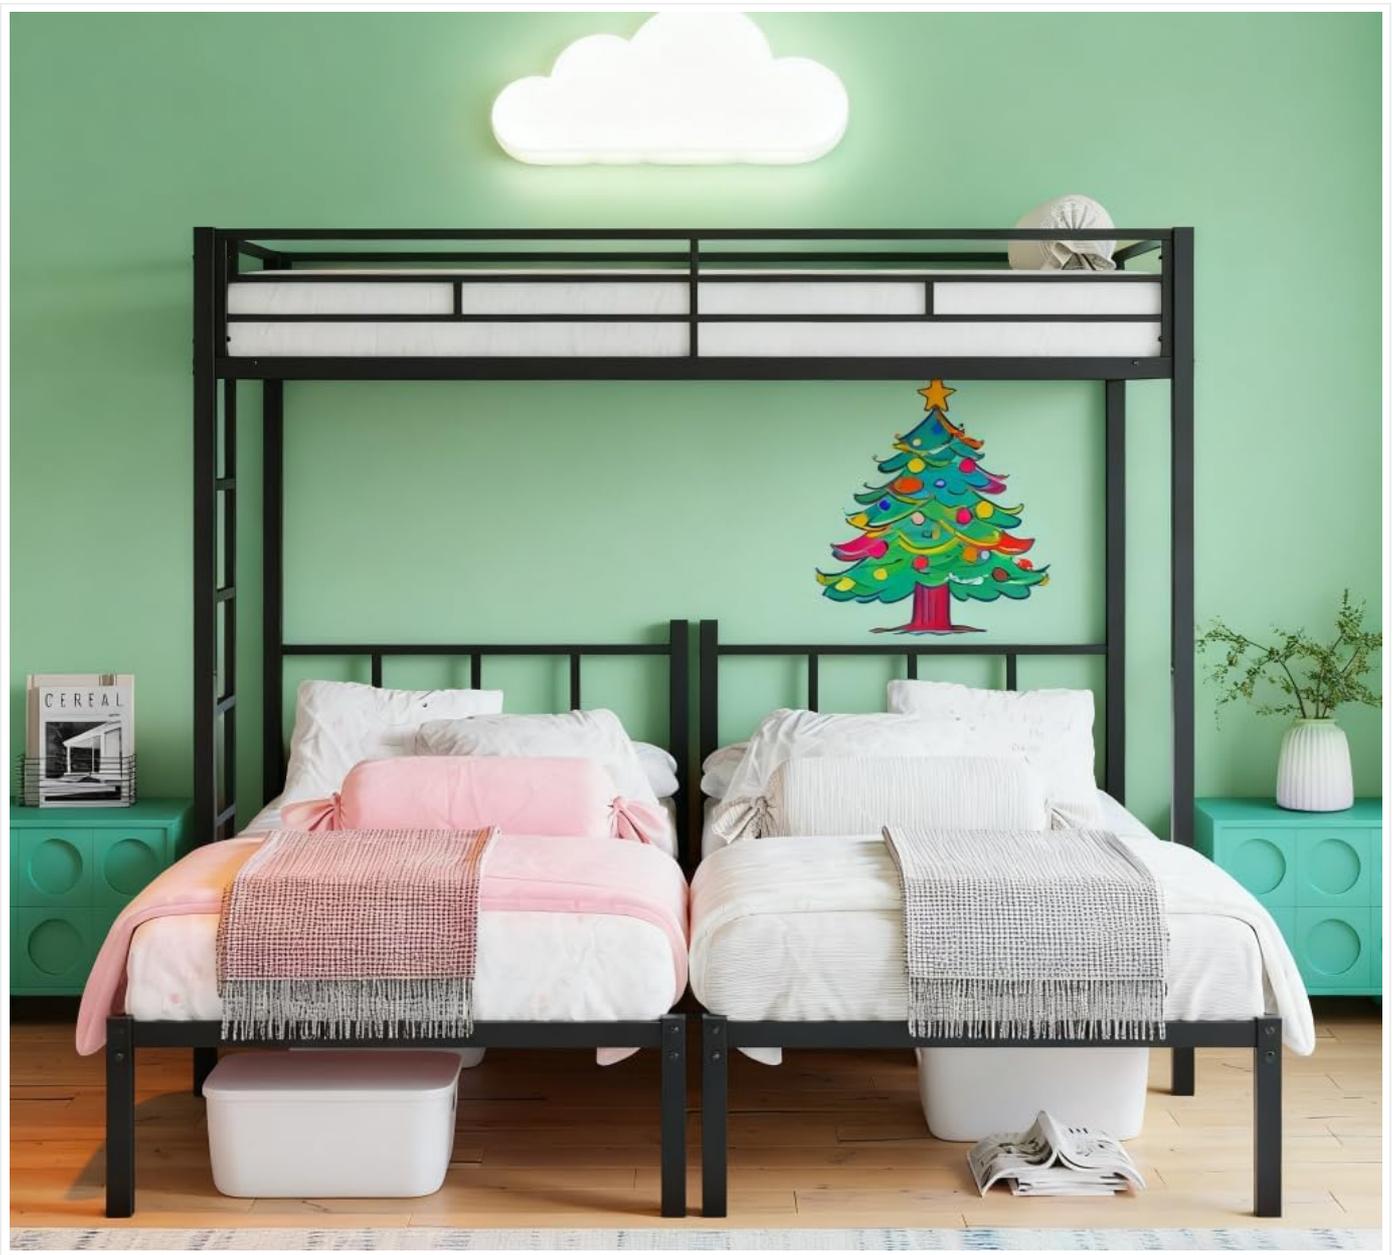


Image: The Bellemave Triple Bunk Bed arranged in a room, demonstrating its space-saving design with three twin beds.

Converting to Three Individual Twin Beds

The Bellemave Triple Bunk Bed can be separated into three individual twin-size beds. To convert, carefully disassemble the upper bunk from the lower frames. Then, separate the two lower twin beds. Ensure all connecting hardware is removed and stored safely. This conversion allows for flexible room arrangements as needs change.



Image: The three components of the Bellemave Triple Bunk Bed configured as separate twin beds, illustrating its convertible design.

Weight Capacities

- Upper Bunk: Maximum 400 lbs.
- Each Lower Bunk: Maximum 450 lbs.

MAINTENANCE

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and connections to ensure they remain tight. Retighten if necessary to maintain stability and safety.
- **Structural Integrity:** Regularly check the bed frame for any signs of damage, bending, or stress. If any damage is observed, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware connections.	Check and tighten all bolts and screws. Ensure the bed is on a level surface.
Squeaking noises during use.	Loose connections or friction between metal parts.	Tighten all hardware. Apply a small amount of silicone lubricant to connection points if squeaking persists.
Difficulty assembling parts.	Incorrect orientation of parts or missing hardware.	Refer to the assembly instructions carefully. Ensure parts are oriented correctly. Verify all hardware is present. Do not force parts.
Mattress sags through slats.	Incorrect mattress size or damaged slats.	Ensure mattress is the correct twin size. Inspect slats for damage; contact support if damaged.

SPECIFICATIONS



Image: A technical diagram illustrating the precise dimensions of the Bellemave Triple Bunk Bed in both centimeters and inches.

Feature	Detail
Model Number	FST00213-T-BB1
Product Dimensions (L x W x H)	83"L x 78"W x 72.8"H
Material	Metal
Color	Black
Finish Type	Lacquered
Form Factor	Triple Bunk Bed (Convertible)

Feature	Detail
Compatible Mattress Size	Twin
Upper Bed Weight Capacity	400 lbs
Lower Bed Weight Capacity (each)	450 lbs
Special Feature	No Box Spring Needed (Metal Slats Included)
Assembly Required	Yes
Item Weight	60 pounds

WARRANTY INFORMATION

Bellemave products are manufactured with quality and durability in mind. For specific warranty details regarding your Triple Bunk Bed, please refer to the warranty card included with your purchase or contact Bellemave customer support. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Bellemave customer support. For the most up-to-date contact information, please visit the official Bellemave website or refer to the contact details provided in your product packaging.

You can also visit the [Bellemave Store on Amazon](#) for more information.

