

[Manuals.plus](#) /

› [FURRIFIC](#) /

› FURRIFIC 10-Drawer Dresser with Power Strip and RGB Lights User Manual

FURRIFIC MC364

FURRIFIC 10-Drawer Dresser with Power Strip and RGB Lights User Manual

Model: MC364 | Brand: FURRIFIC

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FURRIFIC 10-Drawer Dresser. This versatile furniture piece is designed to offer ample storage with its 6 large and 4 medium fabric drawers. It also functions as a TV stand for screens up to 55 inches, featuring an integrated power strip with 2 AC outlets and 2 USB ports, and an RGB LED light strip for customizable ambiance.



Image 1.1: The FURRIFIC 10-Drawer Dresser in a bedroom, showcasing its storage and integrated lighting.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or product damage.

- **Anti-Tip Hazard:** Dressers can tip over, causing serious injury or death. Always secure the dresser to the wall using the provided anti-tip kit.
- **Weight Limits:** Do not exceed the maximum weight capacity for each drawer (Large: 4 kg, Medium: 3 kg) or the top surface (for TVs up to 55 inches).
- **Stable Placement:** Ensure the dresser is placed on a flat, level surface. The adjustable anti-slip feet help maintain stability and protect your floor.
- **Electrical Safety:** Only use the integrated power strip with compatible devices. Do not overload the outlets. Keep liquids away from electrical components.
- **Children Safety:** Keep children away from the assembly area. Do not allow children to climb on or play with the dresser.

Dimensiones del Producto

Poco espacio, gran capacidad

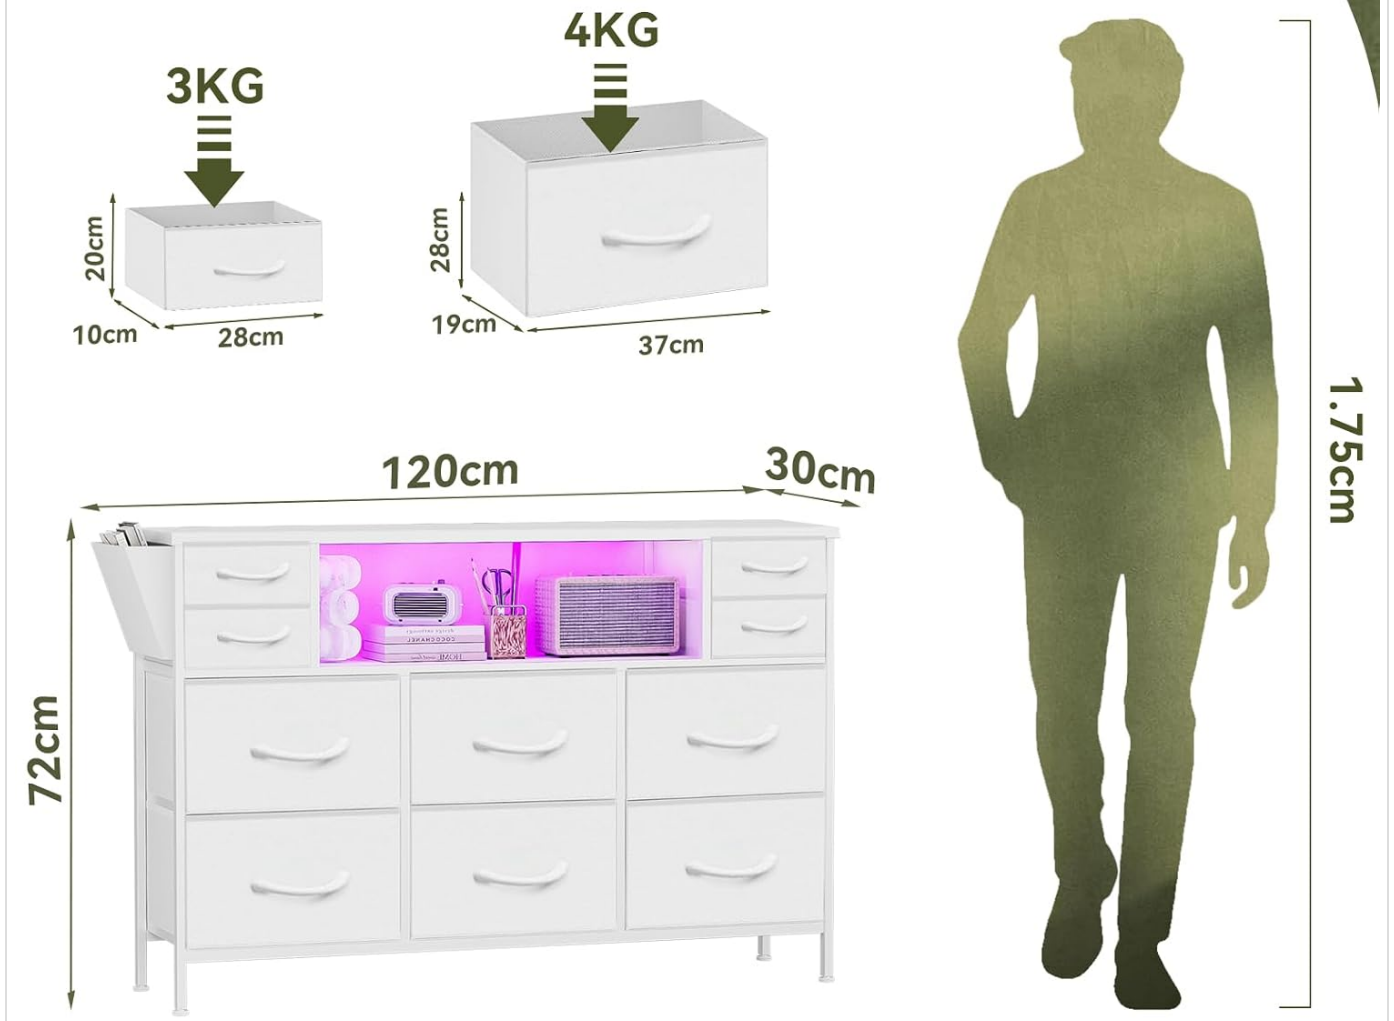


Image 2.1: Detail of the dresser's stable construction, including adjustable feet and durable materials.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components
- 6 Large Fabric Drawers
- 4 Medium Fabric Drawers
- Integrated Power Strip (with 2 AC outlets and 2 USB ports)
- RGB LED Light Strip
- RGB Remote Control
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual



Image 3.1: The dresser with drawers open, illustrating the storage capacity.

4. SETUP AND ASSEMBLY

Assembly is required. Please follow the detailed step-by-step instructions provided in the separate assembly manual included in your package. Ensure you have sufficient space and all tools before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in the assembly manual to identify each component.
3. **Assemble Frame:** Follow the instructions to connect the metal frame components securely.
4. **Install Top Board:** Attach the top board, ensuring the power strip opening is correctly oriented.
5. **Insert Drawers:** Fold and insert the fabric drawers into their designated slots.
6. **Install Power Strip and Lights:** Place the power strip into its slot and adhere the RGB LED light strip as indicated in the assembly manual. Connect the power strip to a wall outlet.

7. **Secure to Wall:** Attach the anti-tip kit to the dresser and the wall according to the instructions to prevent accidental tipping.

Your browser does not support the video tag.

Video 4.1: A demonstration of the dresser's features and assembly process.

5. OPERATING INSTRUCTIONS

5.1 Using the Integrated Power Strip

The dresser includes a built-in power strip with 2 standard AC outlets and 2 USB ports (5V/2A) for convenient charging of electronic devices.

- Ensure the dresser's main power cord is securely plugged into a functional wall outlet.
- Plug your TV, phone charger, or other compatible devices into the AC outlets or USB ports.
- Do not exceed the maximum electrical load for the power strip.

FUERTE Y DURADERO



Image 5.1: The power strip in use, charging multiple devices.

5.2 Controlling the RGB LED Lights

The RGB LED light strip can be controlled using the included remote control to change colors, modes, and brightness.

- **Power On/Off:** Press the power button on the remote to turn the lights on or off.
- **Color Selection:** Use the color buttons to select a static color.
- **Mode Selection:** Press the 'MODE' button to cycle through various dynamic lighting effects.
- **Brightness Adjustment:** Use the 'BRIGHT' buttons to increase or decrease the light intensity.
- **Speed Adjustment:** For dynamic modes, use the 'SPEED' buttons to adjust the effect speed.



Image 5.2: The RGB LED lights with the remote control for various settings.

6. MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning the Frame:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning Fabric Drawers:** Spot clean fabric drawers with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth.
- **Inspecting Connections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Electrical Components:** Keep the power strip and LED lights free from dust and moisture. Do not attempt to repair electrical components yourself.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Dresser is wobbly/unstable	Uneven floor; loose connections	Adjust the anti-slip feet; tighten all assembly screws. Ensure anti-tip kit is installed.
Power strip not working	Not plugged in; wall outlet issue; overloaded	Ensure the dresser's power cord is fully plugged into a working wall outlet. Test the wall outlet with another device. Reduce the number of devices plugged into the strip.
RGB lights not turning on	Power strip off; remote battery dead; light strip connection loose	Ensure the power strip is active. Replace the remote control battery. Check the connection of the LED light strip to the power source.
Drawers are difficult to open/close	Overloaded; improperly inserted	Reduce the weight in the drawer. Ensure the drawer is fully and correctly inserted into its slot.

8. SPECIFICATIONS

Detailed product specifications for your reference:

- **Model Number:** MC364
- **Overall Dimensions (L x W x H):** 120 cm x 30 cm x 72 cm (47.2 x 11.8 x 28.3 inches)
- **Material:** Metal frame, Non-woven fabric drawers
- **Color:** White
- **Number of Drawers:** 10 (6 large, 4 medium)
- **Large Drawer Dimensions:** 37 cm x 28 cm x 19 cm (14.6 x 11 x 7.5 inches)
- **Large Drawer Max Load:** 4 kg (8.8 lbs)
- **Medium Drawer Dimensions:** 28 cm x 20 cm x 10 cm (11 x 7.9 x 3.9 inches)
- **Medium Drawer Max Load:** 3 kg (6.6 lbs)
- **Item Weight:** 16 kg (35.3 lbs)
- **TV Compatibility:** Up to 55 inches
- **Power Strip:** 2 AC Outlets, 2 USB Ports (5V/2A)
- **Lighting:** RGB LED Light Strip

SALIDAS Y 2 PUERTOS USB



Cable
1.5M



USB
5V/2A



Salidas
110V/12A



Image 8.1: Detailed product dimensions and drawer capacities.

LIMPIO Y ORDENADO



Image 8.2: The dresser functioning as a TV stand, supporting a 55-inch television.

9. WARRANTY AND SUPPORT

Your FURRIFIC dresser comes with a **1-year free return policy** and a **3-year warranty**, officially supported by Amazon.

If you have any questions regarding the product, accessories, assembly, or require technical assistance, please do not hesitate to contact our customer support team. We are committed to providing prompt assistance and resolving any issues within 24 hours. For support, please refer to the contact information provided with your purchase or visit the FURRIFIC brand store on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question