

[manuals.plus](#) /› [SJCAM](#) /› [SJCAM C400 Vlogging Camera User Manual](#)

SJCAM C400

SJCAM C400 Vlogging Camera User Manual

Model: C400

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your SJCAM C400 Vlogging Camera. Please read this manual thoroughly before operating the device and retain it for future reference. The SJCAM C400 is a versatile 4K action camera designed for vlogging, travel, and outdoor activities. It features 6-axis stabilization, a rotatable touchscreen, and extended battery life with its accompanying grip.

2. WHAT'S IN THE Box

Your SJCAM C400 package includes the following items:

- SJCAM C400 Camera Unit
- Handheld Controller/Battery Grip
- Waterproof Housing (up to 30 meters)
- Mini Tripod
- Magnetic Lanyard
- Bike Mount
- Helmet Base
- Various Mounting Bases (curved and flat)
- 3M Adhesive Stickers
- USB-C Cable
- Cleaning Cloth
- Wrist Lanyard
- MicroSD Card (64GB, Sandisk)



Alloggiamento impermeabile



Il Framework



Cestruzzo alla schiena



Treppiede



Sacchetto di stoccaggio



Corda magnetica.



Installazione base.



viti



scheda microSD



Controller di mano



fotocamera



Cavo USB



Etichette adesive 3M



pulire il panno



appendere la corda

COSA C'È NELLA SCATOLA?

Image: All accessories included with the SJCAM C400 camera, including the camera unit, handheld controller, waterproof housing, various mounts, and a 64GB microSD card.

3. CAMERA OVERVIEW

3.1 Components

- Camera Unit:** Main recording device with lens and small display.
- Handheld Controller:** Features a larger 2.29-inch rotatable touchscreen, control buttons, and an integrated battery.
- USB-C Port:** For charging and data transfer (located on both camera and controller).
- MicroSD Card Slot:** For storage (located on the camera unit).



Image: The SJCAM C400 camera unit attached to its handheld controller, mounted on a mini tripod, alongside other accessories like the carrying case and waterproof housing.

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the camera and handheld controller. Connect the provided USB-C cable to the camera and/or controller and a USB power adapter (not included). The charging time for the camera alone is approximately 2 hours and 4 minutes. Charging the grip alone or the camera with the grip takes approximately 2 hours and 45 minutes.

4.2 Inserting a MicroSD Card

Locate the microSD card slot on the camera unit. Insert the provided 64GB microSD card with the contacts facing down until it clicks into place. Ensure the camera is powered off before inserting or removing the card.

4.3 Assembling the Camera and Grip

The camera unit can be used independently or attached to the handheld controller. To attach, align the camera unit with the connector on the controller and slide it into place until it securely locks. To detach, press the release button (if present) and slide the camera unit off.

4.4 Attaching Accessories

The SJCAM C400 comes with a variety of mounts. Attach the desired mount (e.g., bike mount, helmet base, magnetic lanyard) to the camera unit or controller as needed for your activity. Ensure all connections are secure before use.

SNAP-ON PUNTI DI VISTA

Non ci sono più cavalli pesanti. Basta premere il pulsante per iniziare immediatamente la registrazione.



Image: A user demonstrating how to attach the SJCAM C400 camera unit to the magnetic lanyard for hands-free recording.

5. OPERATION

5.1 Powering On/Off

To power on the camera, rotate the touchscreen display on the handheld controller. To power off, rotate the screen back to its closed position or long-press the power button.

5.2 Using the Touchscreen

The 2.29-inch rotatable touchscreen allows for intuitive control. Swipe and tap to navigate menus, change settings, and switch between shooting modes. Rotating the screen also allows instant switching between horizontal (16:9) and vertical (9:16) shooting orientations.

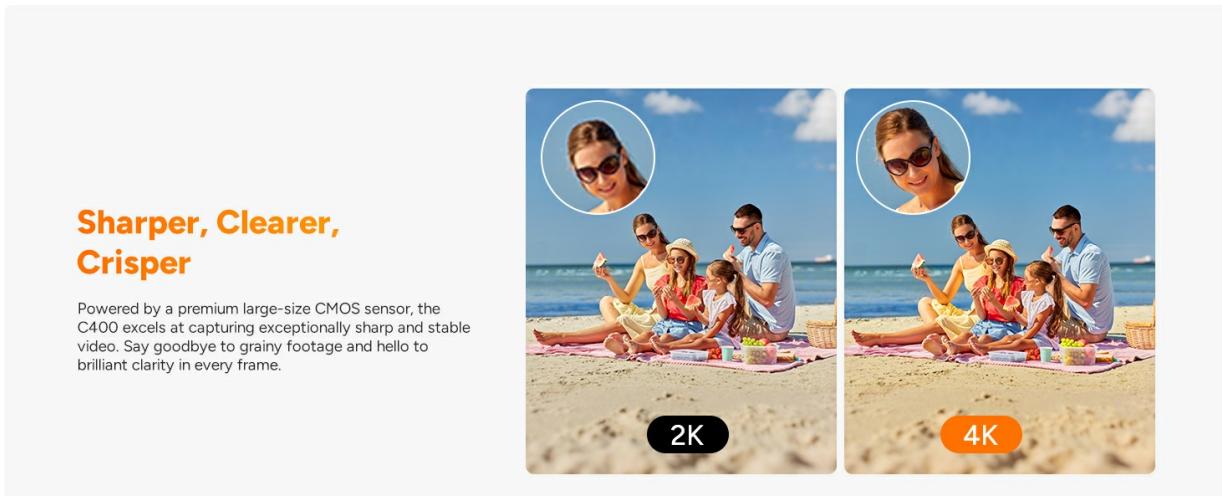


Image: The SJCAM C400's advanced rotating screen, demonstrating how it can be adjusted for both 16:9 horizontal and 9:16 vertical video capture.

5.3 Shooting Modes

The C400 offers various shooting modes:

- **Video:** Record high-definition video up to 4K resolution at 30fps.
- **Photo:** Capture still images up to 16MP.
- **Timelapse:** Create time-lapse videos.
- **Slow Motion:** Record slow-motion footage.
- **Dashcam:** Function as a car dashboard camera.
- **Live Streaming:** Share your adventures in real-time via Wi-Fi.

5.4 Stabilization

The camera features 6-axis electronic image stabilization (EIS) and horizon correction to ensure smooth and stable footage, even during dynamic activities. This technology compensates for vibrations and movements, resulting in clear and level videos.

5.5 Waterproof Usage

When enclosed in the included waterproof housing, the SJCAM C400 is submersible up to 30 meters (98 feet). This allows for capturing underwater activities such as snorkeling, diving, and watersports. Ensure the housing is properly sealed before entering water.

Large Screen Operation

Featuring a massive 2.29-inch display and an intuitive UI, the C400 action camera puts buttery-smooth operation right at your fingertips.



Image: The SJCAM C400 camera, protected by its waterproof housing, being used underwater to capture marine life.

5.6 Connecting to the App (Wireless Control)

The camera supports Dual-Band Wi-Fi (2.4G/5G) for fast data transfer and Bluetooth for remote control. Download the official SJCAM app to your smartphone to control the camera remotely, view live footage, and transfer files.

CONTROLLER PORTATILE WIRELESS

Con la connessione Bluetooth, il controller portatile ti dà il controllo di tutto.



Image: A child using the SJCAM C400 handheld controller wirelessly to capture footage, demonstrating the camera's remote control capabilities.

5.7 Battery Life Management

The C400 offers extended battery life. The camera alone can record up to 172 minutes in 4K/30fps. When combined with the battery grip, the total autonomy extends to approximately 437 minutes (over 7 hours), allowing for prolonged recording sessions.

ENERGIA PER TUTTA LA TUA GIORNATA.

Il C400 offre fino a 7 ore di riprese 4K.



Image: The SJCAM C400 camera and controller setup, highlighting its impressive 7-hour battery life for extended recording.

6. MAINTENANCE

6.1 Cleaning

- Use the provided cleaning cloth to gently wipe the lens and screens.
- For stubborn smudges, use a lens cleaning solution specifically designed for camera optics.
- Ensure the camera and accessories are dry before storage.

6.2 Storage

Store the camera and its accessories in a cool, dry place, away from direct sunlight and extreme

temperatures. Use the provided semi-rigid pouch for protection during transport and storage.

VIAGGIO PORTATILE, PROTEZIONE ECCELLENTE

L'interno è dotato di un rivestimento di lana super morbido, spessa e ad alta densità, che offre una protezione tampone a 360 gradi.



Image: The SJCAM C400's protective carrying case, designed for safe and convenient transport of the camera and its accessories.

6.3 Firmware Updates

Periodically check the official SJCAM website or app for available firmware updates. Keeping your camera's firmware up-to-date ensures optimal performance and access to new features.

7. TROUBLESHOOTING

- **Camera not powering on:** Ensure the battery is charged. Check if the screen is rotated correctly to

activate.

- **Video footage is shaky:** Verify that 6-axis stabilization (EIS) is enabled in the camera settings.
- **MicroSD card error:** Ensure the card is inserted correctly. Try formatting the card in the camera (this will erase all data). Use a high-speed, reputable brand microSD card.
- **Connectivity issues (Wi-Fi/Bluetooth):** Ensure the camera and your smartphone are within range. Restart both devices. Check app permissions on your smartphone.
- **Screen unresponsive:** Try restarting the camera. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	SJCAM
Model Number	C400
Sensor Technology	CMOS (1/2.8")
Lens	154° Wide-angle glass lens
Video Capture Resolution	4K (30fps), 2K (60fps/30fps), 1080P (120fps/60fps/30fps), 720P (120fps/60fps/30fps)
Photo Resolution	16MP, 12MP, 8MP, 5MP, 2MP
Stabilization	6-Axis EIS (Electronic Image Stabilization)
Touchscreen Size	2.29 inches (Rotatable)
Waterproof Depth	Up to 30 meters (with included housing)
Connectivity	Dual-Band Wi-Fi (2.4G/5G), Bluetooth, USB-C
Battery Life (4K/30fps)	Camera only: ~172 minutes; Camera + Grip: ~437 minutes
Dimensions	18 x 17.3 x 7.4 cm (packaged)
Weight	430 grams (packaged)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official SJCAM website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Related Documents - C400

 <p><small>C400 Pocket Series Action Camera User Manual Manual do Câmera Deportiva de Série C400 Pocket Handbuch für die Actionkameraserie C400 Pocket</small></p>	<p>SJCAM C400 Pocket Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C400 Pocket Series action camera, covering setup, operation, settings, and troubleshooting. Includes safety guidelines and warranty information.</p>
 <p><small>SJ4K USER MANUAL SJCAM SJ4K</small></p>	<p>SJCAM SJ4K Action Camera User Manual</p> <p>User manual for the SJCAM SJ4K action camera, covering setup, operation, features, and accessories. Learn how to install batteries and memory cards, charge the device, navigate modes, and connect via Wi-Fi.</p>
 <p><small>Action Camera C100 SERIES SJCAM SJCAM Please read this manual carefully and store it for future reference</small></p>	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, covering operating instructions, functional operations, camera accessories, status indicators, model comparison, and Wi-Fi connectivity.</p>
 <p><small>Action Camera C100 SERIES SJCAM SJCAM Please read this manual carefully before use and keep it in a safe place</small></p>	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, detailing operating instructions, features, accessories, and specifications. Learn how to use your SJCAM C100 for various activities.</p>
 <p><small>SJ4000 AIR SERIES SJCAM SJCAM Please read this manual carefully and store it for future reference</small></p>	<p>SJ4000 AIR SERIES User Manual</p> <p>User manual for the SJ4000 AIR SERIES action camera, covering safety guidelines, specifications, button functions, and operating instructions for video and photo modes, as well as Wi-Fi connectivity.</p>
 <p><small>SJCAM C110 Action Camera User Manual Manual do Câmera de Ação SJCAM C110 Handbuch für die Actionkamera SJCAM C110 SJCAM C110 Action Camera Benutzerhandbuch C110 SJCAM SJCAM</small></p>	<p>SJCAM C110 Action Camera User Manual</p> <p>Explore the SJCAM C110 Action Camera with this comprehensive user manual. Learn about product features, specifications, setup, operation, and safety guidelines for capturing your adventures.</p>