



Manuals.plus /

› Zopsc /

› Zopsc Automatic Card Shuffler Dealer 2-in-1 User Manual

Zopsc Zopscb2qmc8vy4d-11

Zopsc Automatic Card Shuffler Dealer 2-in-1 User Manual

Model: Zopscb2qmc8vy4d-11

1. INTRODUCTION

Thank you for choosing the Zopsc Automatic Card Shuffler Dealer 2-in-1. This device is designed to efficiently shuffle up to two decks of cards, providing a smooth and quiet gaming experience. Its portable and rechargeable design makes it ideal for various card games and travel.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Automatic Card Shuffler
- 1 x USB Cable (Type-C)
- 1 x User Manual



Image: The Zopsc Automatic Card Shuffler with its included USB cable.

3. SETUP

3.1 Charging the Device

The card shuffler is equipped with a built-in 2000mAh Li-battery. Before first use, or when the battery is low, charge the device using the provided Type-C USB cable.

1. Connect the Type-C end of the USB cable to the charging port on the shuffler.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
3. Allow the device to charge fully. An indicator light (if present) will typically change color or turn off when charging is complete.

Built in rechargeable battery and Type C charging port for fast charging



Image: The Type-C charging port on the Zopsc Automatic Card Shuffler.



Image: Detailed view of the control panel and charging interface.

4. OPERATING INSTRUCTIONS

4.1 Shuffling Cards

The Zopsc Automatic Card Shuffler is designed for easy, one-click operation to mix your card decks.

1. Ensure the device is charged.
2. Place up to two decks of cards into the designated card input slots on the shuffler. The expandable wing plate accommodates various card sizes.
3. Press the 'AT' (Automatic) button once to initiate the shuffling process.
4. The device will automatically shuffle the cards with low noise.
5. Once shuffling is complete, retrieve the mixed cards from the output tray.

This shuffler is suitable for a wide range of card games, including Poker, Texas Hold'em, Blackjack, and more.

**Automatic shuffling,
just press once to mix the cards.**



Image: The card shuffler in operation, demonstrating automatic shuffling with a single button press.



Image: The card shuffler positioned on a green gaming mat with cards ready for shuffling.

Low noise and built to last



Image: The shuffler designed for low noise operation and durability.

5. MAINTENANCE

5.1 Cleaning

- Ensure the device is powered off and disconnected from any power source before cleaning.
- Wipe the exterior of the shuffler with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface.
- Keep the card input and output slots free from dust and debris to ensure smooth operation.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use for extended periods.
- Store the device in a cool, dry place away from extreme temperatures.

6. TROUBLESHOOTING

6.1 Device Not Shuffling

- **Check Battery:** Ensure the device is sufficiently charged. Connect it to a power source and try again.
- **Card Placement:** Verify that cards are correctly placed in the input slots and are not jammed.
- **Obstructions:** Inspect the card path for any foreign objects or debris that might be blocking the mechanism.
- **Card Condition:** Ensure cards are not bent, torn, or excessively worn, as this can affect shuffling.

6.2 Device Not Charging

- **Cable Connection:** Ensure the USB cable is securely connected to both the shuffler and the power source.
- **Power Source:** Try a different USB power adapter or a different USB port on your computer.
- **USB Cable:** Test with a different Type-C USB cable to rule out a faulty cable.

6.3 Unusual Noise During Operation

- **Card Jam:** Stop the device immediately and check for any card jams or misaligned cards.
- **Debris:** Inspect the internal mechanism for any small debris that might be causing friction.

7. SPECIFICATIONS

Item Type	Automatic Card Shuffler
Material	ABS
Built-in Battery	Li Battery 2000mAh
Interface	Type-C
Model Name	Zopscb2qmc8vy4d-11
Color	Black
Item Package Dimensions L x W x H	7.48 x 5.51 x 3.54 inches
Package Weight	489 Grams

8. WARRANTY INFORMATION

This Zopsc Automatic Card Shuffler Dealer 2-in-1 comes with a manufacturer warranty for 90 days from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper maintenance.

9. SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Zopsc customer support. Refer to the contact information provided with your purchase or visit the official Zopsc website for support options.

