

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Karlsson](#) /

› [Karlsson Tweet ABS Wall Clock User Manual](#)

Karlsson Tweet

Karlsson Tweet ABS Wall Clock User Manual

Model: Tweet (B0FRGG8XLG)

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Karlsson Tweet ABS Wall Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT OVERVIEW

The Karlsson Tweet ABS Wall Clock is a decorative and functional timepiece designed for indoor use. It features a unique design with a bird motif and is constructed from durable ABS material.



KARLSSON

Figure 1: Front view of the Karlsson Tweet ABS Wall Clock. This image displays the clock's black ABS casing, gold-colored hour and minute hands, and the small white bird detail. A decorative gold bird pendulum hangs below the main clock face.

Key Features:

- Durable ABS (Acrylonitrile Butadiene Styrene) construction.
- Unique bird-themed design.
- Battery-operated (3x AA batteries, not included).
- Dimensions: 20 cm (Length) x 8.5 cm (Depth) x 42 cm (Height).

SAFETY INFORMATION

- This product is intended for indoor, private/personal use only.
- Keep out of reach of children and pets.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Ensure batteries are inserted with correct polarity. Do not mix old and new batteries or different types of batteries.
- Remove batteries if the clock will not be used for an extended period.

SETUP

1. Unpacking:

Carefully remove the clock from its packaging. Inspect for any damage. Retain packaging for future transport or storage.

2. Battery Installation:

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 3 AA batteries (not included) according to the polarity indicators (+/-) inside the compartment.
4. Close the battery compartment cover securely.



KARLSSON

Figure 2: Rear view of the clock, illustrating the battery compartment and the internal clock mechanism. This shows where to insert the AA batteries.

3. Setting the Time:

Once batteries are installed, use the small adjustment wheel on the clock mechanism (located within the battery compartment area) to set the correct time. Rotate the wheel clockwise until the hands display the desired time.

4. Mounting the Clock:

The clock is designed for wall mounting. Use a suitable screw or hook (not included) in your desired location. Ensure the mounting point is strong enough to support the clock's weight (approximately 0.59 kg / 590 grams). Hang the clock using the integrated hanging slot on the back.



Figure 3: The Karlsson Tweet ABS Wall Clock displayed in a home environment, mounted on a wall. This image provides a visual reference for how the clock appears when installed.

OPERATING INSTRUCTIONS

The Karlsson Tweet ABS Wall Clock operates continuously once batteries are installed and the time is set.

It does not have additional operational modes or settings beyond time adjustment.

Timekeeping:

The clock will display the time using its hour and minute hands. This model features a decorative bird design; any cuckoo or sound functionality would be specified in the product description. This manual focuses on basic timekeeping operation.

MAINTENANCE

Cleaning:

Wipe the clock surface with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the ABS material and finish.

Battery Replacement:

Replace batteries when the clock hands stop moving or the timekeeping becomes inaccurate. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly.	Dead or low batteries; incorrectly inserted batteries.	Replace all 3 AA batteries with new ones, ensuring correct polarity.
Time is inaccurate.	Low batteries; time not set correctly.	Replace batteries. Re-set the time using the adjustment wheel.
Cuckoo mechanism (if applicable) not working.	Low batteries; mechanism obstruction.	Replace batteries. Ensure no debris is obstructing the bird's movement.

SPECIFICATIONS

- **Model:** Tweet
- **Brand:** Karlsson
- **Material:** ABS (Acrylonitrile Butadiene Styrene)
- **Color:** Black
- **Dimensions (L x D x H):** 20 cm x 8.5 cm x 42 cm
- **Weight:** Approximately 0.59 kg (590 grams)
- **Power Source:** 3 x AA batteries (not included)
- **Intended Use:** Private/personal use only

Note: Some product specifications may list weight as 990 grams. The 0.59 kg (590 grams) is derived from the product description.

WARRANTY AND SUPPORT

This product comes with a 2-year product warranty. For warranty claims or technical support, please contact your retailer or the official Karlsson customer service. Keep your proof of purchase for warranty validation.

For more information about Karlsson products, visit the official brand store:[Karlsson Brand Store](#).