

[manuals.plus](#) /

- › [Karlsson](#) /
- › [Karlsson Cuckoo Tweet Wall Clock \(KA6069WH\) Instruction Manual](#)

Karlsson KA6069WH

Karlsson Cuckoo Tweet Wall Clock (KA6069WH) Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Karlsson Cuckoo Tweet Wall Clock, model KA6069WH. Please read this manual thoroughly before using the product to ensure correct functionality and longevity.

2. PRODUCT OVERVIEW

The Karlsson Cuckoo Tweet Wall Clock, designed by Callum MacSorley, features a distinctive design with a glossy finish and refined details. This clock includes a pendulum and a decorative bird accent that appears at set intervals. Its rounded forms and golden elements contribute to an elegant aesthetic. The clock is constructed from ABS plastic and utilizes a step movement mechanism.



Figure 2.1: Front view of the Karlsson Cuckoo Tweet Wall Clock, showcasing its white finish, gold hands, and the cuckoo bird opening.



Figure 2.2: Detail view of the clock face and pendulum, highlighting the gold accents and the Karlsson branding.

3. SETUP

3.1 Unpacking

1. Carefully remove the clock from its packaging.

2. Inspect the clock for any signs of damage. If damaged, contact your retailer.
3. Retain packaging for future transport or storage.

3.2 Battery Installation

The clock requires 3 AA batteries (not included).

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 3.1: Rear view of the clock, illustrating the battery compartment and internal mechanism.

3.3 Setting the Time

1. After installing batteries, the clock hands will begin to move.
2. Locate the time setting knob on the back of the clock (usually a small wheel or dial).
3. Gently turn the knob to adjust the minute and hour hands to the correct time. Do not force the hands directly.

3.4 Mounting the Clock

1. Choose a suitable location on a wall, ensuring it is sturdy enough to support the clock's weight (approximately 760g).
2. Use a wall hook or screw appropriate for your wall type.
3. Hang the clock securely using the hanging slot located on the back of the clock.

4. OPERATING INSTRUCTIONS

The Karlsson Cuckoo Tweet Wall Clock features an hourly cuckoo chime function. The decorative bird will emerge and chime at the top of each hour.

- The cuckoo mechanism is synchronized with the clock's time setting.
- Ensure the clock is set to the correct time for accurate chiming.
- There are no user-adjustable settings for the cuckoo volume or frequency; it operates automatically on the hour.

5. MAINTENANCE

5.1 Cleaning

- To clean the clock, use a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.
- Avoid getting moisture into the clock mechanism.

5.2 Battery Replacement

Replace batteries annually or when the clock's performance diminishes (e.g., slow movement, weak cuckoo chime). Refer to Section 3.2 for battery installation instructions.

6. TROUBLESHOOTING

• Clock not working:

- Check if batteries are inserted correctly with the right polarity.
- Replace with new batteries.

• Cuckoo not chiming or chiming incorrectly:

- Ensure the clock's time is set accurately.
- Replace batteries, as low power can affect the cuckoo mechanism.

• Inaccurate timekeeping:

- Replace batteries with fresh ones.

- Ensure the clock is not exposed to extreme temperatures or strong magnetic fields.

If problems persist after attempting these solutions, please contact Karlsson customer support.

7. SPECIFICATIONS

- **Model:** KA6069WH
- **Brand:** Karlsson
- **Material:** ABS Plastic
- **Color:** White
- **Dimensions (H x W x D):** 42 cm x 8.5 cm x 3.81 cm (approx. 16.5 in x 3.3 in x 1.5 in)
- **Weight:** 760 g (approx. 1.68 lbs)
- **Power Source:** 3 x AA batteries (not included)
- **Movement Type:** Step Movement
- **Designer:** Callum MacSorley

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the point of purchase or visit the official Karlsson website. Keep your proof of purchase for any warranty claims.