

- [Manuals.plus](#) /
- › [ZJSWTH](#) /
 - › ZJSWTH Replacement Remote Control User Manual for Compatible TV Models

ZJSWTH Universal Replacement Remote Control

ZJSWTH Replacement Remote Control User Manual

For Compatible TV Models: LT32352AB, LT32359FAGB, LT22356DB, LT32350ABH, LT32353AB, L22875HDT, TC1909TN875, TC2209TN87

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ZJSWTH replacement remote control. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.



Figure 1: Front view of the ZJSWTH replacement remote control, displaying all buttons and their labels.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Close-up view of the remote control's battery compartment, showing the correct orientation for AAA battery insertion.

2.2 Initial Use

This remote control is designed as a direct replacement for the listed models and typically requires no programming. Once batteries are installed, point the remote control towards your television and begin operation.

3. OPERATING INSTRUCTIONS

The ZJSWTH replacement remote control features standard buttons for common television functions. Refer to the diagram in Figure 1 for button layout.

- **Power (Red Button):** Turns the television on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (P/CH +/-):** Changes the television channel.
- **Mute:** Silences the television audio.
- **Source/Input (AV, SOURCE):** Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV).
- **Menu:** Accesses the television's main menu.
- **Navigation Buttons (Arrows, OK/SELECT):** Used to navigate through menus and confirm selections.
- **Exit:** Exits the current menu or on-screen display.
- **Info:** Displays information about the current program or input.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons may have specific functions depending on your television model or the current on-screen menu. Refer to your television's manual for details.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote control is not working:**
 - Ensure batteries are inserted correctly with the proper polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the television's infrared sensor.
 - Ensure you are within the effective range and line of sight of the television.
- **Some buttons are not responding:**
 - This remote is a replacement and may not support all advanced functions of every original remote. Verify if the

function is supported by your specific TV model's original remote.

- Clean the remote control as described in the Maintenance section to ensure no debris is interfering with button contacts.

6. SPECIFICATIONS

Feature	Detail
Brand	ZJSWTH
Compatible Models	LT32352AB, LT32359FAGB, LT22356DB, LT32350ABH, LT32353AB, L22875HDT, TC1909TN875, TC2209TN87
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)

7. WARRANTY AND SUPPORT

For any questions regarding the operation or compatibility of your ZJSWTH replacement remote control, please contact the manufacturer or your point of purchase. Please note that specific warranty terms may vary by retailer.

© 2025 ZJSWTH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FRL2SSSL>

More documents and user manuals: <https://manuals.plus/>