

[Manuals.plus](#) /

› [COZPAW](#) /

› COZPAW 78 Inch Double Dog Crate Furniture: User Manual

COZPAW 78 Inch Double Dog Crate Furniture

COZPAW 78 Inch Double Dog Crate Furniture: User Manual

Model: 78 Inch Double Dog Crate Furniture

1. INTRODUCTION

Thank you for choosing the COZPAW 78 Inch Double Dog Crate Furniture. This versatile pet enclosure is designed to provide a secure and comfortable space for your dogs while seamlessly integrating into your home as a functional piece of furniture. This manual provides detailed instructions for assembly, operation, care, and safety to ensure optimal use and longevity of your product.



Image: The COZPAW 78 Inch Double Dog Crate Furniture, showcasing its dual functionality as a pet enclosure and a stylish furniture piece, with two dogs comfortably inside.

2. PRODUCT FEATURES

- **Multi-Functional Design:** This dog kennel serves as a safe haven for your pets and doubles as a TV stand, side table, or coffee table, offering a spacious top surface for decor or pet supplies.
- **Adjustable Double Compartment:** Features a removable divider, allowing you to easily switch between two separate compartments for multiple dogs or one large open space for a single large breed.
- **Durable Construction:** Built with heavy-duty metal and premium wood, featuring a chew-resistant design and a quality metal coating for enhanced safety and longevity.
- **Secure Sliding Doors:** Equipped with smooth-gliding barn doors and secure latches to ensure your pets remain safely enclosed.
- **Enhanced Mesh Panels:** Dense mesh panels prevent biting and paw entrapment, providing a safer alternative to

traditional crates.

- **Easy to Clean:** The design includes features that facilitate simple cleaning and maintenance.



Image: The removable divider allows for flexible use, creating either two separate compartments or one large space.

Modern Furniture-Style Dog House

Display Stand



TV Stand



Plant Stand

Image: Demonstrating the multi-functional use of the dog crate as a display stand, TV stand, or plant stand.

3. PARTS LIST

Before beginning assembly, please ensure all parts are present and undamaged. Refer to the assembly video for visual identification of each component.

Hardware:

- Dowel Pins (KX) x 2
- Cam Locks (LX) x 12
- Cam Screws (MX) x 8
- Screws (BX) x 6
- Screws (AX) x 6
- Screws (CX) x 4
- Door Rollers (FX) x 4

- Screws (EX) x 6
- Screws (DX) x 4
- Hinges (GX) x 4
- Hinge Pins (HX) x 4
- Hinge Screws (JX) x 4
- Hinge Pins (IX) x 4

Wooden Panels:

- Bottom Panels (18, 19) x 2
- Top Panels (20, 21) x 2
- Side Panels (22) x 2
- Back Support Panels (23, 24) x 2
- Top Support Bars (25, 26) x 2

Metal Components:

- Divider Frame (4) x 1
- Divider Gate (5) x 1
- Side Mesh Panels (1, 2, 3, 6) x 4
- Sliding Doors (7, 8) x 2
- Back Mesh Panels (9, 10) x 2
- Top Rails (11, 12) x 2
- Bottom Rails (13, 14) x 2
- Support Brackets (15) x 2
- Top Brackets (16, 17) x 2

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your COZPAW Double Dog Crate Furniture. It is recommended to have two people for assembly.

Your browser does not support the video tag.

Video: Detailed assembly guide for the COZPAW Double Dog Crate Furniture.

1. **Prepare the Base:** Join the two bottom panels (18 and 19) using the provided dowel pins (KX) and cam locks (LX).
2. **Attach Back Supports:** Secure the back support panels (23 and 24) to the assembled bottom panel using cam screws (MX).
3. **Install Bottom Rails:** Attach the bottom rails (13 and 14) to the bottom panel.
4. **Assemble Divider Frame:** Connect the divider frame (4) to the bottom panel using screws (AX).
5. **Attach Side Panels:** Secure the side mesh panels (1 and 2) to the bottom panel and back supports using screws (CX).
6. **Install Back Mesh Panels:** Attach the back mesh panels (9 and 10) to the structure.
7. **Place Top Panels:** Position the top panels (20 and 21) onto the assembled structure.
8. **Secure Top Panels:** Fasten the top panels using screws (EX) and attach the top support bars (25 and 26) with screws (DX).

9. **Install Top Rails:** Attach the top rails (11 and 12) to the top panels.
10. **Assemble Sliding Doors:** Attach the hinges (GX) and hinge pins (HX, IX) to the sliding doors (7 and 8). Mount the door rollers (FX) to the bottom of the doors.
11. **Install Doors:** Carefully slide the assembled doors onto the top and bottom rails.
12. **Final Touches:** Ensure all screws are tightened and the structure is stable.



Image: A close-up view of the smooth-gliding sliding doors, highlighting their modern design and functionality.

5. OPERATING INSTRUCTIONS

5.1 Using the Sliding Doors

The COZPAW dog crate features smooth-gliding barn doors for easy access. To open, simply slide the door along its track. To close, slide it back into position and engage the secure latch at the bottom to prevent your pet from opening it.

5.2 Adjusting the Divider


The internal divider can be removed to create a single, larger space or kept in place to separate two pets. To remove the divider, locate the four bolts (two at the top, two at the bottom) securing it. Unscrew these bolts to detach and remove the divider. Reinstall by aligning the divider and securing the bolts.

Your browser does not support the video tag.

Video: Demonstrating the operation of the sliding doors and the removable divider.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe down wooden surfaces with a damp cloth and mild cleaner. For metal mesh, use a soft brush or cloth to remove debris. Avoid harsh chemicals that may damage the finish.
- **Regular Inspection:** Periodically check all screws and connections to ensure they are tight. Tighten any loose fasteners to maintain stability and safety.
- **Wood Care:** To preserve the wood finish, avoid prolonged exposure to moisture and direct sunlight.
- **Metal Care:** The metal components are chew-resistant and coated for durability. If any coating is scratched, touch up with pet-safe paint to prevent rust.

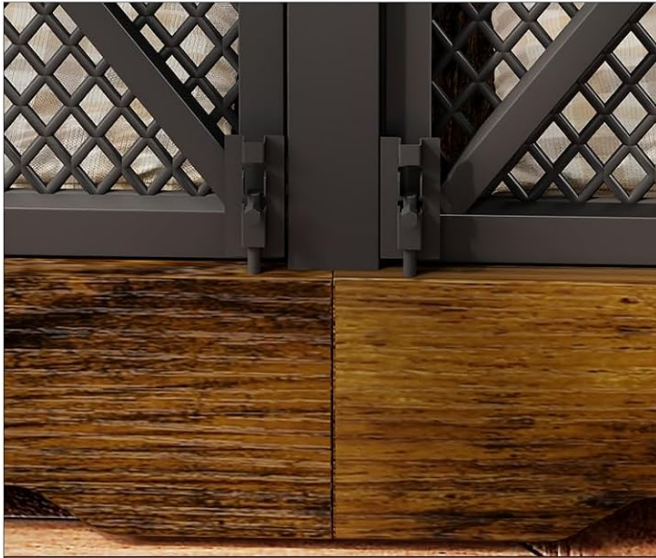

Secure Latch



Enhanced Mesh Weld



Minimalist Base Design



Easy-to-Clean

Image: Close-up details of the secure latch, enhanced mesh weld, minimalist base, and easy-to-clean surface.

7. TROUBLESHOOTING

- **Doors not sliding smoothly:** Check the tracks for any obstructions or debris. Ensure the rollers are properly aligned and free from damage. A small amount of silicone lubricant can be applied to the tracks if needed.
- **Divider not fitting correctly:** Verify that the divider is oriented correctly and that all four bolts are aligned with their respective holes before tightening.
- **Crate feels unstable:** Re-check all assembly connections and tighten any loose screws. Ensure the crate is placed on a flat, level surface.

8. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Brand	COZPAW
Product Dimensions	78"L x 23.8"W x 31.8"H
Material	Engineered Wood, Alloy Steel
Specific Uses	Indoor
Special Feature	Adjustable (Removable Divider)
Single Room Internal Dimensions	37.5"W x 22"D x 26.7"H
Max Capacity of Tabletop	300 LBS
Max Capacity of Bottom	300 LBS

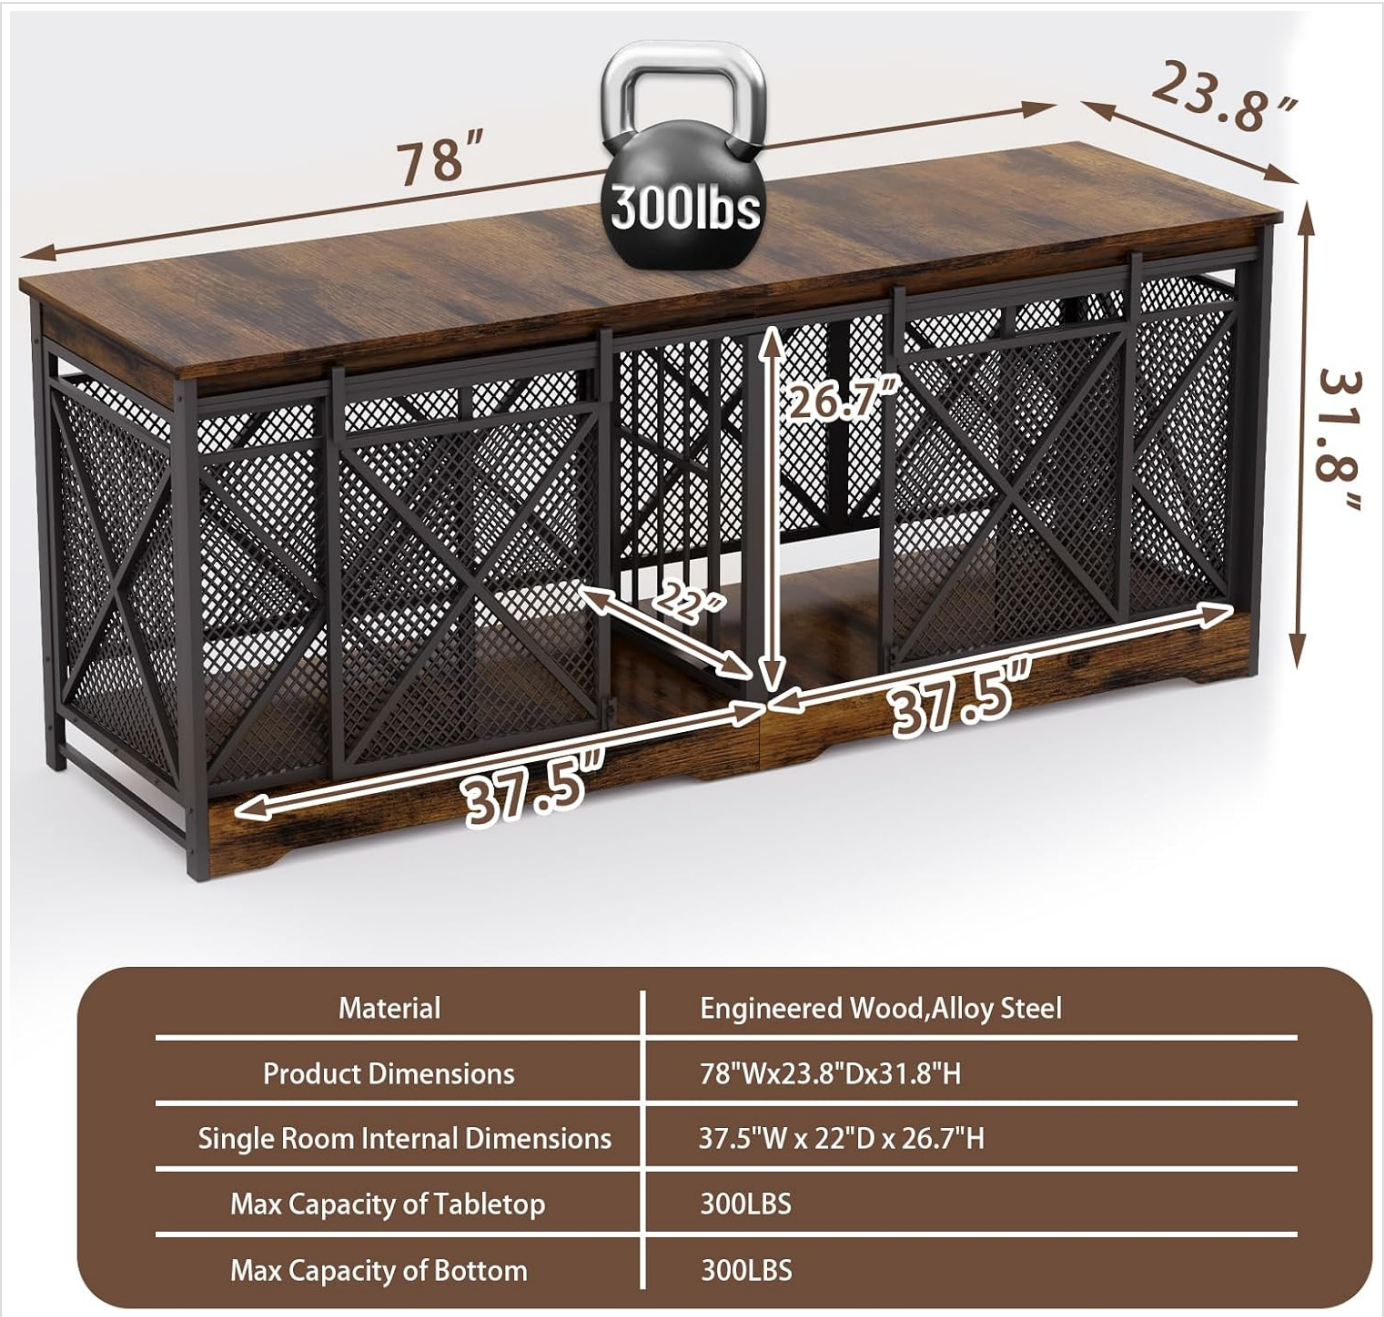


Image: Detailed dimensions and material specifications of the dog crate furniture.

9. SAFETY GUIDELINES

- Always ensure the crate is assembled correctly and all fasteners are tight before placing pets inside.
- Do not exceed the maximum weight capacity for the tabletop (300 lbs) or the bottom (300 lbs).
- Regularly inspect the crate for any signs of wear or damage. Discontinue use if any part is broken or compromised.
- Ensure your pet's collar or tags cannot get caught on any part of the crate.
- Place the crate on a stable, level surface to prevent tipping.
- This product is designed for indoor use only.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official COZPAW website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question