

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [YASHE](#) /

> [YASHE 2.3L Compact Air Fryer Instruction Manual](#)

YASHE LQ-2001

YASHE 2.3L Compact Air Fryer Instruction Manual

Model: LQ-2001

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual thoroughly before using the appliance and save it for future reference. Improper use may result in damage to the appliance or personal injury.

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the main unit, cord, or plug in water or any other liquid to prevent electric shock.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not block the air inlet or outlet vents during operation.
- The basket and crisper plate become hot during use. Always use oven mitts when handling hot components.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.

2. PRODUCT OVERVIEW

The YASHE 2.3L Compact Air Fryer is designed for healthy cooking, utilizing 3D rapid air circulation to cook food with significantly less oil. Its compact size makes it ideal for small kitchens or individuals.



Image: The YASHE 2.3L Compact Air Fryer, showcasing its sleek black design and front-pull basket.

Key Features:

- **3D 720° Rapid Air Circulation:** Ensures even cooking and crispy results with up to 85% less oil.
- **Simple Knob Controls:** Intuitive dual knobs for precise temperature and timer settings.
- **Compact 2.3L Design:** Space-saving footprint, perfect for 1-2 people.
- **Durable & Food-Safe Materials:** Constructed with high-quality 304 stainless steel and non-stick coating.
- **Easy to Clean:** Removable, non-stick basket and crisper plate are dishwasher safe.
- **Automatic Shut-off:** For enhanced safety and convenience.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your YASHE Air Fryer:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Control Panel:** Features temperature and timer knobs, and cooking guides.
- **Frying Basket:** The main container for food.
- **Crisper Plate:** Sits inside the frying basket to allow air circulation around food and drain excess fat.
- **Handle:** For safely pulling out and inserting the frying basket.



Image: A visual representation of the YASHE 2.3L Air Fryer's compact dimensions (25.5cm H x 19cm W x 19cm D) and its basket capacity, illustrating typical food portions it can accommodate.

4. BEFORE FIRST USE

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow proper air circulation.
4. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell may be present, which is normal and will dissipate.

5. OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place your ingredients into the frying basket, ensuring not to overfill. For best results, do not fill the basket more than two-thirds full.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Set Temperature:** Turn the temperature control knob to your desired cooking temperature (80°C - 200°C / 180°F - 400°F).
4. **Set Timer:** Turn the timer knob to your desired cooking time (0-30 minutes). The appliance will automatically turn on.
5. **Cooking Process:** The air fryer will begin cooking. The indicator light will illuminate.
6. **Shaking (Optional):** For some foods, shaking the basket halfway through the cooking time helps ensure even browning. Pull out the basket, shake it, and then slide it back in. The air fryer will resume cooking automatically thanks to the built-in smart switch.
7. **Completion:** When the timer reaches zero, you will hear a bell sound, and the appliance will automatically shut off. Carefully pull out the basket and transfer the cooked food to a plate.

Controllo Preciso con Doppie Manopole Regolazione Facile di Tempo e Temperatura



Image: The control panel of the YASHE Air Fryer, featuring dual manual knobs for precise temperature and timer adjustments, along with visual cooking guides for various food types.

Cooking Guide:

The top panel of your air fryer includes 6 useful cooking guides for quick reference. Below is a general guide for common foods:

Food Item	Temperature	Time
Vegetables	180°C / 350°F	10-15 min
French Fries	180°C / 350°F	15-20 min
Seafood	160°C / 320°F	15-20 min
Chicken Wings	180°C / 350°F	20-25 min
Steak	200°C / 400°F	12-15 min
Potatoes	200°C / 400°F	20-25 min

Note: Cooking times and temperatures are approximate and may vary based on food quantity, size, and desired crispness. Always ensure food is cooked thoroughly to safe internal temperatures.



Image: The built-in smart switch feature, which automatically pauses cooking when the basket is removed and resumes when reinserted, allowing for easy food checking or shaking.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
- Basket and Crisper Plate:** The frying basket and crisper plate are made with a non-stick coating and are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. Avoid using metal utensils or abrasive cleaning materials.
- Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent.
- Exterior:** Clean the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

Pulizia Facile E Veloce

Lavabile In Lavastoviglie



Piatti Crisper
Rimovibili



Cestelli
Antiaderenti
Rimovibili



Image: The removable non-stick crisper plate and basket are shown being easily washed under running water and placed in a dishwasher for convenient cleaning.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded wall outlet. Check if the timer is set.
- **Food is not cooked evenly:** Do not overfill the basket. Shake the basket halfway through cooking. Ensure the crisper plate is correctly inserted.
- **Food is not crispy:** Ensure the temperature is set correctly. Some foods may require a light coating of oil for optimal crispness.
- **White smoke comes from the appliance:** This is usually caused by fat residue from previous use. Clean the basket and crisper plate thoroughly after each use.
- **Appliance emits unusual odors:** During initial uses, a slight odor may occur, which is normal. If strong, persistent odors occur, unplug and contact support.

For issues not covered here, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model	LQ-2001
Brand	YASHE
Capacity	2.3 Liters
Wattage	1000 Watts
Voltage	230 Volts
Material	Acrylonitrile Butadiene Styrene (ABS)
Dimensions (L x W x H)	28 x 28 x 30.3 cm
Weight	3 Kilograms
Special Features	Temperature Control, Stain Resistant, Automatic Shut-off, Timer

9. WARRANTY AND SUPPORT

YASHE stands by the quality and durability of its products. Your YASHE Air Fryer comes with an extended **1-year warranty** from the date of purchase. This warranty is applied automatically; no product registration is required.

In case of any quality issues or if you require assistance, please contact our customer support team. We are committed to providing 100% satisfactory after-sales service.

- **Customer Support:** [Insert Customer Support Contact Information Here, e.g., email, phone number, website]