

[Manuals.plus](#) /

> [Origem](#) /

> [Origem Ski Helmet Speakers \(MDN05297\) - True Wireless Stereo Headphones User Manual](#)

Origem MDN05297

Origem Ski Helmet Speakers (MDN05297)

True Wireless Stereo Headphones User Manual

INTRODUCTION

Thank you for choosing the Origem Ski Helmet Speakers. These true wireless stereo headphones are designed to provide high-quality audio and convenient control while wearing a ski or snowboard helmet. Featuring HDR audio technology, Bluetooth 6.0 connectivity, and a glove-friendly button system, these speakers enhance your outdoor experience. Please read this manual carefully to ensure proper use and maintenance of your device.

WHAT'S IN THE BOX

- Origem Ski Helmet Speakers (Left and Right)
- Portable Charging Case
- Type-C Charging Cable
- User Manual

PRODUCT OVERVIEW

The Origem Ski Helmet Speakers are compact and designed to fit into most audio-ready ski or snowboard helmets. Each speaker features a single multi-function button for easy control.

TRUE WIRELESS STEREO & BLUETOOTH 6.0 (32 Feet Wireless Range)



"Helmets are not included"*

Thickness 17.2mm
(0.7inch)

Diameter
52.5mm
(2.1inch)

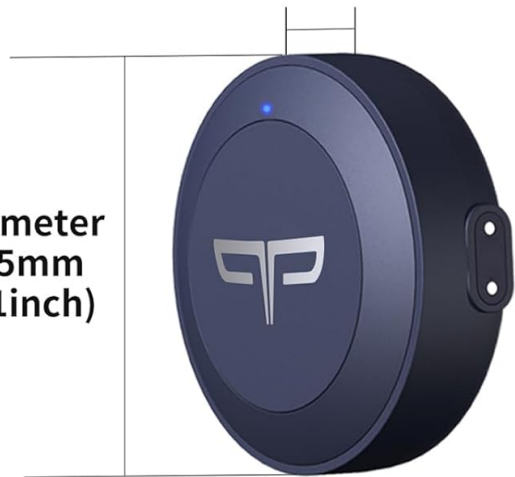


Image: Origem Ski Helmet Speakers showing dimensions (Diameter 52.5mm / 2.1inch, Thickness 17.2mm / 0.7inch).

HDR AUDIO &

40MM DRIVERS WITH BIG BASS

Optimises for the nature audio while brings you accurate sound



Image: Close-up of Origem Ski Helmet Speakers highlighting HDR Audio and 40mm drivers.

SETUP

1. Power On

To power on the headphones, press and hold the multi-function button on either speaker for approximately 2 seconds until you hear a power-on prompt or see the indicator light illuminate.

2. Pairing

After powering on, the speakers will automatically enter pairing mode. On your smartphone or Bluetooth-enabled device, navigate to the Bluetooth settings. Locate and select "SnowTune" from the list of available devices to establish a connection. Once paired, the speakers will indicate a successful connection.

3. Helmet Installation

The Origem Ski Helmet Speakers are designed to fit into the ear pockets of most audio-ready ski or snowboard helmets. Identify the left (L) and right (R) speakers. Carefully slide each speaker into the corresponding ear pocket of your helmet. Ensure they are securely seated for optimal sound and comfort.

TRUE WIRELESS STEREO & BLUETOOTH 6.0 (32 Feet Wireless Range)



"Helmets are not included"*

Thickness 17.2mm
(0.7inch)

Diameter
52.5mm
(2.1inch)

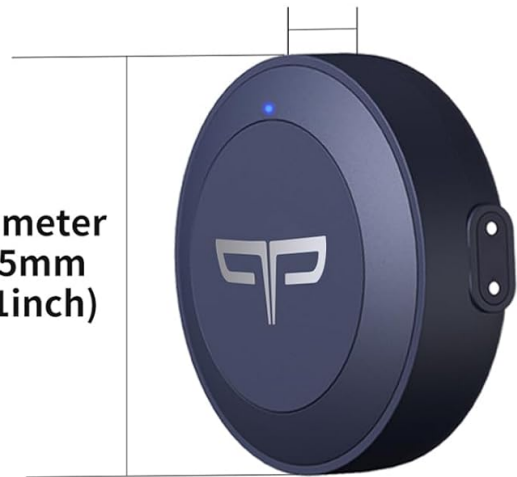


Image: Demonstrates placing the left (L) and right (R) speakers into the helmet's ear pads.

OPERATING INSTRUCTIONS

The speakers feature a glove-friendly button system for easy control without removing your helmet.

ONE BUTTON CONTROL

Control every feature without ever removing your device from your helmet.



Image: Icons representing various functions controlled by the single button: Music, Phone, Siri, Google Assistant, Volume.

BUTTON FUNCTION



1. Play music	Press the L/R earbud button once or operate the player on your phone.
2. Pause music	Press the L/R earbud button once during playback.
3. Previous track	Press and hold the L earbud button for 2 seconds.
4. Next track	Press and hold the R earbud button for 2 seconds.
5. Volume down	Double-click the L earbud button.
6. Volume up	Double-click the R earbud button.
7. Answer call	Press the L/R earbud button once when receiving a call.
8. Reject call	Press and hold the L/R earbud button for 2 seconds during an incoming call.
9. End call	Press the L/R earbud button once during a call.
10. Voice assistant (requires phone support)	Triple-click the L/R earbud to hear a "do" prompt tone, activating the voice assistant.

Image: Detailed table of button functions for music, calls, and voice assistant.

1. Music Playback

- **Play/Pause:** Press the L/R earbud button once.
- **Previous Track:** Press and hold the L earbud button for 2 seconds.
- **Next Track:** Press and hold the R earbud button for 2 seconds.
- **Volume Down:** Double-click the L earbud button.
- **Volume Up:** Double-click the R earbud button.

2. Call Management

- **Answer/End Call:** Press the L/R earbud button once when receiving or during a call.
- **Reject Call:** Press and hold the L/R earbud button for 2 seconds during an incoming call.

3. Voice Assistant

- **Activate Voice Assistant:** Triple-click the L/R earbud button to hear a "do" prompt tone, activating your phone's voice assistant (e.g., Siri, Google Assistant).

4. Power Off

To power off the headphones, press and hold the L or R button for 5 seconds until you hear a power-off prompt or

the indicator light turns off.

CHARGING

The Origem Ski Helmet Speakers come with a portable charging case that provides extended battery life.

- **Speaker Battery Life:** Up to 10 hours of listening time or 9 hours of talk time on a single charge.
- **Charging Case:** The charging case holds multiple charges, providing over 40 hours of total listening time.
- **Quick Charge:** Place the speakers back into the charging case for 15 minutes to get up to 3 hours of listening time or 2 hours of talk time.
- **Charging the Case:** Use the provided Type-C charging cable to charge the case.



Image: The charging case with speakers inside, indicating 1.5 hours to full charge and up to 40 hours total battery life.

MAINTENANCE

To ensure the longevity and optimal performance of your Origem Ski Helmet Speakers, follow these maintenance guidelines:

- **Cleaning:** Wipe the speakers and charging case with a soft, dry cloth. Avoid using abrasive cleaners or

solvents.

- **Water Resistance:** The speakers are IPX4 water-resistant, providing protection against splashing water. **Do NOT submerge the product in water or rinse it under running water.**
- **Storage:** Store the speakers and charging case in a cool, dry place when not in use.
- **Temperature:** The speakers are designed to work effectively in temperatures as low as -20°C.

TROUBLESHOOTING

If you encounter any issues with your Origem Ski Helmet Speakers, refer to the following common solutions:

- **No Power:** Ensure the speakers are charged. Place them in the charging case and connect the case to a power source.
- **Cannot Pair:** Make sure Bluetooth is enabled on your device and the speakers are in pairing mode. If "SnowTune" does not appear, try turning the speakers off and on again.
- **No Sound:** Check the volume levels on both your connected device and the speakers. Ensure the speakers are properly installed in your helmet.
- **Intermittent Connection:** Ensure your device is within the Bluetooth range (up to 10 meters) and there are no significant obstructions.
- **Controls Not Responding:** Ensure the speakers are powered on and connected. Try restarting the speakers and your connected device.

For further assistance, please refer to the official Origem support channels.

SPECIFICATIONS

Model Name	MDN05297
Material	Plastic
Speaker Type	Outdoor
Special Features	Built-In Voice Assistant, Lightweight, Rechargeable Battery, Sweatproof, True Wireless Bluetooth
Bluetooth Version	6.0
Bluetooth Range	10 Meters (32 Feet)
Audio Driver Size	40 Millimeters
Impedance	80 Ohms
Item Weight	35 Grams (1.23 ounces)
Speaker Dimensions	Diameter 52.5mm (2.1inch), Thickness 17.2mm (0.7inch)
Water Resistance Level	IPX4 (Water Resistant)
Working Temperature	Above -20°C
Battery Type	Lithium Polymer (included)
Charging Case Battery	1000mAh

Connectivity Technology	Wireless
------------------------------------	----------

SAFETY INFORMATION

- Do not attempt to disassemble or modify the product.
- Keep the product away from extreme temperatures, direct sunlight, and open flames.
- Avoid exposing the product to excessive moisture beyond its IPX4 rating.
- Do not use the product at excessively high volumes for prolonged periods to prevent hearing damage.
- Always be aware of your surroundings when using the speakers, especially during outdoor activities.

WARRANTY AND SUPPORT

The Origem Ski Helmet Speakers come with a limited warranty. Please refer to the warranty card included in your package or visit the official Origem website for detailed warranty terms and conditions.

For technical support, product inquiries, or warranty claims, please contact Origem customer service through the contact information provided on the official website or your purchase platform.

INSTRUCTIONAL VIDEO

Watch this video for a visual guide on unboxing, powering on, pairing, helmet installation, and controlling your Origem Ski Helmet Speakers.



Video: An instructional guide demonstrating the unboxing, power on, pairing, helmet installation, and control functions of the Origem Ski Helmet Speakers.