

Manuals.plus /

› Braun /

› Braun Charge Stand User Manual for Trimmer Types 5803, 5804, 5808

Braun Charge Stand

Braun Charge Stand User Manual

For Trimmer Types 5803, 5804, 5808

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Braun Charge Stand. This accessory is designed to provide a convenient charging solution for specific Braun trimmer models. Please read this manual thoroughly before first use and keep it for future reference.

Important: This charge stand requires your existing Braun power cord for operation. The power cord is not included with this product.

2. SAFETY INFORMATION

- Always use the charge stand with the original Braun power cord supplied with your trimmer. Using an incompatible power cord may damage the stand or trimmer.
- Do not immerse the charge stand in water or any other liquid.
- Keep the charge stand away from heat sources and direct sunlight.
- Ensure the charge stand is placed on a stable, dry surface during use.
- This product is intended for household use only.
- If the charge stand appears damaged, discontinue use immediately and contact customer support.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Braun Charge Stand (for Trimmer types 5803, 5804, 5808)

Note: The power cord for charging is not included and must be used from your existing Braun trimmer kit.

4. SETUP

1. **Identify Your Trimmer Type:** Before using the charge stand, ensure your Braun trimmer is one of the compatible types (5803, 5804, 5808). You can usually find the type number printed on the trimmer body.
2. **Connect Power Cord:** Insert your existing Braun power cord into the designated port on the back or bottom of the charge stand.
3. **Plug into Outlet:** Plug the other end of the power cord into a suitable electrical outlet.

For assistance in identifying your trimmer type, please watch the following video:

Your browser does not support the video tag.

Video Description: This video demonstrates how to locate and identify the type number on your Braun trimmer, ensuring compatibility with accessories like this charge stand. The video shows a hand manipulating a Braun trimmer, pointing out where the model number is typically located.

5. OPERATING INSTRUCTIONS

1. **Place Trimmer on Stand:** Gently place your compatible Braun trimmer onto the charge stand. Ensure it is seated correctly and makes proper contact with the charging pins.
2. **Charging Indication:** Your trimmer's charging indicator light (if equipped) should illuminate, indicating that it is charging. Refer to your trimmer's specific user manual for details on its charging indicators.
3. **Full Charge:** Once fully charged, the trimmer's indicator light will typically change or turn off. You can then remove the trimmer from the stand.

The charge stand provides a stable and convenient location for charging and storing your trimmer.

6. MAINTENANCE AND CLEANING

- **Cleaning:** Disconnect the charge stand from the power outlet before cleaning. Wipe the stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the charge stand in a dry place when not in use.
- **Avoid Damage:** Do not drop the charge stand or subject it to heavy impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer not charging on stand.	Power cord not properly connected. Power outlet not active. Trimmer not correctly seated on stand. Trimmer type is incompatible. Damaged power cord or stand.	Ensure power cord is securely plugged into both the stand and the wall outlet. Test the outlet with another device. Adjust the trimmer's position on the stand until it makes proper contact. Verify your trimmer's type number (5803, 5804, or 5808). Inspect the power cord and stand for visible damage. If damaged, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Braun customer support.

8. SPECIFICATIONS

- **Product Name:** Braun Charge Stand
- **Compatible Trimmer Types:** 5803, 5804, 5808
- **Manufacturer:** Braun
- **Item Weight:** 4 ounces
- **ASIN:** B0FRNBBZXB
- **Power Source:** Requires existing Braun power cord (not included)

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please visit the official Braun website or refer to the warranty card included with your original Braun trimmer. You can also contact Braun customer service directly for assistance with this charge stand.

Online Support: www.braun.com