

vietRM#070942506

# User Manual: Generic Replacement Remote Control

For Denon AV Receiver Models: AVR-1516, AVR-4806, AVR-3801

## 1. INTRODUCTION

This manual provides instructions for the Generic replacement remote control, designed for use with specific Denon AV Receiver models. This remote is a functional replacement and may not offer all features or functions present on your original Denon remote control. Please read this manual thoroughly before use to ensure proper operation.

*Note: This is a replacement remote control and is not a genuine Denon product. Some minor cosmetic scratches may be present due to bulk item storage.*

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Generic Replacement Remote Control

*Batteries are not included and must be purchased separately.*

## 3. SETUP

### 3.1 Battery Installation

To power your remote control, you will need to install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image 1: Back view of the remote control, illustrating the battery compartment location.

### 3.2 Initial Use

This replacement remote control is pre-programmed for the specified Denon AV Receiver models. No additional programming is typically required. Once batteries are installed, point the remote control towards your Denon AV Receiver and begin operation.

## 4. OPERATING INSTRUCTIONS

---

The remote control features standard buttons for common AV receiver functions. While the layout may differ from your original remote, the primary functions (e.g., Power, Volume, Input Selection, Mute) are typically present and operate similarly.

- **Power Button:** Turns the AV receiver on or off.
- **Volume Up/Down:** Adjusts the audio output level.
- **Mute Button:** Silences the audio output.
- **Input Selection Buttons:** Switches between different audio/video input sources (e.g., DVD, CD, TV).
- **Navigation Buttons:** Used for menu navigation (if supported by the receiver and remote).

**Important:** As a replacement remote, it may not work with all advanced functions or specific menu navigation features of your original Denon AV Receiver. Functionality may vary depending on the specific receiver model.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

### 5.2 Battery Replacement

If the remote control becomes unresponsive or its range decreases, the batteries may need to be replaced. Follow the battery installation steps in Section 3.1 to replace old batteries with new AAA batteries. Always dispose of used batteries responsibly according to local regulations.

## 6. TROUBLESHOOTING

---

- **Remote not working:**
  - Ensure batteries are installed correctly with the correct polarity.

- Replace old batteries with new ones.
- Check for any obstructions between the remote control and the AV receiver's infrared sensor.
- Ensure you are within the effective range of the remote control.

- **Some functions do not work:**

- This replacement remote may not support all functions of your original Denon remote. Refer to the "Operating Instructions" section.
- Verify that your AV receiver model is listed as compatible (AVR-1516, AVR-4806, AVR-3801).

## 7. SPECIFICATIONS

<b>Model Number</b>	vietRM#070942506
<b>Brand</b>	Generic
<b>Compatible Devices</b>	Denon AV Receiver (AVR-1516, AVR-4806, AVR-3801)
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Special Feature</b>	Ergonomic design
<b>Color</b>	Black/White
<b>Max Number of Supported Devices</b>	1

## 8. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary. Please refer to the seller or your purchase documentation for information regarding warranty coverage and return policies.

For technical support or inquiries, please contact the seller directly through the platform where the product was purchased.