

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Viktor Washing Machine Cabinet Instruction Manual

Vicco 57506

Vicco Viktor Washing Machine Cabinet Instruction Manual

Model: 57506 | Brand: Vicco

INTRODUCTION

The Vicco Viktor washing machine cabinet is designed to provide practical storage solutions and enhance the aesthetic of your bathroom. This elegant furniture piece helps organize your space efficiently while complementing your home decor.

This manual contains important information regarding the assembly, use, and maintenance of your new cabinet. Please read it thoroughly before proceeding with assembly or use.



Image: The Vicco Viktor washing machine cabinet, shown in a modern bathroom with a washing machine, a plant, and a towel rack.

SAFETY INFORMATION

Important! Retain these instructions for future reference. Read carefully!

RISK OF TIPPING! Unanchored furniture can tip over. To prevent this furniture from tipping, it must be anchored to the wall. Appropriate fastening accessories suitable for your home's walls should be used. If you have any questions, please consult your local specialized dealer. Please follow each step of the instructions carefully.

SETUP AND ASSEMBLY

Your Vicco Viktor washing machine cabinet requires assembly. All necessary assembly instructions and mounting materials are included in the package. Follow the provided assembly instructions step-by-step for correct installation.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components and hardware listed in the assembly instructions are present.

2. **Identify Parts:** Refer to the assembly diagram to identify each part.
3. **Assemble Frame:** Begin by assembling the main frame of the cabinet according to the diagrams. Ensure all connections are secure.
4. **Install Shelves and Doors:** Attach the shelves and doors as indicated in the instructions. Adjust hinges for proper door alignment if necessary.
5. **Position Cabinet:** Place the cabinet over your washing machine, ensuring adequate clearance for operation and ventilation.
6. **Anchor to Wall:** For safety, it is crucial to anchor the cabinet to a sturdy wall using appropriate fasteners (not included, as wall types vary). This prevents accidental tipping.

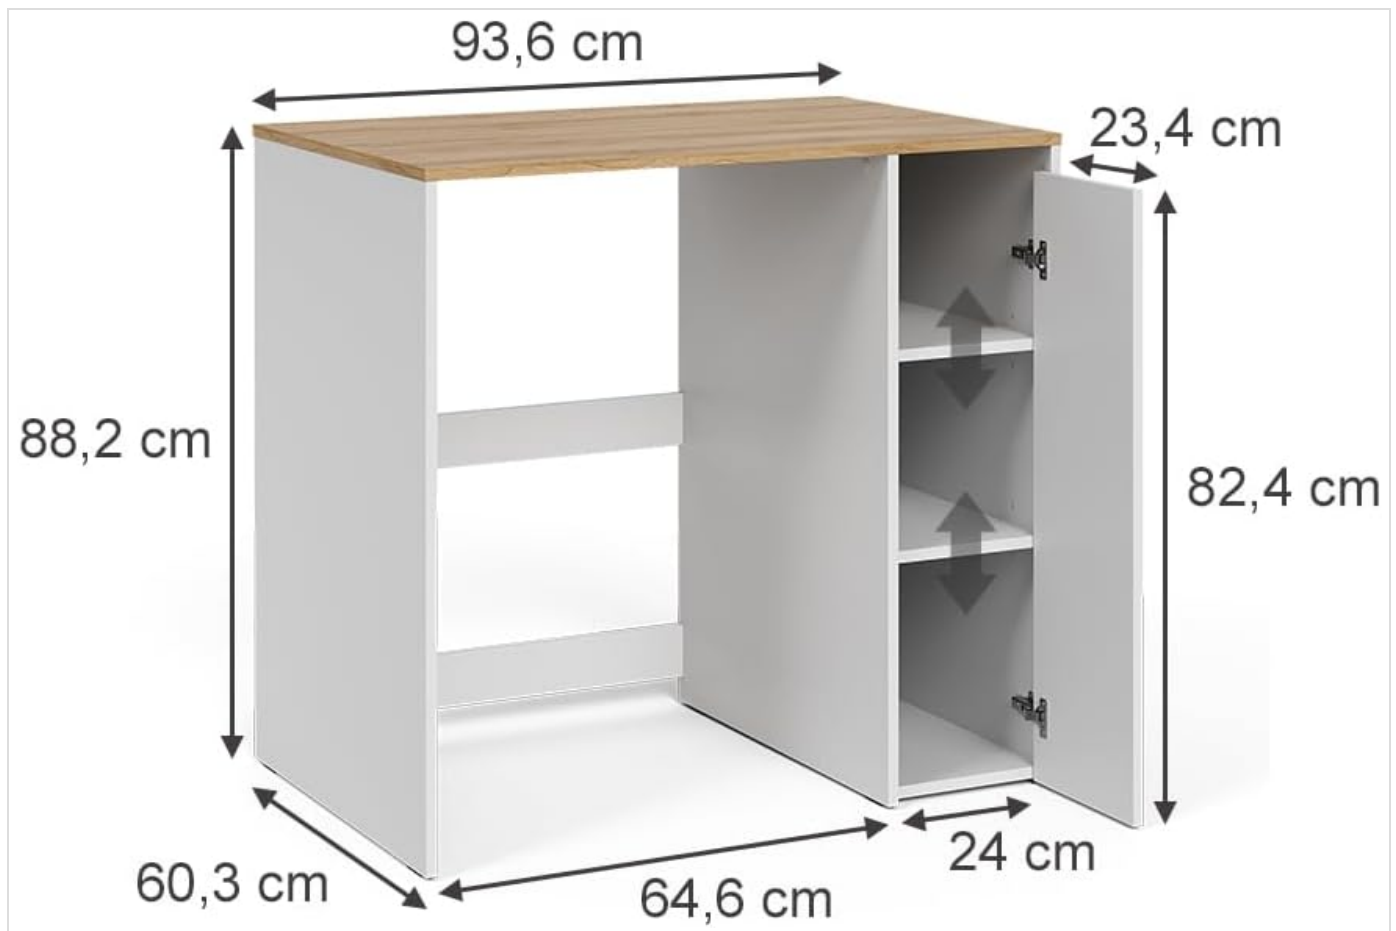


Image: A technical diagram illustrating the dimensions of the cabinet, including width (93.6 cm), height (88.2 cm), and depth (60.3 cm), along with internal compartment measurements.



Image: The Vicco Viktor washing machine cabinet shown as part of a complete laundry room storage system, demonstrating its integration with other furniture pieces.

OPERATING INSTRUCTIONS

The Vicco Viktor washing machine cabinet is designed to provide organized storage around your washing machine. It does not interfere with the operation of the washing machine itself.

- **Storage:** Utilize the shelves and compartments to store laundry detergents, fabric softeners, cleaning supplies, and other bathroom essentials.
- **Access:** Ensure the cabinet doors open and close freely without obstructing the washing machine's door or controls.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 15 kg per shelf to prevent damage or instability.



Image: An interior view of the cabinet's storage section, featuring adjustable shelves and showing how items like laundry baskets can be stored.

MAINTENANCE

To ensure the longevity and appearance of your Vicco Viktor washing machine cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the melamine finish.
- **Spills:** Promptly clean any spills to prevent staining or moisture damage to the particle board.
- **Hardware:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

TROUBLESHOOTING

Here are some common issues and their solutions:

- **Cabinet is wobbly:**
 - Ensure all assembly screws are tightened.
 - Verify the cabinet is placed on a level surface.
 - Confirm the cabinet is securely anchored to the wall as per safety instructions.
- **Doors do not close properly:**
 - Check if hinges are correctly installed and adjusted.
 - Ensure no items inside the cabinet are obstructing the door's closure.
- **Missing parts during assembly:**
 - Double-check all packaging materials.
 - Contact customer support with your model number and a description of the missing part.

SPECIFICATIONS

Product Specifications for Vicco Viktor Washing Machine Cabinet

Feature	Detail
Brand	Vicco
Model Name	Viktor
Model Number	57506
Color	White/Artisan Oak
Material	16 mm Particle Board with Melamine Finish
Product Dimensions (W x D x H)	93.6 cm x 60.3 cm x 88.2 cm
Item Weight	34.45 kg
Maximum Weight Capacity (per shelf)	15 kg
Number of Shelves	2
Number of Doors	1
Number of Compartments	3
Assembly Required	Yes
Mounting Type	Floor-standing (Wall anchoring recommended)
Recommended Use	Bathroom Utensils, Laundry Supplies

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.

For further assistance, you may also visit the official Vicco store on Amazon:[Vicco Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question