

## Bryzova SLJ01W

# Bryzova 21V 2-in-1 Cordless Hedge Trimmer User Manual

Model: SLJ01W

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective operation, maintenance, and care of your Bryzova 21V 2-in-1 Cordless Hedge Trimmer. Please read all instructions carefully before use and retain this manual for future reference.

## 2. SAFETY PRECAUTIONS

---

**To minimize risks of equipment failure, electric shock, injury, fire, fatalities, and property damage, observe the following precautions.**

### 2.1 Charging Cable Safety

- If the charging cable is damaged or overheated, discontinue use immediately to prevent burns, electric shock, or fire due to short circuit.
- Do not damage, modify, forcefully bend, pull, twist, place heavy objects on, or squeeze the charging cable during use. These actions may cause electric shock or fire.
- Do not plug in or unplug the charging cable with wet hands to avoid electric shock.
- A damaged charging cable must be replaced with a certified equivalent to avoid potential hazards.

### 2.2 General Operating Safety

- Always wear appropriate safety equipment, including protective glasses and gloves.
- Keep hands and feet away from the blades at all times.
- Do not operate the trimmer in wet conditions or on unstable surfaces.

- Be mindful of your surroundings and ensure no people or pets are in the immediate work area.

## 2.3 Storage Conditions

- Store the product in a cool, dry place. Avoid areas with high humidity.
- Ensure all components are clean and dry before storage.

## 3. PRODUCT COMPONENTS

The Bryzova 21V 2-in-1 Cordless Hedge Trimmer includes the following items:

- 1x Bryzova 21V Cordless Hedge Trimmer
- 1x Long Blade (8.7 inches)
- 1x Short Blade (5.2 inches)
- 2x 21V 2000mAh Lithium-Ion Battery
- 1x Battery Charger



Image: The Bryzova 21V 2-in-1 Cordless Hedge Trimmer, showcasing the main unit, both the long and short blades, and the battery.

## 4. SETUP

### 4.1 Battery Charging & Care

Fully charge both included 2.0Ah batteries using the provided charger before first use. For best performance and battery longevity, store and charge batteries in a cool, dry place away from direct sunlight. Use only the manufacturer-supplied charger.



Image: A 21V 2000mAh Lithium-Ion battery, highlighting its power and protection features.

### 4.2 Blade Installation & Selection

Ensure the power is off (battery removed) before handling blades. The 8.7-inch blade is designed for cutting larger hedges and broad, flat surfaces, while the 5.2-inch blade offers superior maneuverability for detailed shaping and pruning in tight spaces. Always ensure blades are securely locked in place before operation.

## Quick and Safe Change Blade



**1** Press and hold the blade release button.



**2** Remove the old blade from the unit.



**3** Align the new blade with the mounting slot.



**4** Press firmly on the base of the blade until you hear a soft "click," indicating the blade is securely locked in place.

Image: A visual guide demonstrating the four steps for quick and safe blade changes: press release button, remove old blade, align new blade, and press firmly until it clicks.

## 5. OPERATION

### 5.1 Starting the Trimmer

To start the trimmer, engage the safety lock-off button, then squeeze the trigger. Release the trigger to stop the trimmer.

## Engage the Lock, Squeeze with Confidence



**Starting: Engage the safety lock-off button, then squeeze the trigger.**

Image: A hand demonstrating how to engage the safety lock-off button and squeeze the trigger to start the trimmer.

### 5.2 Optimal Operation Technique

For a clean cut and healthy plants, operate the trimmer so that the blades are moving parallel to the surface of the hedge. Use a smooth, sweeping motion. Avoid forcing the blades through dense branches beyond its capacity. The lightweight, single-handed design is ideal for precise control at various angles.

### 5.3 Rotating Handle

The innovative rotating handle allows for 180 degrees of adjustment, providing the optimal angle for comfortable trimming of vertical hedges and horizontal tops. Press the 'P8' button to rotate the handle.

# Ergonomics in Motion



The innovative rotating handle allows for 180° of adjustment, giving you the optimal angle for comfortable trimming of vertical hedges and horizontal tops.

Image: Illustrations showing the trimmer's handle rotating from 0 to 180 degrees, indicating its ergonomic flexibility.

## 5.4 Using the Short Blade (5.2 inches)

The dedicated short blade delivers precise control for cleaning up edges, tight corners, and creating intricate lawn designs.

# Detail Matters, Detail Mastered



The dedicated short blade on the Bryzova trimmer delivers unmatched control for cleaning up edges, tight corners, and creating intricate lawn designs.

Image: The Bryzova trimmer with the short blade attachment, demonstrating its use for precise grass trimming and edging.

## 5.5 Using the Long Blade (8.7 inches)

The long blade attachment makes quick work of overgrown hedges, bushes, trees, and ornamental shrubs.

# Conquer Your Entire Landscape, Effortlessly



The long blade attachment makes quick work of overgrown hedges, bushes, trees, and ornamental shrubs with ease.

Image: The Bryzova trimmer with the long blade attachment, shown effectively trimming an overgrown hedge.

## 6. MAINTENANCE

---

### 6.1 Blade Cleaning and Oiling

Keep the blades clean and apply a light coat of oil after each use to prevent rust and ensure smooth operation.

### 6.2 General Inspection

Regularly inspect the trimmer for any signs of damage, loose parts, or wear before each use. Do not operate if damage is found.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Bryzova 21V 2-in-1 Cordless Hedge Trimmer, please refer to the following common solutions:

- **Trimmer does not start:** Ensure the battery is fully charged and properly inserted. Check that the safety lock-off button is engaged before squeezing the trigger.

- **Reduced cutting performance:** Blades may be dull or dirty. Clean and oil the blades. If performance does not improve, consider replacing the blades.
- **Excessive vibration:** Ensure blades are securely locked in place. Check for any debris caught in the blade mechanism.
- **Battery not charging:** Verify the charger is properly connected to a power source and the battery. Check the charging cable for damage.

For persistent issues, contact customer support.

## 8. SPECIFICATIONS



Image: Visual representation of key product specifications including rated power, bare tool weight, noise level, and max cutting diameter for both blades.

Feature	Specification
Brand	Bryzova
Model Number	SLJ01W
Power Source	Battery Powered

Feature	Specification
Voltage	21V
Battery Capacity	2000mAh (2x included)
Long Blade Length	8.7 Inches
Short Blade Length (Cutting Width)	5.2 Inches
Item Weight	4.9 Pounds
Product Dimensions (L x W x H)	14.6"L x 5.2"W x 5.1"H
Blade Material	Metal
Material Type	Plastic

## 9. WARRANTY AND SUPPORT

Your Bryzova 21V 2-in-1 Cordless Hedge Trimmer is covered by a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your product or contact Bryzova customer service through the retailer where the product was purchased. For further assistance, please visit the official Bryzova website or contact their customer support team.