

FEELNEEDY FN-W17S-JT-US01

FEELNEEDY FN-W17S Cat Fountain Pump Replacement Controller User Manual

Model: FN-W17S-JT-US01

1. INTRODUCTION

Thank you for choosing the FEELNEEDY FN-W17S Cat Fountain Pump Replacement Controller. This controller is designed to ensure the continuous and efficient operation of your compatible FEELNEEDY wireless and battery-operated cat water fountain. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.

1.1 Compatibility

This replacement controller is **ONLY compatible** with the FEELNEEDY Wireless & Battery Operated 3.5L/108oz Cat Water Fountain model FN-W17S.

2. SAFETY INFORMATION

- Ensure the controller is placed in a cool, dry area, away from direct heat sources and open flames.
- Do not immerse the controller in water. It is not waterproof.
- Keep out of reach of children and pets to prevent accidental damage or ingestion of small parts.
- Use only with the specified FEELNEEDY FN-W17S cat water fountain.
- If the controller appears damaged, do not use it. Contact customer support.

3. PACKAGE CONTENTS

- 1 x FEELNEEDY FN-W17S Cat Fountain Pump Replacement Controller

4. INSTALLATION AND SETUP

Follow these steps to install your replacement controller into the FEELNEEDY FN-W17S cat water fountain:

1. Ensure the cat water fountain is unplugged and empty of water.

2. Carefully remove the existing pump controller from the fountain, if applicable.
3. Insert the new FEELNEEDY FN-W17S Replacement Controller into the designated slot within the fountain. Ensure it is securely seated.
4. Once the controller is in place, you can proceed to fill the fountain with water and connect it to power.



Image: The replacement controller being inserted into the cat water fountain.

5. OPERATION


5.1 Powering On/Off

After installation, press the power button on the controller to turn on the fountain. The fountain will begin operating according to its programmed mode.

5.2 Auto Mode and Battery Life

The controller features a fully charged 4000mAh battery. In auto mode, this battery can operate the fountain for up to 45 days, providing consistent hydration for your pet without frequent recharging.

Wireless Controller for Cat Fountain

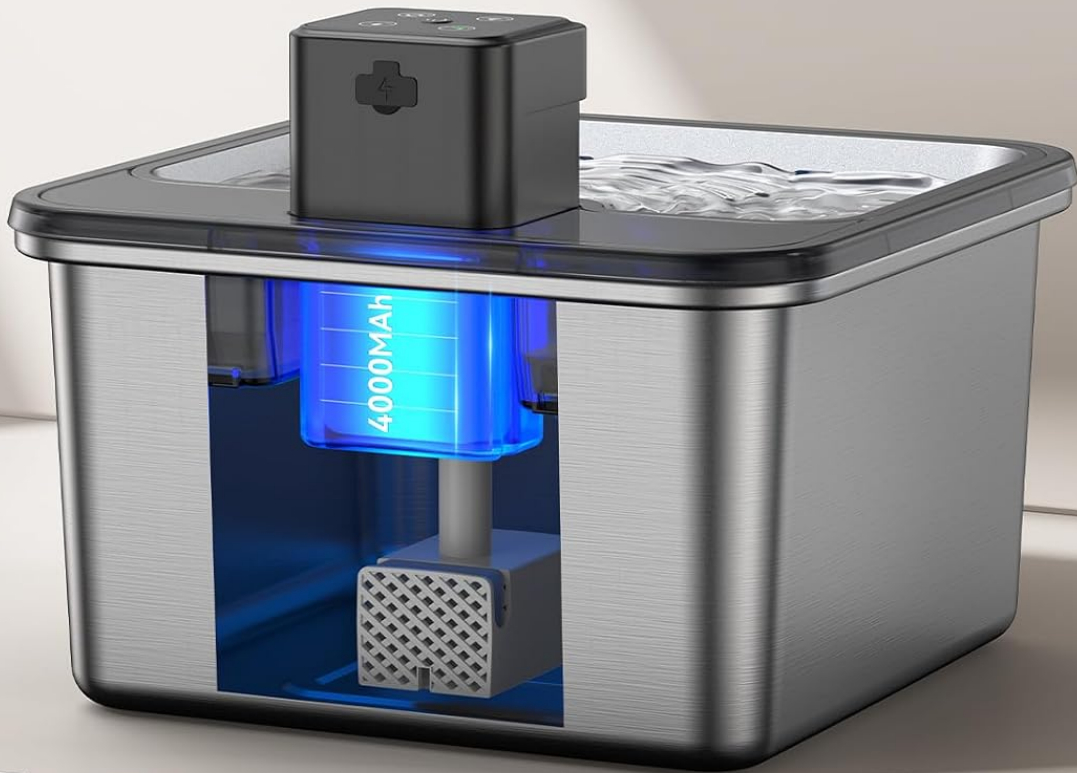

4000MAh

Image: The controller installed within the fountain, illustrating its internal battery.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your controller and fountain.

- **Cleaning:** Regularly clean the fountain components according to the main fountain's instruction manual. For the controller itself, wipe it with a dry or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Placement:** As noted in setup, keep the controller in a cool, dry environment.
- **Battery Care:** While the battery is long-lasting, avoid completely draining it frequently to prolong its overall lifespan. Recharge as needed.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not turning on.	Controller not properly inserted or battery depleted.	Ensure the controller is fully seated. Check if the fountain needs recharging.
Water flow is weak or inconsistent.	Low water level or obstruction in the fountain's pump mechanism (not the controller itself).	Refill the fountain to the appropriate level. Refer to the main fountain manual for pump cleaning instructions.
Controller feels warm.	Normal operation or placed in a hot environment.	A slight warmth during operation is normal. Ensure the controller is not exposed to excessive heat. If it becomes excessively hot, discontinue use and contact support.

If you encounter issues not listed here, or if the problem persists, please contact FEELNEEDY customer support.

8. SPECIFICATIONS

Model Number:	FN-W17S-JT-US01
Brand:	FEELNEEDY
Compatibility:	FEELNEEDY Wireless & Battery Operated 3.5L/108oz Cat Water Fountain (FN-W17S)
Battery:	4000mAh Nonstandard Battery (included)
Power Source:	Battery Powered
Manufacturer:	FEELNEEDY
Package Dimensions:	7.56 x 3.86 x 2.68 inches
Item Weight:	7.37 ounces

9. WARRANTY AND SUPPORT

FEELNEEDY products are designed for quality and reliability. For warranty information specific to your purchase, please refer to the documentation provided with your original cat fountain or contact FEELNEEDY customer support. For technical assistance, troubleshooting, or any product-related inquiries, please visit the official FEELNEEDY website or contact our customer support team. Contact details are typically found on the product packaging or the brand's official online presence.

Note: The warranty typically covers manufacturing defects and does not cover damage caused by misuse, neglect, or unauthorized modifications.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question