

KEMEI KM-1856

KEMEI KM-1856 Professional Cordless Hair Clipper User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your KEMEI KM-1856 Professional Cordless Hair Clipper. Please read all instructions carefully before operating the device and retain this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x KEMEI KM-1856 Hair Clipper
- 4 x Limiting Combs (1mm, 4.5mm, 6mm, 9mm)
- 1 x Lubricating Oil
- 1 x Cleaning Brush
- 1 x USB-C Charging Cable
- 1 x Hair Comb



Image 2.1: KEMEI KM-1856 hair clipper and all included accessories, including the clipper, four guide combs, lubricating oil, cleaning brush, USB-C charging cable, and a hair comb, displayed with its product packaging.

3. PRODUCT FEATURES

- **Adjustable Blade:** The professional blade can be adjusted to achieve various cutting lengths.
- **Powerful Motor:** Equipped with a reliable internal motor for smooth and consistent cutting performance, minimizing snagging.
- **Digital Display:** An integrated digital display shows the remaining battery percentage.
- **USB-C Charging:** Convenient USB-C charging interface for flexible recharging.
- **Long Battery Life:** 2000mAh battery capacity provides up to 150 minutes of working time on a 3-hour charge.
- **Durable Construction:** Designed for long-term durability and reduced overheating.



Image 3.1: A diagram highlighting key features of the KEMEI KM-1856 hair clipper, including its sharp blade, digital display, adjustable lever, ON/OFF switch, charging port, and four included limit combs.

Powerful motor

Powerful motors for easy trimming



Image 3.2: An internal view of the KEMEI KM-1856 hair clipper, illustrating its powerful motor designed for efficient and smooth trimming, accompanied by icons indicating 'Powerful Motor' and 'Less Noise'.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the clipper for approximately 3 hours. The digital display will indicate the charging status and battery level.

4.2 Attaching Guide Combs

1. Ensure the clipper is turned off.
2. Select the desired limiting comb (1mm, 4.5mm, 6mm, or 9mm).
3. Align the comb with the clipper blade and push it firmly until it clicks into place.

4.3 Removing Guide Combs

1. Ensure the clipper is turned off.

2. Gently pull the comb upwards from the blade to detach it.



Image 4.1: The KEMEI KM-1856 hair clipper displayed alongside its four limit combs (3mm, 4.5mm, 6mm, 9mm), illustrating the range of cutting lengths available.

Video 4.1: This video demonstrates the KEMEI KM-1856 hair clipper, showing how to attach and remove guide combs, clean the blade with the included brush, apply oil for maintenance, and connect the USB-C charging cable.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the ON/OFF button located on the clipper to turn the device on or off.

5.2 Adjusting Blade Length

The clipper features an adjustable lever on the side. Move the lever up or down to change the cutting length of the blade. This allows for precise tapering and blending.

Professional blade

The sculpting hair trimmer
easy to trim hair, beard, etc



Adjustable



Sharp
blade



Save
time



DLC knife
head



Image 5.1: A close-up view of the KEMEI KM-1856 hair clipper's professional blade, highlighting the adjustable lever and DLC knife head, which allows for precise control over cutting length.

5.3 Trimming Hair and Beard

1. Ensure hair is clean and dry.
2. Attach the desired guide comb for the initial length.
3. Turn on the clipper.
4. Hold the clipper with the blade flat against the hair and move it slowly against the direction of hair growth.
5. For detailing or closer cuts, remove the guide comb and use the adjustable blade lever.
6. Regularly clear cut hair from the blade during use to maintain performance.

6. MAINTENANCE

6.1 Cleaning the Blades

1. Turn off the clipper and disconnect it from the power source.

2. Use the provided cleaning brush to remove any loose hair from the blades and the clipper body.
3. For a more thorough cleaning, the blade assembly can be carefully detached (refer to Setup section for blade removal).

6.2 Oiling the Blades

After each use, or at least once a week, apply a few drops of the included lubricating oil to the blades. This ensures smooth operation and prolongs blade life.

1. Apply 1-2 drops of oil to the top and sides of the blades.
2. Turn on the clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

6.3 Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Ensure the clipper is clean and oiled before storage.

7. CHARGING

The KEMEI KM-1856 clipper is equipped with a 2000mAh Lithium Polymer battery and a USB-C charging port.

- **Charging Time:** Approximately 3 hours for a full charge.
- **Working Time:** Up to 150 minutes on a full charge.
- **Charging Indicator:** The digital display shows the battery percentage during charging and operation.
- **Charging Methods:** Can be charged via power banks, laptops, car chargers, or wall adapters using the provided USB-C cable.

USB charging & Digital display

Large battery for durability and easy charging, Digital display to see the percentage of remaining battery

3 Hours
Charging time
150 Minutes
Working time
2000 mAh
Battery capacity



AVAIL ABLE
TIME



Operation



Car charger



Mobile power



Computer



Plug



Charging
port

Image 7.1: The KEMEI KM-1856 hair clipper illustrating its USB charging port and digital display, which shows the remaining battery percentage. Icons depict various compatible charging sources such as a car charger, mobile power bank, computer, and wall plug.

8. TROUBLESHOOTING

If you encounter issues with your KEMEI KM-1856 clipper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Reduced cutting performance or snagging.	Blades are dull or clogged with hair.	Clean and oil the blades. If blades are dull, consider professional sharpening or replacement.

Problem	Possible Cause	Solution
Clipper gets hot during use.	Extended continuous use or lack of lubrication.	Allow the clipper to cool down. Ensure blades are properly oiled.
Charging indicator not working.	Faulty charging cable or adapter.	Try a different USB-C cable and power adapter.

9. SPECIFICATIONS

Feature	Detail
Model Name	KM-1856
Brand	KEMEI
Power Source	Battery Powered
Battery Type	Lithium Polymer (included)
Battery Capacity	2000mAh
Charging Time	3 Hours
Working Time	Up to 150 Minutes
Unit Count	1 Count
Package Dimensions	8 x 4 x 2.7 inches
Weight	1.3 Pounds
ASIN	B0FRRRKBSD

10. SAFETY INFORMATION

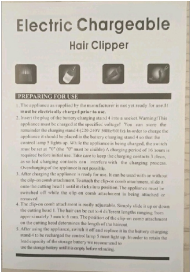



- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not immerse the clipper in water or any other liquid.
- Keep out of reach of children.
- Always turn off the clipper before cleaning or performing maintenance.
- Use only the provided charging cable and adapter.
- Do not disassemble the clipper or attempt to repair it yourself. Contact customer support for assistance.
- Avoid dropping the clipper, as this may damage the blades or internal components.

11. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, KEMEI, directly. Refer to the product packaging or the official KEMEI website for contact details.

© 2025 KEMEI. All rights reserved.

Related Documents - KM-1856

	<p>Kemei KM-418 Electric Rechargeable Hair Clipper User Manual</p> <p>Detailed user manual for the Kemei KM-418 rechargeable electric hair clipper, covering preparation, usage, maintenance, guarantee, and battery disposal instructions.</p>
	<p>Kemei KM-666 Professional Electric Hair Clipper User Manual</p> <p>User instructions and guide for the Kemei KM-666 Professional Electric Hair Clipper, detailing its features and operation for personal grooming and barber use.</p>
	<p>Kemei KM-2269 Hair Clipper: Manual and Safety Instructions</p> <p>Official manual and safety instructions for the Kemei KM-2269 hair clipper, providing essential information for safe and effective use.</p>
	<p>Kemei KM-1858 Hair Clipper User Manual and Safety Instructions</p> <p>User manual and safety instructions for the Kemei KM-1858 professional cordless rechargeable hair clipper, detailing its design and usage.</p>



[Kemei KM-1856 Hair Clipper: Manual and Safety Instructions](#)

Official manual and safety instructions for the Kemei KM-1856 Hair Clipper, providing essential information for operation and maintenance.



[Kemei KM-1407 Hair Clipper User Manual](#)

Comprehensive user manual for the Kemei KM-1407 hair clipper, detailing safe operation, charging, usage, maintenance, and important safety warnings in multiple languages.