

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jocoevol](#) /

› [Jocoevol Farmhouse 9 Drawer Dresser Instruction Manual \(Model 0922 dresser farmhouse\)](#)

Jocoevol 0922 dresser farmhouse

Jocoevol Farmhouse 9 Drawer Dresser Instruction Manual

Model: 0922 dresser farmhouse

Brand: Jocoevol

1. PRODUCT OVERVIEW

The Jocoevol Farmhouse 9 Drawer Dresser is designed to provide ample storage and a vintage aesthetic to your living space. Featuring hand-carved line panels and retro-style handles, this cream-colored dresser offers both functionality and a charming farmhouse appeal. It is constructed from premium MDF wood with sturdy metal slides for durability and smooth operation.



Image: The Jocoevol Farmhouse 9 Drawer Dresser, showcasing its cream finish and vintage design in a bedroom setting.

Key Features:

- **Farmhouse Vintage Design:** Hand-carved line panels and retro-style handles for a distinctive look.
- **High-Quality Materials:** Crafted from premium MDF wood with sturdy metal slides for durability.
- **Ample Storage:** Nine spacious drawers with smooth-glide rails for organized storage.
- **Multifunctional:** Suitable for bedrooms, living rooms, hallways, or entryways.
- **Easy Maintenance:** Thickened top is scratch-resistant, waterproof, and easy to clean.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep these instructions for future reference.

- **Anti-Tip Kit:** An anti-tip kit is included with your dresser. It is crucial to install this kit to prevent accidental tipping, which can cause serious injury or death. Secure the dresser to a wall using the provided hardware.
- **Weight Distribution:** Distribute weight evenly across drawers. Avoid placing heavy items on top of the dresser or in the top drawers to maintain stability.
- **Children's Safety:** Do not allow children to climb on the dresser or hang from drawers. Always supervise children around

furniture.

- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all fasteners are securely tightened before use.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts and hardware are present and accounted for. If any parts are missing or damaged, please contact customer support.

Typical Components:

- Dresser panels (top, bottom, sides, back, dividers)
- Drawer components (fronts, sides, backs, bottoms)
- Drawer slides (metal rails)
- Legs and support blocks
- Hardware pack (screws, dowels, cam locks, anti-tip kit, handles)

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer (optional, for dowels)

4. ASSEMBLY INSTRUCTIONS

Follow the steps carefully to assemble your Jocoevol Farmhouse 9 Drawer Dresser. It is recommended to have two people for assembly.

Your browser does not support the video tag.

Video: Detailed assembly guide for the Farmhouse 9 Drawer Dresser. This video provides visual instructions for each step of the assembly process, from attaching drawer slides to constructing the frame and drawers.

Step-by-Step Guide:

1. **Prepare the Base:** Attach the drawer slides to the bottom panel of the dresser. Secure the decorative legs to the base using the provided screws.
2. **Assemble the Frame:** Connect the side panels and internal dividers to the base. Ensure all cam locks and screws are tightened for a stable structure.
3. **Install Top Panel:** Secure the top panel to the assembled frame. This typically involves screws from the underside of the top panel into the side panels and dividers.
4. **Construct Drawers:** For each drawer, assemble the side, front, and back panels. Slide the bottom panel into the grooves. Attach the drawer slides to the sides of the drawer box.
5. **Attach Drawer Fronts:** Secure the decorative drawer fronts to the assembled drawer boxes. Install the vintage-style handles.
6. **Insert Drawers:** Carefully slide each completed drawer into its designated slot on the dresser frame.
7. **Install Anti-Tip Kit:** Follow the instructions provided with the anti-tip kit to secure the dresser to a wall. This is a critical safety step.

5. OPERATING YOUR DRESSER

The Jocoevol dresser features smooth-glide rails for easy drawer operation. To ensure longevity and proper function:

- **Opening/Closing Drawers:** Pull and push drawers gently using the handles. Avoid forcing them open or slamming them.

shut.

- **Drawer Dividers:** Utilize the included drawer dividers (if applicable) to organize smaller items like socks, underwear, or accessories, maximizing storage efficiency.
- **Weight Capacity:** Do not overload drawers. Excessive weight can damage the drawer slides and compromise the dresser's stability.



Image: The dresser with several drawers open, illustrating the ample storage capacity for various clothing items and accessories, including a top drawer with dividers.

6. CARE AND MAINTENANCE

Proper care will help maintain the appearance and extend the life of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly clean up spills to prevent staining, especially on the waterproof top surface.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Humidity:** Maintain a consistent humidity level in the room to prevent wood from warping or cracking.

7. TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

Problem	Possible Cause	Solution
Drawers are stiff or not sliding smoothly.	Misaligned drawer slides or debris in the tracks.	Check that drawer slides are correctly installed and aligned. Clean any dust or debris from the tracks. Apply a silicone-based lubricant if necessary.
Dresser feels wobbly or unstable.	Loose fasteners or uneven floor.	Ensure all screws and cam locks are tightened. Adjust the leveling feet (if present) or place shims under the legs to stabilize on uneven surfaces. Confirm the anti-tip kit is securely installed.
Drawer fronts are misaligned.	Incorrect attachment of drawer fronts.	Loosen the screws holding the drawer front, adjust its position, and re-tighten.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Jocoevol
Model Name	0922 dresser farmhouse
Product Dimensions	16.1"D x 53.5"W x 36.2"H
Color	Cream
Material	Engineered Wood
Number of Drawers	9
Item Weight	28 Pounds
Assembly Required	Yes



Image: Detailed dimensions of the Jocoevol Farmhouse 9 Drawer Dresser, including overall size and individual drawer measurements.

9. WARRANTY AND SUPPORT

For any questions, missing parts, or after-sales concerns regarding your Jocoevol Farmhouse 9 Drawer Dresser, please contact our customer support team. While specific warranty details are not provided in this manual, our team is ready to assist you with any issues.

Please refer to your purchase documentation or the retailer's website for specific warranty terms and conditions.