

[Manuals.plus](#) /

› [Furniway](#) /

› Furniway 31.5-inch Mid-Century Modern 3-Drawer Dresser Instruction Manual

Furniway B0GMW7XZ3C

Furniway 31.5-inch Mid-Century Modern 3-Drawer Dresser Instruction Manual

Model: B0GMW7XZ3C | **Brand:** Furniway

INTRODUCTION

Thank you for choosing the Furniway 31.5-inch Mid-Century Modern 3-Drawer Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

This dresser is designed to provide efficient storage and enhance the aesthetic of your living space. It features three spacious drawers and a durable walnut finish.

SAFETY INFORMATION

- **Anti-Tip Safety Anchor:** It is crucial to secure the dresser to a wall using the provided anti-tip safety anchor. This prevents accidental tipping, which can cause serious injury or death. Always follow the installation instructions for the anti-tip device.
- **Weight Capacity:** Do not exceed the maximum weight capacity for the top surface (150 lbs) or individual drawers (25 lbs). Overloading can compromise stability and structural integrity.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all hardware is securely tightened before use. Periodically check and re-tighten hardware as needed.
- **Children:** Keep children away from the assembly area. Do not allow children to climb on or play with the dresser.
- **Placement:** Place the dresser on a level surface to ensure stability.

—— **31.5" Wide Top** ——



**Waterproof
Surface**



**Anti-Tip
Safety Anchor**



**Wooden
Legs**

Image: Close-up view highlighting the waterproof surface, the anti-tip safety anchor mechanism, and the sturdy wooden legs of the dresser.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Panels (Front, Back, Sides, Bottom)
- Wooden Legs
- Drawer Slides
- Assembly Hardware (Screws, dowels, cam locks, etc.)
- Anti-Tip Safety Anchor Kit
- Assembly Instructions

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically takes 30-45 minutes. Follow the step-by-step instructions provided in the included manual. Ensure you have a Phillips head screwdriver and a hammer (not included) for assembly.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a soft, clean surface. Refer to the parts list in your separate assembly guide to identify each piece.
2. **Assemble the Main Frame:** Connect the side panels to the top and bottom panels using the designated hardware (e.g., dowels and cam locks). Ensure all connections are snug.
3. **Attach Back Panel:** Secure the back panel to the main frame using small nails or screws. This adds stability to the structure.
4. **Install Drawer Slides:** Attach the drawer slides to the inside of the dresser frame according to the markings. Ensure they are level and aligned.
5. **Assemble Drawers:** Construct each of the three drawers by connecting the front, back, and side panels. Slide the drawer bottom into the grooves. Attach the remaining part of the drawer slides to the assembled drawers.
6. **Insert Drawers:** Carefully slide the assembled drawers into the dresser frame, ensuring they glide smoothly on the installed slides.
7. **Attach Legs:** Securely attach the wooden legs to the bottom of the dresser.
8. **Install Anti-Tip Kit:** Position the dresser in its final location. Attach the anti-tip bracket to the back of the dresser and the corresponding bracket to the wall stud, then connect them with the strap. This step is critical for safety.

Smooth & Sturdy Drawer Construction

Designed for Daily Use



Image: A hand demonstrating the smooth and sturdy operation of a dresser drawer, designed for daily use.

OPERATING INSTRUCTIONS

Your Furniway dresser is designed for ease of use and efficient storage.

- **Drawer Operation:** To open a drawer, gently pull the hidden handle. To close, push the drawer firmly until it is fully seated. The smooth-gliding slides ensure effortless access.
- **Storage Capacity:** Each drawer is designed to hold up to 25 lbs of items. The top surface can support up to 150 lbs. Distribute weight evenly to maintain stability.
- **Organization:** Utilize the deep and spacious drawers to organize clothes, bedding, and other essentials. This helps maintain a tidy living space.

Large Storage Space

Organize Clothes, Bedding & More



Image: The dresser with its three drawers open, showcasing ample storage space for clothes, bedding, and other items, promoting organization.



Image: A visual comparison demonstrating how the dresser helps in keeping a home neat and organized, showing a 'messy' room transforming into a 'neat and easy to arrange' space.

MAINTENANCE

Proper care will ensure the longevity and appearance of your dresser.

- **Cleaning:** Wipe with a dry cloth to remove dust and light smudges. Avoid abrasive cleaners or harsh chemicals, as these can damage the walnut finish.
- **Spills:** Immediately wipe up any spills with a soft, dry cloth to prevent water damage or staining, especially on the waterproof surface.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or discoloration of the wood finish.

TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

- **Drawers not closing smoothly:** Check if the drawer slides are properly aligned and free of obstructions. Ensure all assembly hardware for the slides is tightened.
- **Dresser wobbles:** Verify that the dresser is placed on a level surface. Check and tighten all assembly screws, especially those connecting the main frame components and legs. Ensure the anti-tip kit is securely installed.
- **Scratches or minor damage:** For minor scratches, a wood repair marker or furniture polish matching the walnut finish may be used.
- **Missing parts:** If any parts were missing upon delivery, contact Furniway customer support with your product model and purchase information.

SPECIFICATIONS

Feature	Detail
Brand	Furniway
Model Number	B0GMW7XZ3C
Material	Engineered Wood
Finish Type	Veneer (Walnut)
Product Dimensions (D x W x H)	15.7" x 31.5" x 28.5"
Number of Drawers	3
Drawer Type	Under Mounted Slide
Mounting Type	Freestanding (with Anti-Tip Anchor)
Style	Mid-Century Modern
Product Care Instructions	Wipe with Dry Cloth

— PRODUCT DIMENSIONS —



Due to lighting and scene variations, the colors in the images may differ slightly from the actual product. Please refer to the physical item for the most accurate representation.

Image: Technical drawing illustrating the precise dimensions of the dresser (31.5" W x 15.7" D x 28.5" H) and its drawers, including weight capacities for the top (150 lbs) and drawers (25 lbs).

WARRANTY AND SUPPORT

Furniway products are designed for durability and customer satisfaction. This product is sold by FURNIWAY DIRECT and typically includes a 30-day easy return policy.

- **Returns:** Refer to the retailer's return policy for details on eligible returns within 30 days of purchase.
- **Customer Support:** For assistance with assembly, missing parts, or any product-related inquiries, please contact FURNIWAY DIRECT customer support. Contact information can typically be found on your purchase receipt or the retailer's website.
- **Protection Plans:** Extended protection plans may be available for purchase separately. Refer to your retailer for options such as 2-Year or 3-Year Protection Plans.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question