

[Manuals.plus](#) /

› [SakerPlus](#) /

› SakerPlus Electric Automatic Nail Clipper User Manual (Model CP49455)

SakerPlus CP49455

SakerPlus Electric Automatic Nail Clipper

Model: CP49455

INTRODUCTION

Thank you for choosing the SakerPlus Electric Automatic Nail Clipper. This device is designed to provide a safe, efficient, and convenient solution for nail trimming for users of all ages. Please read this manual thoroughly before first use to ensure proper operation and to maximize the lifespan of your device.



Image: The SakerPlus Electric Automatic Nail Clipper, shown in white.

SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this product.

- The blade is sharp. Exercise caution during use.
- This product is not intended for use by children under 12 years of age.
- Children aged 12 and above must operate the product only under direct adult supervision.
- Always store the product properly and keep it out of the reach of children to prevent accidental contact or misuse, which may result in injury.
- Use this product exclusively on nails. Do not allow it to contact any other part of the body, as this may cause injury.
- While the product is in operation, keep clothing, accessories, hair, and other objects clear of the device to prevent damage to the product or personal injury.
- Do not use this product on or around nails if the surrounding skin is injured or irritated.
- Do not immerse or rinse the product in water for cleaning. Keep the device away from all water sources, moisture, and open flames.
- Do not operate the product while it is connected to the charger.
- The product contains a built-in rechargeable battery. Do not expose it to fire, extreme heat, or attempt to charge it in high-temperature environments.
- Do not subject the product to strong impacts or drops. If the device has been damaged in any way, discontinue use immediately.
- Never attempt to modify, disassemble, or repair the product yourself, as this may cause damage and void the warranty.

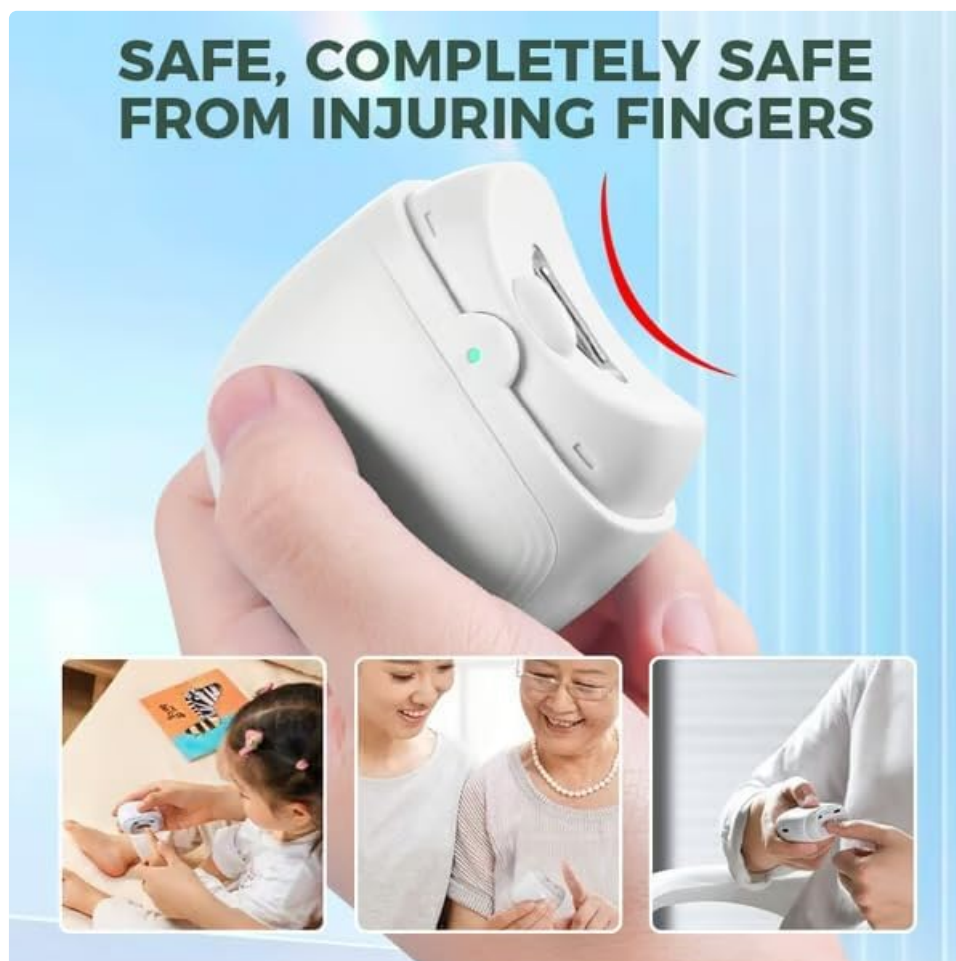


Image: The device features an enclosed blade for enhanced safety, preventing direct skin contact.

PRODUCT OVERVIEW

The SakerPlus Electric Automatic Nail Clipper is designed with user convenience and safety in mind. Key features include:

- **Enhanced Safety Design:** A uniquely curved groove fully encloses the blade, ensuring precise nail alignment while preventing skin contact.
- **Gentle LED Light:** An integrated soft LED light provides clear visibility during use, ideal for low-light conditions or users with visual challenges.
- **Quiet Operation:** The ultra-quiet motor allows for discreet use without disturbing others.
- **Integrated Clipping Collection:** An internal storage compartment captures nail trimmings, ensuring a clean and mess-free experience.
- **USB Type-C Charging:** For quick and convenient recharging.



Image: Auxiliary LED light for use in low light conditions.



Image: The device is suitable for a wide range of users, including those with limited dexterity or vision.

CHARGING THE DEVICE

Before first use, fully charge the device to ensure optimal battery performance. The device features a Type-C charging port for rapid charging.

1. Locate the Type-C charging port on the device.
2. Connect the provided USB Type-C cable to the device and plug the other end into a compatible USB power adapter (not included) or a computer USB port.
3. The indicator light will show the charging status. A full charge typically takes approximately 30 minutes.
4. Once fully charged, disconnect the charging cable. The device offers up to 8 hours of continuous operation or 2 months on standby.

LARGE CAPACITY LITHIUM BATTERY

Long battery life



Image: The device being charged via its Type-C port.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective nail trimming:

1. **Open the Top Cover:** Gently open the protective top cover of the nail clipper.
2. **Power On:** Press the power button to activate the device. The LED light will illuminate.
3. **Position Finger:** Carefully place your fingernail or toenail into the knife head (the curved groove). Ensure the nail is properly aligned within the opening.
4. **Trim Nails:** Move your finger slowly to allow the device to trim the nail. The device will automatically collect the nail shavings.
5. **Power Off:** Once trimming is complete, press the power button again to turn off the device.



Image: Step-by-step guide for operating the nail clipper.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your nail clipper.

1. **Empty Nail Shavings:** After use, press the top window to open the integrated storage compartment and empty the collected nail trimmings.
2. **Clean Exterior:** Wipe the exterior of the device with a soft, dry cloth.
3. **Do Not Immerse:** Never immerse the device in water or rinse it under running water.
4. **Storage:** Store the device in a cool, dry place, away from direct sunlight and moisture.



Image: The integrated storage compartment for nail shavings.

TROUBLESHOOTING

If you encounter issues with your SakerPlus Electric Automatic Nail Clipper, refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to a power source using the Type-C cable and allow it to charge.
- **Nails not trimming effectively:** Ensure your nail is properly positioned within the cutting groove. The device is designed for trimming, not heavy cutting. If the blade feels dull, contact customer support.
- **Unusual noise during operation:** Check if any debris is lodged in the cutting mechanism. Ensure the nail shavings compartment is empty. If the noise persists, discontinue use and contact customer support.
- **Device stops working unexpectedly:** This could indicate a low battery. Recharge the device. If the issue persists after charging, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.9 x 2.5 x 1.26 inches (73.66 x 63.5 x 32.0 mm)
Item Model Number	CP49455
Weight	2.93 ounces (83 grams)
Manufacturer	SakerPlus

Color	White
Material	Plastic (Body), Stainless Steel (Blade)
Charging Port	USB Type-C
Battery Life	Up to 8 hours continuous operation, 2 months standby
Charging Time	Approx. 30 minutes



Image: Product dimensions (63mm/2.5in width, 76.5mm/3in length, 33mm/1.3in height).

WARRANTY AND SUPPORT

SakerPlus is committed to providing high-quality products. For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official SakerPlus store or contact their customer service department.

© 2026 SakerPlus. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question