

- Manuals.plus /
- > Groovz /
 - > Groovz Open-Ear True Wireless Headphones GRZ-OPN-PUR User Manual

Groovz GRZ-OPN-PUR

Groovz Open-Ear True Wireless Headphones

Model: GRZ-OPN-PUR | Brand: Groovz

1. INTRODUCTION

Thank you for choosing Groovz Open-Ear True Wireless Headphones. This manual provides essential information for setting up, operating, and maintaining your new headphones. Please read it thoroughly to ensure optimal performance and longevity of your device.



Image 1.1: Groovz Open-Ear True Wireless Headphones and Charging Case.

Your browser does not support the video tag. Please
update your browser to view this content.

Video 1.1: Product overview and features demonstration.

2. PACKAGE CONTENTS

Ensure all items are present in your package:

- Groovz Open-Ear True Wireless Headphones (Left and Right)
- Charging Case with Smart Battery Display

- USB-C Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

The Groovz Open-Ear Headphones are designed for comfort and situational awareness, featuring a lightweight design and ergonomic ear hooks.



Crystal Clear Sound & Premium Comfort

 
Experience flawless communication and immersive sound with technology that adapts to your life



Secure & Comfortable Fit



Dual Microphones & Noise Reduction



Easy Touch Controls

Image 3.1: Exploded view of a Groovz Open-Ear Headphone.

Key Components:

- **Earbud Body:** Houses the audio drivers and touch controls.
- **Flexible Ear Hook:** Provides a secure and comfortable fit over the ear.
- **Charging Contacts:** Located on each earbud for charging within the case.
- **Microphones:** Dual microphones for clear calls and noise reduction.

- **Charging Case:** Protects and charges the earbuds, features an LED battery display.
- **USB-C Port:** For charging the case.

4. SETUP

4.1. Charging the Case and Earbuds

Before first use, fully charge the charging case and earbuds.

1. Connect the USB-C charging cable to the charging port on the case and to a power source.
2. The LED display on the case will show the current battery percentage during charging.
3. Place the earbuds into the charging case. Ensure the charging contacts align. The earbuds will begin charging automatically.
4. The LED display indicates the charge level of the case and earbuds. A full charge is indicated by '100' on the display.

 
Reliable Battery Life

Stay charged and connected no matter where your day takes you



LED Battery Display

Check your charge instantly and never be surprised by dead earbuds



Fast Charging

Type-C fast charging gets you back to full power quickly



26 Hours of Total Playtime

Enjoy up to 4 hours with the earbuds plus 22 hours with the charging case



4.2. Initial Pairing

To connect your Groovz headphones to a device:

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "Groovz Open-Ear" from the list.
4. Once connected, you will hear an audible confirmation, and the earbuds will be ready for use.

5. OPERATION

5.1. Wearing the Earbuds

For optimal sound and comfort, ensure the earbuds are worn correctly:

1. Identify the Left (L) and Right (R) earbuds.
2. Gently place the earbud over your ear, positioning the speaker part near your ear canal.
3. Adjust the flexible ear hook to fit securely and comfortably around the back of your ear.



The Perfect Fit for Everyone

Designed for all-day wear
and full awareness



Lightweight, open-ear
headphones with
ergonomic silicone
earbuds and flexible
ear hooks for a secure,
comfortable fit

Image 5.1: Proper wearing of Groovz Open-Ear Headphones.

5.2. Touch Controls

The Groovz Open-Ear Headphones feature smart touch controls on each earbud:

- **Single Tap (Left or Right):** Play/Pause music, Answer/End call.
- **Double Tap (Right):** Next track.
- **Double Tap (Left):** Previous track.
- **Triple Tap (Right):** Volume Up.
- **Triple Tap (Left):** Volume Down.
- **Long Press (Left or Right):** Activate voice assistant (Siri, Google Assistant).
- **Long Press (during incoming call):** Reject call.

Break Free from Wires

Simplify your life with one less cord to worry about!



Instant pairing
with **Bluetooth 5.3**
Technology



Navigate playlists
or answer calls with
Smart Touch Controls



Image 5.2: Using touch controls on the earbud.

6. MAINTENANCE

6.1. Cleaning

Regular cleaning helps maintain performance and hygiene:

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Gently clean the charging contacts on both the earbuds and the case with a dry cotton swab if necessary.

6.2. Storage

When not in use, store your headphones in the charging case to protect them and keep them charged.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen to re-enter pairing mode. Check your device's Bluetooth settings.
No sound from one earbud	Check battery level of both earbuds. Try re-pairing. Ensure both earbuds are properly seated in the charging case to reset.
Charging case not charging	Verify the USB-C cable and power adapter are working. Ensure the cable is securely connected to the case's charging port.
Touch controls unresponsive	Ensure your fingers are clean and dry. Try restarting the earbuds by placing them in the case and taking them out again.
Poor call quality	Ensure microphones are not obstructed. Move closer to your connected device. Check for environmental noise.

8. SPECIFICATIONS

Technical details for your Groovz Open-Ear True Wireless Headphones:

- **Model Name:** GRZ-OPN-PUR
- **Connectivity Technology:** Wireless (Bluetooth 5.3)
- **Earpiece Shape:** Open-ear
- **Form Factor:** True Wireless
- **Audio Driver Type:** Dynamic Driver
- **Control Method:** Touch
- **Noise Control:** Active Noise Cancellation (for calls: Noise Reduction)
- **Water Resistance Level:** IPX5 (Water Resistant)
- **Battery Life (Earbuds):** Up to 4 hours
- **Total Playtime (with Charging Case):** Up to 26 hours
- **Material:** Plastic, Silicone
- **Compatible Devices:** Cellphones, Tablets
- **Item Weight:** 6.4 ounces
- **UPC:** 810186691783

9. SAFETY INFORMATION

Please observe the following safety guidelines:

- Do not expose the headphones or charging case to extreme temperatures, humidity, or liquids.
- Avoid dropping or applying excessive force to the device.
- Do not attempt to disassemble or modify the product. This may void the warranty and cause damage.
- Keep out of reach of children and pets.
- Dispose of the product and its battery responsibly according to local regulations.

- Prolonged listening at high volumes may cause hearing damage. Adjust volume to a safe level.

10. WARRANTY AND SUPPORT

Groovz products are designed and engineered in the USA. For any questions, technical support, or warranty inquiries, please contact Groovz customer service through the official Groovz website or your retailer's support channels. Please retain your proof of purchase for warranty claims.

© 2025 Groovz. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FRVH7G5Y>

More documents and user manuals: <https://manuals.plus/>