

manuals.plus /

- › [Armani Exchange](#) /
- › [Armani Exchange AX4198 Black Watch User Manual](#)

Armani Exchange AX4198

Armani Exchange AX4198 Black Watch User Manual

Model: AX4198

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Armani Exchange AX4198 Black Watch. Please read this manual thoroughly to ensure proper use and care of your timepiece.



Image 1.1: Angled view of the Armani Exchange AX4198 Black Watch, showcasing the black dial, chronograph subdials, and silicone strap.

2. PRODUCT OVERVIEW

The Armani Exchange AX4198 is a men's quartz chronograph watch featuring a black stainless steel case, a black dial with contrasting accents, and a comfortable black silicone strap. It is designed for everyday wear with a water resistance of 50 meters.

AX4198

A | X
ARMANI EXCHANGE



Image 2.1: The Armani Exchange AX4198 watch displayed alongside the brand logo.

3. SETUP AND INITIAL USE

3.1 Unpacking

Carefully remove the watch from its packaging. Inspect for any visible damage. The watch comes with a protective film on the crystal and/or case back, which should be removed before use.



YOUR WATCH BOX

Whether you're gifting a watch or keeping it for yourself, the experience begins with opening our sleek black box, featuring our distinctive A|X logo and designed to complement the watch inside. Plus, it's crafted from at least 60% recycled content and sourced from responsibly managed forests.

Image 3.1: The Armani Exchange watch presented in its sleek black gift box.

3.2 Setting the Time

1. Pull the crown (center knob on the right side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 1 (normal operating position) to start the watch.

3.3 Adjusting the Strap

The silicone strap features a buckle closure. Adjust the strap length by inserting the pin into the desired hole for a comfortable and secure fit on your wrist.



Image 3.2: Rear view of the watch, showing the silicone strap and buckle closure.

4. OPERATING INSTRUCTIONS

4.1 Chronograph Function

Your AX4198 watch is equipped with a chronograph (stopwatch) function:

1. **Start/Stop:** Press the top pusher (button above the crown) to start the chronograph. Press it again to

stop.

2. **Reset:** While the chronograph is stopped, press the bottom pusher (button below the crown) to reset all chronograph hands to zero.

4.2 Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water intrusion.

5. MAINTENANCE AND CARE

5.1 Cleaning

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For the silicone strap, a damp cloth with mild soap can be used, followed by thorough drying.

5.2 Battery Replacement

The watch is powered by a standard watch battery. When the watch stops running or the hands move erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

5.3 Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

6. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time is incorrect:** Reset the time as described in Section 3.2. If the time consistently loses or gains significantly, the movement may require servicing.
- **Chronograph hands do not reset to zero:** Perform a chronograph reset. If the issue persists, consult a service center.

For issues not listed here, please contact customer support.

7. SPECIFICATIONS

Model Number	AX4198
Movement Type	Quartz Chronograph
Case Material	Stainless Steel
Case Diameter	42 Millimetres
Case Thickness	11 Millimetres

Strap Material	Silicone
Band Width	16 Millimetres
Water Resistance Depth	50 Metres (5 ATM)
Display Type	Analog
Crystal Material	Glass
Closure Type	Buckle (Single Prong Strap Buckle)
Item Weight	87.3 Grams



Movement
Quartz Chronograph

Case Material
Stainless Steel

Case Size
42MM

Water Resistant
5 ATM

Image 7.1: Key specifications of the Armani Exchange AX4198 watch.

8. WARRANTY INFORMATION

Your Armani Exchange AX4198 watch comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from accidents, improper handling, unauthorized repairs, or normal wear and tear.

Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official Armani Exchange warranty documentation provided with your watch or visit the official brand website.

9. SUPPORT

For technical assistance, service, or warranty claims, please contact the retailer where the watch was purchased or the authorized service center for Armani Exchange watches.

Manufacturer: Fossil India Pvt Ltd

Importer: Fossil India Pvt. Ltd., Khasra No: 2058/1754/18 & 2059/1754/18, Waka Mouza Bhatoli kalan, Baddi 173205 India

When contacting support, please have your watch model number (AX4198) and proof of purchase readily available.

© 2025 Armani Exchange. All rights reserved.