Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- MECHEN /
- > MECHEN X55-C MP3 Player User Manual

MECHEN X55-C

MECHEN X55-C MP3 Player User Manual

Model: X55-C

1. Introduction

This manual provides detailed instructions for the MECHEN X55-C MP3 Player. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MECHEN X55-C MP3 Player
- 1 x USB Cable (Type-C)
- 1 x Audio Headphones
- 1 x Screen Protector
- 1 x Protective Case
- 1 x User Manual

Dépannage



Charge Correcte

① Utilisez un chargeur certifié 5V/1A.

② Évitez les chargeurs rapides et les chargeurs sans fil. *Les chargeurs incompatibles peuvent activer la protection contre les surtensions



Compte Google

Avant une réinitialisation d'usine

 Déconnectez le compte Google de l'appareil.
 Supprimez l'appareil sur google.com/devices. Sinon, une boucle de connexion peut survenir.



Contrôle Parental

- 1) Installez « Family Link » (appareil parent).
- ② Liez l'appareil via un code de jumelage.③ Définissez des limites d'utilisation et des

Image: Contents of the MECHEN X55-C MP3 Player retail box, showing the player, USB cable, headphones, screen protector, protective case, and user manual.

3. PRODUCT OVERVIEW

The MECHEN X55-C is a portable MP3 player featuring a 4-inch touchscreen display and an Android 10 operating system. It is designed for multimedia playback, including music and videos, with extensive connectivity options.

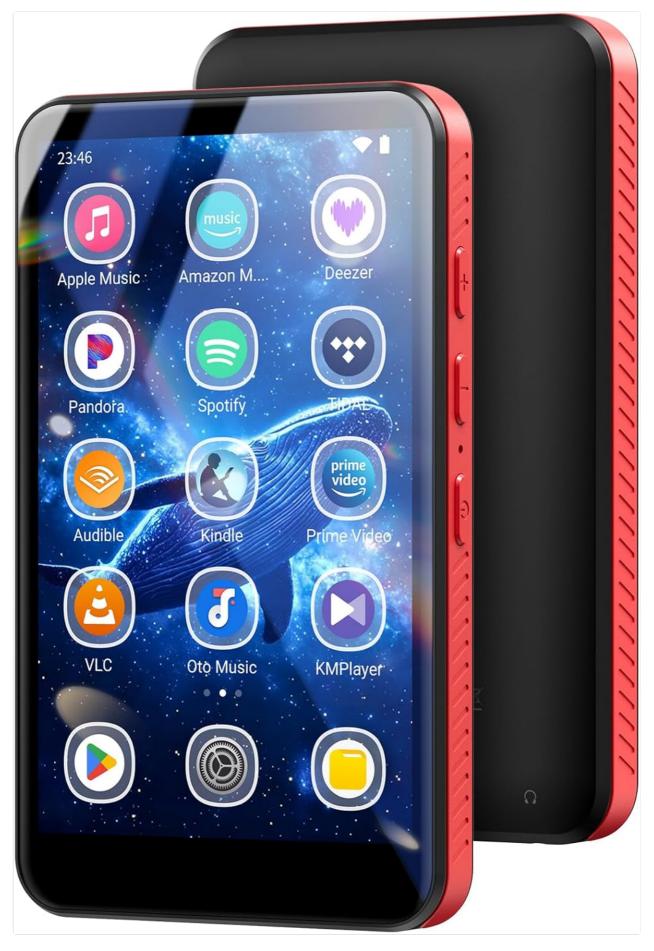


Image: Front and side view of the MECHEN X55-C MP3 Player, showcasing its 4-inch display with app icons and the red textured side buttons.

Key Features:

• Operating System: Android 10

• Processor: 8-core MTK6750 chipset

RAM: 3GB

• Display: 4-inch (480x800) IPS touchscreen

• Internal Storage: 32GB ROM (expandable up to 1TB via TF card)

• Connectivity: Wi-Fi (2.4G/5G), Bluetooth 4.1

• Battery: 2000mAh Lithium-ion

• Audio Formats: MP3, AAC, OGG, WMA, FLAC, ALAC, APE, WAV, DSD (DSF/DFF), MQA, AIFF

• Video Formats: MP4, AVI, MKV, MOV, WMV, MPEG, FLV, WebM, TS, RMVB, DAT, RM



Image: Diagram illustrating the internal components of the MECHEN X55-C, highlighting the Android 10 OS, dual-band Wi-Fi support, MTK6750 8-core chipset, and Bluetooth 4.1 multi-connection.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device using the provided USB Type-C cable and a certified 5V/1A charger. Avoid using fast chargers or wireless chargers as incompatible chargers may activate overvoltage protection.

Batterie Rechargeable de 2000 mAh Les solutions à faible consommation d'énergie vous garantissent un plaisir continu musique et films **15** Hrs 8 Hrs **2.5** Hrs Musique Vidéo Charge

Image: The MECHEN X55-C MP3 Player connected to a USB-C charging cable, displaying a charging indicator on its screen.

The image also shows battery life estimates for music and video playback.

4.2 Power On/Off

- To Power On: Press and hold the power button on the side of the device until the screen lights up.
- To Power Off: Press and hold the power button, then select 'Power Off' from the options on the screen.

4.3 Wi-Fi Connection

- 1. Go to Settings > Network & internet > Wi-Fi.
- 2. Toggle Wi-Fi On.
- 3. Select your desired Wi-Fi network from the list.
- 4. Enter the password if prompted and tap Connect.

4.4 Google Account Setup

To access the Google Play Store and other Google services, you will need to sign in with a Google account. Follow the on-screen prompts during initial setup or go to **Settings** > **Accounts** > **Add account** > **Google**.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

The device supports various audio formats and allows streaming from services like Spotify, Amazon Music, and Apple Music (with subscription for offline use). You can also play local files.

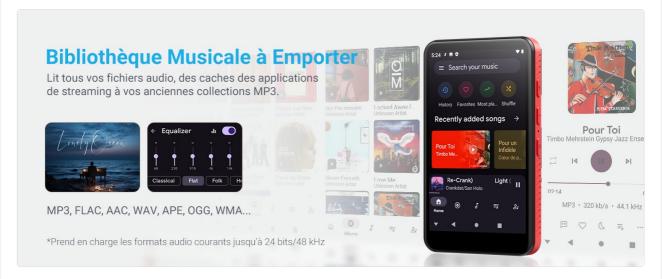


Image: The MECHEN X55-C MP3 Player displaying its music library interface, showing recently added songs and an equalizer settings screen with various presets like Classical, Flat, and Folk.

5.2 Video Playback

The 4-inch IPS screen is suitable for portable video viewing. The device supports multiple video formats without conversion, including MKV and AVI, through players like VLC or KMPlayer.

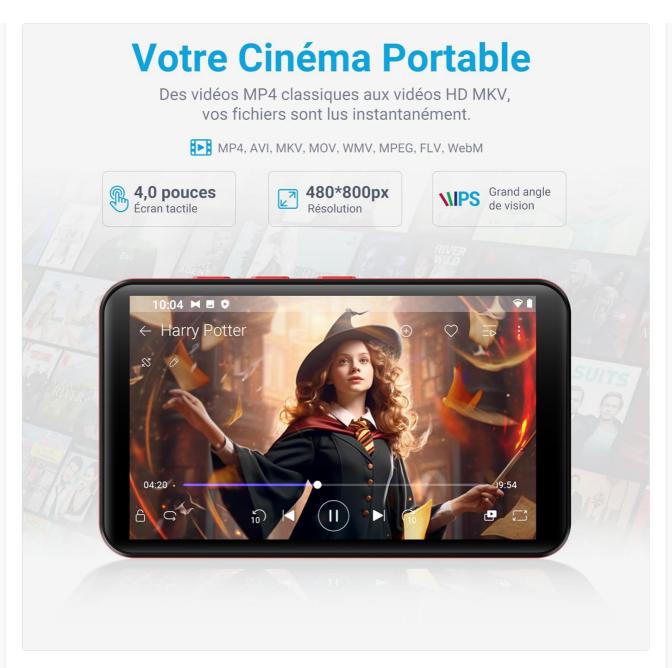


Image: The MECHEN X55-C MP3 Player displaying a video in landscape mode, demonstrating its portable cinema capability.

5.3 Bluetooth Connectivity

Connect Bluetooth headphones or speakers for wireless audio playback.

- 1. Ensure your Bluetooth accessory is in pairing mode.
- 2. On the X55-C, go to **Settings** > **Connected devices** > **Bluetooth**.
- 3. Toggle Bluetooth On.
- 4. Select your accessory from the list of available devices to pair.

5.4 Using Applications

The device comes with pre-installed applications and supports downloading more from the Google Play Store.

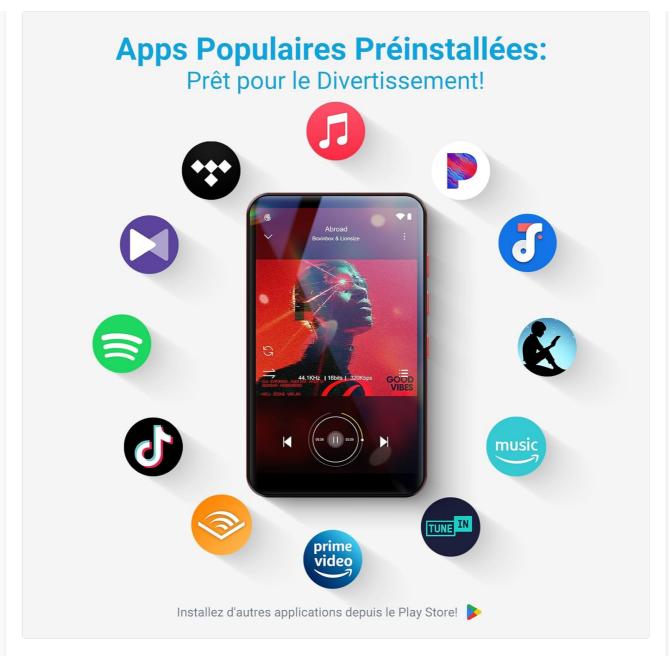


Image: The MECHEN X55-C MP3 Player screen showing various popular pre-installed applications such as Spotify, Amazon Music, Audible, and YouTube.

5.5 Parental Control (Family Link)

The MECHEN X55-C includes a parental mode feature, allowing parents to manage internet usage and content access for younger users. This can be configured using Google Family Link.

- 1. Install the Family Link app on a parent's device.
- 2. Link the X55-C device using a pairing code.
- 3. Define usage limits and content filters through the Family Link app on the parent's device.



Image: A visual representation of the Family Link parental control feature on the MECHEN X55-C, emphasizing secure screen time for children.

6. MAINTENANCE

6.1 Storage Management

The device comes with 32GB of internal storage and a free 64GB microSD card, allowing for ample space for music and videos. The TF card slot supports expansion up to 1TB.

- Regularly check storage usage in **Settings** > **Storage**.
- Delete unnecessary files or applications to free up space.
- To insert a microSD card, locate the TF card slot on the side of the device and gently push the card in until it clicks.

96Go de Stockage Méga 32Go intégrés + carte 64Go GRATUITE - Stockez des semaines de musique sans rien supprimer. 64G0 **32GO**

Image: An illustration detailing the storage capabilities of the MECHEN X55-C, showing 3GB RAM, 32GB ROM, a 64GB SD card, and support for up to 1TB expansion.

6.2 Cleaning the Device

Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using harsh chemicals or abrasive materials.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your MECHEN X55-C MP3 Player.

Aucune Configuration, Plaisir instantané: Connectez-vous et Jouez! | Compatible avec tous les comptes - Utilisez vos abonnements existants

Image: A troubleshooting guide for the MECHEN X55-C, covering correct charging, Google account management, and parental control setup.

7.1 Charging Issues

- **Device not charging:** Ensure you are using a certified 5V/1A charger and the provided USB-C cable. Incompatible chargers may trigger overvoltage protection.
- Slow charging: Verify the charger output. A lower amperage charger will result in slower charging times.

7.2 Google Account Problems

Cannot sign in or persistent login loop: Before performing a factory reset, disconnect your Google
account from the device. You can also remove the device from your Google account settings at
google.com/devices.

7.3 Parental Control Configuration

• **Issues with Family Link:** Ensure the Family Link app is correctly installed on both the parent's device and the X55-C. Verify the pairing code and internet connection.

7.4 General Performance Issues

- Device is slow or unresponsive: Close unused applications. Clear cache from apps inSettings >
 Apps > [App Name] > Storage & cache. Restart the device.
- Apps crashing: Ensure apps are updated to their latest versions. Clear app data or reinstall the app.

8. Specifications

Brand	MECHEN
Model Name	X55-C
Operating System	Android 10
Processor	8-core MTK6750 Chipset
RAM	3 GB
Internal Storage	32 GB

Expandable Storage	Micro SD (TF card) up to 1 TB
Screen Size	4 Inches
Screen Resolution	480 x 800 pixels
Connectivity	Bluetooth 4.1, Wi-Fi (2.4G/5G)
Battery Type	Lithium-ion
Battery Capacity	2000 mAh
Charging Port	USB Type-C
Special Features	Equalizer, FM Radio, Recorder, Calendar
Compatible Devices	Headphones, Speakers, Personal Computer, Smartphone

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

The MECHEN X55-C MP3 Player comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact MECHEN customer service through the retailer where the product was purchased or visit the official MECHEN website for contact information.

© 2025 MECHEN. All rights reserved.

Related Documents - X55-C

MECHEN USER MANUAL SOOILE MEST MES	MECHEN H11 Digital Player User Manual: Setup, Features, and Troubleshooting Comprehensive user manual for the MECHEN H11 digital player. This 80GB MP3 player features a 5-inch IPS full touch screen, Android 9.0, HiFi sound, and Wi-Fi/Bluetooth. Learn how to set up your device, configure languages, connect to networks, use streaming services like Spotify and Amazon Music, and troubleshoot common issues.
MECHEN USER MANUAL Electron VP Polity Electron VP Polity Annual Polity Service Annual Polity Annual Polity Service Annual Polit	MECHEN D50 Bluetooth MP3 Player User Manual User manual for the MECHEN D50 Bluetooth MP3 Player, detailing its functions, specifications, operations, music playback, FM radio, recording, and settings. Learn how to use your device effectively.

USER MANUAL INTERPRETATION TO PROTECT THE AND PROTECTION Who mere to describe for more and an examendar can can have get the more and an examendar can can have get the more and an examendar can can have get the more and an examendar can can have get the more and an examendar can can have get the more and an examendar can can have get the more and an examendar can can be get the more and an examendar can can be get the more and an examendar can can be get the more and an examendar can can be get the more and an examendar can can be get the more and an examendar can be get the more and the m	MECHEN M30 Hi-Fi MP3 Player User Manual User manual for the MECHEN M30 Hi-Fi MP3 Player, detailing its features, operation, settings, and troubleshooting. Covers button functions, charging, music playback, equalizer, and specifications.
USER GUIDANCE MECHEN M3	MECHEN M3 User Guidance: Portable Music Player Manual Comprehensive user guidance for the MECHEN M3 portable music player. This manual covers music playback, Bluetooth connectivity, device settings, recorder functions, FM radio operation, and detailed troubleshooting steps for common issues.
USER GUIDANCE MECHEN M3	MECHEN M3 MP3 Player User Guidance and Troubleshooting Comprehensive user guide for the MECHEN M3 MP3 player, covering music playback, Bluetooth connectivity, ebook reading, settings, recording, FM radio, and detailed troubleshooting steps for common issues.
MECHEN USER MANUAL SANTONIO TOTAL	MECHEN M3 Bluetooth MP3 Player User Manual User manual for the MECHEN M3 Bluetooth MP3 Player, detailing its features, operation, specifications, and cautions. Learn how to use music, video, FM radio, Bluetooth, and other functions.