

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [whall](#) /

› [WHALLULTRA Touchscreen Toaster 2 Slice, Stainless Steel, 850W User Manual](#)

whall WHALLULTRA Touchscreen Toaster 2 Slice

WHALLULTRA Touchscreen Toaster 2 Slice User Manual

Model: WHALLULTRA Touchscreen Toaster 2 Slice

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.

PRODUCT OVERVIEW

The WHALLULTRA Touchscreen Toaster is a 2-slice appliance designed for efficient and versatile toasting. It features a modern touchscreen interface, durable stainless steel construction, wide slots to accommodate various bread types, and an integrated warming rack. This toaster offers multiple functions including Bagel, Defrost, Reheat, and Cancel, along with adjustable shade settings.



Image: The WHALLULTRA Touchscreen Toaster, showcasing its stainless steel finish and touchscreen control panel, with two toasted bagel halves emerging from the slots and a fresh bagel on a plate beside it.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the toaster.
3. **First Use (Burn-off):** Before first use, operate the toaster without bread on the highest shade setting to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
4. **Connect Power:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. **Step 1:** Insert bread slices into the toaster slots.
2. **Step 2:** Use the touchscreen to select the desired bread type (e.g., White, Bagel, Gluten Free, Eng Muffin, Pastry, Waffle) and adjust the toast shade level. Press 'Defrost' or 'Reheat' if needed.
3. **Step 3:** Push the toast lever down until it locks into place. The toasting cycle will begin.
4. **Step 4:** Once the countdown ends, the toasted bread will automatically pop up.

Easy to Operation

Step 1:

Put breads into slots.



Step 2:

Press Bread type to choose bread type and Bake shade to choose shade level, press defrost or reheat if needed.

Step3:

Press the lever down to the bottom.



Step4:

Toasted breads will pop up automatically after the countdown ends.

Image: A visual guide illustrating the four basic steps of operating the toaster: inserting bread, selecting settings on the touchscreen, pushing down the lever, and the bread popping up when done.

Control Panel Functions

4 Basic Functions



Bread type **BREAD TYPE**
Press to choose different bread type

Cancel **CANCEL**
Cancel working, long press for 2s to MUTE

Defrost **DEFROST**
Give 20% longer browning time cycle perfect for toasting frozen

Reheat **REHEAT**
Reheat bread for 30s after the cycle finished

Image: A detailed view of the toaster's touchscreen control panel, highlighting the 'Bread Type', 'Cancel', 'Defrost', and 'Reheat' buttons with their respective functions explained.

- **Bread Type:** Press this button to cycle through different bread types (White, Bagel, Gluten Free, Eng Muffin, Pastry, Waffle) for optimized toasting.
- **Cancel:** Press to stop the current toasting cycle immediately. A long press for 2 seconds will mute the toaster's sound.
- **Defrost:** Activates a longer toasting cycle (approximately 20% longer) suitable for toasting frozen bread.
- **Reheat:** Reheats bread for 30 seconds after a cycle has finished, without further browning.

Toast Shade Selection

Freely choose your favorite shade



Image: A graphic demonstrating various toast shade levels, from light to dark, with approximate toasting times ranging from 70 seconds to 230 seconds, indicating the toaster's adjustable shade control.

The toaster offers a range of shade settings, allowing you to customize your toast from lightly golden to dark and crispy. Use the 'Bake Shade' control on the touchscreen to select your preferred level. The display will show the remaining time for the selected shade.

Bread Type Selection



Suitable for a variety of bread

Nutritious breakfast, homemade delicious

Image: The WHALLULTRA Touchscreen Toaster centrally placed, with an arc of different bread types around it, including bagels, white bread, gluten-free bread, English muffins, waffles, and pastries, illustrating its versatility.

The 'Bread Type' function optimizes toasting for specific items. Select the appropriate type for best results:

- **White:** Standard setting for white bread.
- **Bagel:** Toasts the cut side of bagels while gently warming the outer side.
- **Gluten Free:** Optimized for gluten-free bread, which often requires a different toasting profile.
- **Eng Muffin:** Suitable for English muffins.
- **Pastry:** Ideal for pastries and thicker items.
- **Waffle:** For toasting waffles.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- **Always unplug the toaster** and allow it to cool completely before cleaning.
- **Crumb Tray:** Pull out the crumb tray located at the bottom of the toaster. Dispose of crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting. Clean the crumb tray regularly to prevent crumb buildup, which can be a fire hazard.

- **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
- **Interior:** Never insert any objects into the toaster slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to shake out the food.
- Do not immerse the toaster in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet issue; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your household circuit breaker.
Lever does not stay down.	Toaster is not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If the issue persists, contact customer support.
Bread is unevenly toasted.	Uneven bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray and check for any obstructions in the slots.
Smoke or burning smell.	Crumb buildup; food lodged in slots; first use burn-off.	Immediately unplug the toaster. Clean the crumb tray. If food is lodged, carefully remove it after the toaster has cooled. Ensure adequate ventilation during first use.

SPECIFICATIONS

- **Model:** WHALLULTRA Touchscreen Toaster 2 Slice
- **Power:** 850W
- **Slices:** 2
- **Material:** Stainless Steel
- **Functions:** Bagel, Defrost, Reheat, Cancel, Adjustable Shade Control, Multiple Bread Types
- **Control:** Touchscreen Interface

WARRANTY AND SUPPORT

Your WHALLULTRA Touchscreen Toaster is covered by a manufacturer's warranty against defects in material and workmanship under normal household use. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and how to make a claim. For technical support, troubleshooting assistance, or warranty inquiries, please contact WHALLULTRA customer service. Contact information can typically be found on the product packaging or the official WHALLULTRA website.

