

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [iWALK](#) /

> [iWALK Magnetic Wireless Power Bank 10000mAh \(Model MXB020\) User Manual](#)

iWALK MXB020

iWALK Magnetic Wireless Power Bank 10000mAh (Model MXB020) User Manual

Brand: iWALK | Model: MXB020

INTRODUCTION

Thank you for choosing the iWALK Magnetic Wireless Power Bank 10000mAh. This portable charger is designed to provide convenient and efficient power for your mobile devices, featuring magnetic wireless charging, a built-in kickstand, and a clear LED display. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

IMPORTANT SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures, direct sunlight, or fire.
- Avoid dropping, disassembling, or attempting to repair the device yourself.
- Keep away from water and other liquids.
- Use only certified charging cables and adapters.
- Keep out of reach of children.
- Dispose of the power bank according to local regulations. Do not dispose of with household waste.

PACKAGE CONTENTS

Please check the package for the following items:

- iWALK Magnetic Wireless Power Bank 10000mAh
- USB-C Charging Cable
- User Manual

Slim & Pocket-Friendly Power Bank



(Thickness)
≈ **0.69** inch



(Weight)
≈ **7.05** oz

Image: Front and side view of the iWALK Magnetic Wireless Power Bank, highlighting its slim design and LED display.

The iWALK Magnetic Wireless Power Bank features a compact design with a magnetic charging surface, a built-in foldable kickstand, a USB-C port for input/output, and an LED digital display to show the remaining battery percentage.

SETUP

Initial Charging of the Power Bank

1. Connect the provided USB-C charging cable to the USB-C port on the power bank.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included).
3. The LED display will show the charging progress. Charge the power bank fully before first use.
4. Once fully charged, the LED display will show "100%". Disconnect the cable.



Image: The iWALK power bank connected to a wall adapter via its USB-C port for charging. The LED display shows charging status.

OPERATING INSTRUCTIONS

Wireless Charging (MagSafe Compatible)

1. Ensure your device is MagSafe compatible (iPhone 12 series and newer) or has a MagSafe compatible case.
2. Align the iWALK power bank with the back of your MagSafe-compatible iPhone. The magnets will automatically snap the power bank into place.
3. Wireless charging will begin automatically. The LED display on the power bank will show its remaining battery percentage.

Power Bank + Stand

Fold, Prop, Charge



Image: The iWALK power bank is shown magnetically attached to the back of an iPhone, indicating active wireless charging.



LED Digital Display

Precise battery indicator

Image: A visual representation of the strong magnetic connection (1.2KG) between the power bank and an iPhone, illustrating compatibility with iPhone 12-17 series and magnetic phone cases.

Wired Charging (USB-C Output)

1. Connect a USB-C cable (the one provided or another compatible cable) to the USB-C port on the power bank.
2. Connect the other end of the cable to your device (e.g., smartphone, tablet, earbuds).
3. The power bank will automatically begin charging your device. The LED display will show the remaining battery percentage.
4. The USB-C port supports 20W Power Delivery (PD) fast charging for compatible devices.



Compatible with iPhone 12-17 series



Compatible with magnetic phone cases



iPhone
Magnetic case



Android
Magnetic case



Non-magnetic
case

Image: The iWALK power bank simultaneously charging an iPhone wirelessly and an iPad via a USB-C cable, demonstrating its dual-device charging capability.

Using the Built-in Metal Kickstand

1. Gently pull out the metal kickstand located on the back of the power bank.
2. Position the kickstand to prop up your iPhone (with the power bank attached) in either portrait or landscape orientation.
3. This allows for hands-free viewing, video calls, or browsing while your device charges.

10000mAh

Portable Charger For Trips



Airline
Approved

1.5 Charges
iPhone 17 Pro

1.8 Charges
iPhone 16

Image: An iPhone with the iWALK power bank attached, using its built-in metal kickstand to stand upright on a desk, ideal for hands-free use.

Your browser does not support the video tag.

Video: Demonstrates the iWALK PowerStand 10000, showcasing its magnetic attachment, fast wireless charging, and the functionality of its foldable kickstand for hands-free use.

LED Digital Display

The integrated LED display provides a precise real-time indication of the power bank's remaining battery percentage. This allows you to easily monitor the charge level and know when a recharge is needed.

COMPATIBLE



Wireless Charging



iPhone 12-17 Series

Compatible with magnetic phone cases



iPhone Magnetic case

Android Magnetic case

Non-magnetic case

Wired Charging



Android series mobile phones



iPod Series



Air Pods Series

Image: A close-up view of the iWALK power bank's LED digital display, clearly showing the battery percentage.

MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or high humidity.
- For optimal battery life, fully charge the power bank at least once every three months if stored for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging.	Cable not connected properly; faulty cable/adaptor; power bank depleted.	Ensure cable is securely connected. Try a different cable or power adaptor. Allow time for initial charge if completely depleted.
Device not charging wirelessly.	Misalignment; non-MagSafe compatible device/case; foreign objects; power bank depleted.	Realign the power bank with your device. Ensure your device/case is MagSafe compatible. Remove any foreign objects between the power bank and device. Check power bank battery level.
Device not charging via USB-C.	Cable not connected properly; faulty cable; power bank depleted.	Ensure cable is securely connected. Try a different USB-C cable. Check power bank battery level.

Problem	Possible Cause	Solution
LED display not working.	Power bank is off or completely depleted.	Press the power button (if available) or connect the power bank to a charger to activate the display.

SPECIFICATIONS

Model Number	MXB020
Battery Capacity	10000 Milliamp Hours
Product Dimensions	4.09 x 2.68 x 0.7 inches
Item Weight	10.2 ounces
Connector Type	Wireless, USB C
Special Features	Auto Shut-Off, Digital Display, Fast Charging, Slim, Wireless Charging, Metal Kickstand
Manufacturer	U2O GLOBAL CO.,LTD

WARRANTY AND SUPPORT

iWALK products come with a standard manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please visit the official iWALK website or contact their customer service. Please retain your proof of purchase for warranty claims.

Official iWALK Website: [iWALK Store on Amazon](#)