

[Manuals.plus](#) /

› [BRIKSMAX](#) /

› BRIKSMAX 2.0 Light Kit for Lego Icons Captain Jack Sparrow's Pirate Ship 10365 - Instruction Manual

BRIKSMAX 10365

BRIKSMAX 2.0 Light Kit Instruction Manual

For Lego Icons Captain Jack Sparrow's Pirate Ship Set (Model 10365)

INTRODUCTION

This manual provides detailed instructions for installing and operating your BRIKSMAX 2.0 Light Kit, specifically designed for the Lego Icons Captain Jack Sparrow's Pirate Ship set (Model 10365). This kit enhances your Lego model with innovative LED lighting, bringing it to life with vibrant effects. Please read all instructions carefully before beginning installation.

BRING YOUR LEGO TO LIFE

NOT INCLUDE THE LEGO MODEL



The image displays the Lego Captain Jack Sparrow's Pirate Ship model both with the BRIKSMAX light kit activated (left) and without lights (right), highlighting the visual enhancement provided by the lighting system.

WHAT'S INCLUDED

Before you begin, please verify that all components listed below are present in your package:

- LED Light Kit components
- Paper instructions / User Guide
- USB power cable
- AA Battery Box (batteries not included)



WHAT'S INCLUDED?

- 1.LED Light Kit
- 2.Paper instructions
- 3.User Guide
- 4.AA Battery Box

This image shows the complete contents of the BRIKSMAX 2.0 Light Kit packaging, including the LED light components, instruction booklets, and the AA battery box.

SETUP AND INSTALLATION

Follow these steps to integrate the light kit into your Lego model. Handle all wires and components with care to prevent damage.

General Guidelines:


- Ensure your Lego model is fully assembled or partially disassembled as required by specific light placement steps.
- Gently bend wires to fit, avoiding sharp creases or excessive force.
- Test connections periodically during installation to ensure proper function.

Wire Management:

The BRIKSMAX 2.0 kit features newly designed wire organizer parts to help conceal wires, prevent breakage, and ensure a neat fit within your Lego model.

FEWER GAPS, SLIM FIT

Protect Wires from Breakage & Keep Your Model Tidy

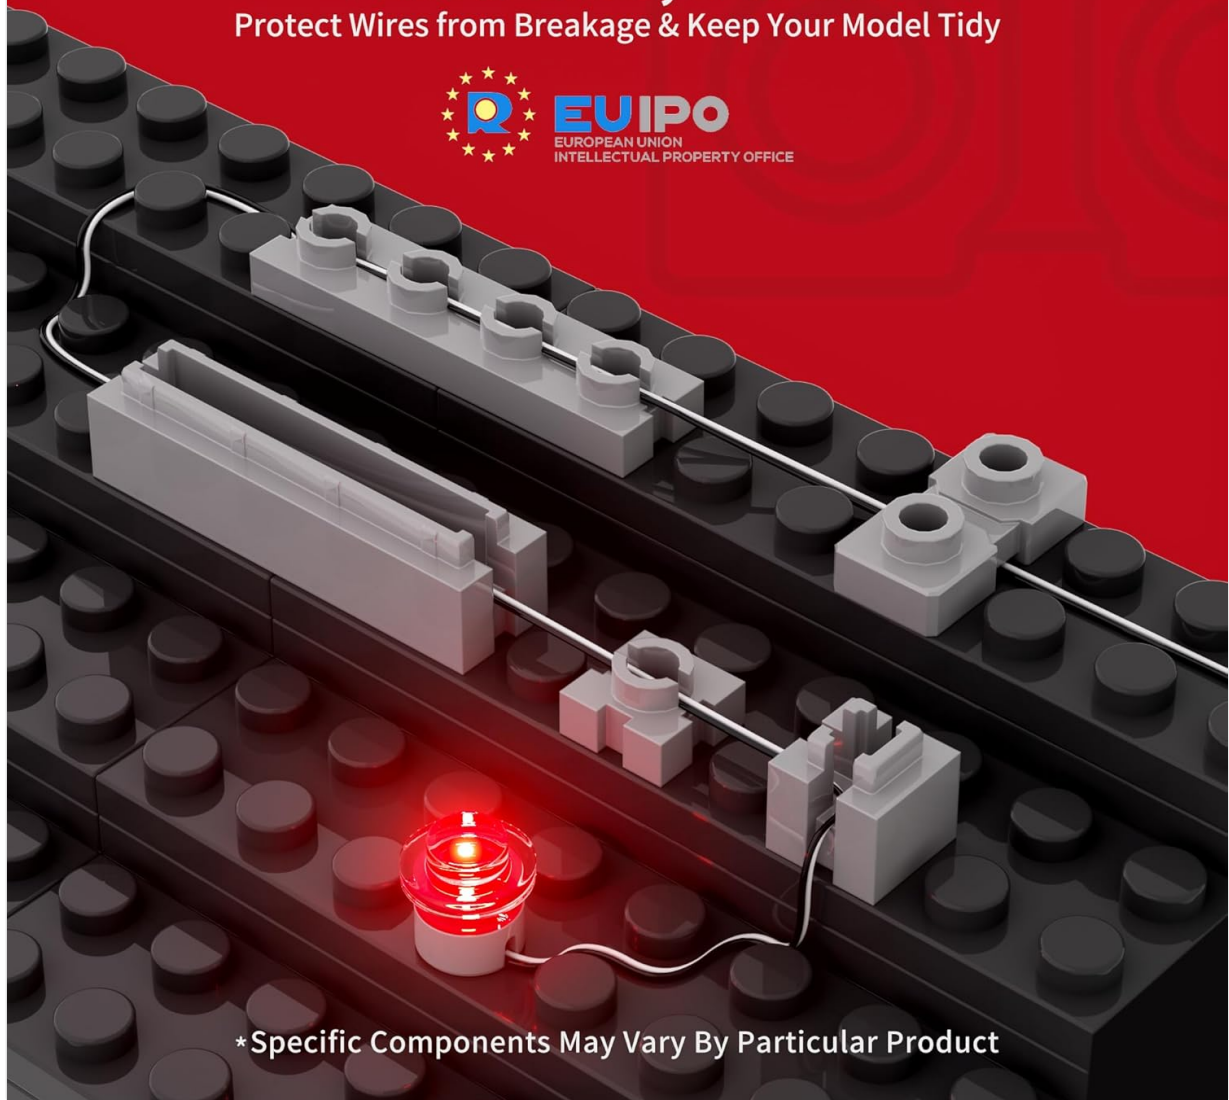

*Specific Components May Vary By Particular Product

This image illustrates the wire management technique, demonstrating how wires are discreetly routed and secured using specialized brick components to maintain the model's aesthetic and prevent wire damage.

Component Connection:

The upgraded crafts include lights and expansion boards with brick shells, reducing exposed components and making assembly and disassembly easier. Connect components firmly but without excessive force.

UNIQUE DESIGN, PERFECT FUSION

Ours		Others
	VS	
More secure and tighter		Easy to drop out
	VS	
Safer and softer		Unsafe and glaring
	VS	
Larger and easier to install		Small and hard to install

This comparison image highlights the BRIKSMAX design, featuring more secure and tighter connectors, safer and softer lights, and larger, easier-to-install components compared to generic alternatives.

Powering the Kit:


Connect the USB power cable to the battery box or a compatible USB power source (e.g., a USB wall adapter or power bank). Insert AA batteries (not included) into the battery box if using battery power.

OPERATING INSTRUCTIONS

Once installed, operating your BRIKSMAX light kit is straightforward:

- **Power On/Off:** Use the switch on the battery box or the connected power source to turn the lights on or off.
- **Lighting Effects:** The kit provides vibrant and realistic lighting effects. Some kits may feature color-changing capabilities or different modes, depending on the specific design.

DETAIL LIGHTING, ENDURING SPARKLE

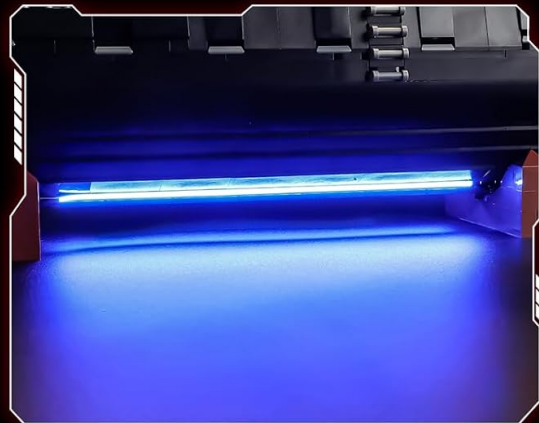

This image provides detailed views of the illuminated Lego ship, showcasing the strategic placement of lights to highlight different sections and create an enduring sparkle.

Your browser does not support the video tag.

This video demonstrates the BRIKSMAX 2.0 Light Kit installed on the Lego Icons Captain Jack Sparrow's Pirate Ship 10365, showcasing the various lighting effects and how they enhance the model's appearance.

MAINTENANCE

To ensure the longevity and optimal performance of your light kit:

- **Cleaning:** Use a soft, dry cloth to gently wipe away dust from the lights and wires. Avoid using liquids or harsh chemicals.
- **Battery Replacement:** If using the battery box, replace AA batteries when lights dim or cease to function. Ensure correct polarity.
- **Wire Handling:** Avoid pulling or tugging on wires. If you need to move the model, do so carefully to prevent stress on the connections.
- **Storage:** When not in use for extended periods, disconnect the power source and store the model in a dust-free environment.

TROUBLESHOOTING

If you encounter issues with your BRIKSMAX light kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on	No power, loose connection, dead batteries	Check power source (USB or batteries). Ensure all connections are secure. Replace batteries if necessary.
Some lights are dim or flickering	Low battery power, loose connection, damaged wire	Replace batteries. Check and re-secure connections. Inspect wires for visible damage.
Lights are not evenly distributed	Incorrect placement during installation	Refer to the detailed installation guide (paper instructions) to adjust light placement.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model Number:** 10365 (Compatible with Lego Icons Captain Jack Sparrow's Pirate Ship)
- **Manufacturer Part Number:** BX801
- **Material:** Plastic
- **Light Source Type:** Light Emitting Diode (LED)
- **Number of Light Sources:** 5
- **Light Output Maximum:** 100 Lumens
- **Power Source:** Battery (AA, not included) or AC adapter (via USB cable)
- **Item Weight:** 160 Grams
- **Special Features:** Cable-hiding technology, color-changing (potential, depending on specific effects), upgraded crafts for easier installation.

WARRANTY AND SUPPORT

Warranty Information:

The BRIKSMAX 2.0 Light Kit comes with a **1-year warranty on parts** from the date of purchase. This warranty covers manufacturing defects and component failures under normal use.

Customer Support:

For any questions, assistance with installation, or if you find any damaged or missing parts, please contact BRIKSMAX customer service. We are committed to providing warm service and ensuring your satisfaction. You can visit the official BRIKSMAX store for more information and support:[BRIKSMAX Store on Amazon](#)

