

## DigiLand MID1050-AE

# DigiLand 10.1 inch HD Tablet User Manual

MODEL: MID1050-AE

## 1. Introduction

This manual provides essential instructions for setting up, operating, and maintaining your DigiLand 10.1 inch HD Tablet, Model MID1050-AE. Please read this guide thoroughly to ensure proper use and to maximize your tablet's performance and longevity. This device features the Android 15 operating system, a 5-core processor, 6GB RAM, 32GB internal storage (expandable), Wi-Fi 6, Bluetooth 5.0, and a 6000mAh battery.



*Figure 1: DigiLand 10.1 inch HD Tablet (Front and Back View)*

## 2. What's in the Box

Verify that all items are present in the package:

- DigiLand 10.1 inch HD Tablet
- Charging Cable
- Charging Head (Power Adapter)
- Instruction Manual (this document)

## 3. Setup

### 3.1. Charging the Tablet

Before first use, fully charge the tablet. Connect the charging cable to the tablet's charging port and the charging head to a power outlet. The battery indicator on the screen will show charging status. A full charge typically takes several hours.

### 3.2. Initial Power On

Press and hold the power button located on the side of the tablet until the DigiLand logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, time zone, and Google account

login.

### 3.3. Connecting to Wi-Fi

1. From the home screen, swipe down from the top to open the Quick Settings panel.
2. Tap and hold the **Wi-Fi** icon to access Wi-Fi settings.
3. Toggle Wi-Fi **On**.
4. Select your desired network from the list of available networks.
5. Enter the network password if prompted, then tap **Connect**.

## 4. Operating the Tablet

### 4.1. Basic Navigation

- **Tap:** Select an item or open an application.
- **Swipe:** Move between home screens, scroll through lists, or navigate web pages.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

### 4.2. Installing Applications

Your tablet comes with the Google Play Store pre-installed. Open the Play Store app, search for desired applications, and follow the on-screen instructions to download and install them.

### 4.3. Storage Management

The tablet includes 32GB of internal storage. To expand storage, insert a microSD card (up to 256GB) into the designated slot. Navigate to **Settings > Storage** to manage internal and external storage.

### 4.4. Using the Cameras

The tablet features dual cameras. Open the Camera app to take photos or record videos. Tap the screen to focus and press the shutter button to capture. Switch between front and rear cameras using the icon on the screen.

### 4.5. Split-Screen Functionality

To use two apps simultaneously, open the first app, then tap the recent apps button (usually a square icon). Long-press the app's icon at the top of its card and select 'Split screen'. Choose a second app from the recent apps list or app drawer to occupy the other half of the screen.



Figure 2: User interacting with the DigiLand Tablet

## 5. Maintenance

### 5.1. Battery Care

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use only the provided charging cable and adapter.

### 5.2. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

### 5.3. Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for and install available updates.

## 6. Troubleshooting

- **Tablet not powering on:** Ensure the battery is charged. Connect to the charger for at least 30 minutes, then try powering on again.
- **Wi-Fi connection issues:** Restart the tablet and your Wi-Fi router. Verify the Wi-Fi password is correct.
- **Apps crashing or freezing:** Close and reopen the app. If the issue persists, clear the app's cache (**Settings > Apps > [App Name] > Storage > Clear cache**).
- **Slow performance:** Close unused apps, clear cache, or consider a factory reset as a last resort (back up data first).

## 7. Specifications

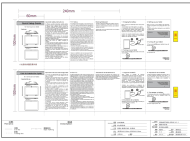
Feature	Specification
Model Name	MID1050-AE
Operating System	Android 15
Screen Size	10.1 Inches
Max Screen Resolution	800x1280 MP
Processor	5-Core ARM CPU (Cortex-A73 & Cortex-A53), up to 1.75GHz
RAM	6GB (3+3GB expansion)
Internal Storage	32GB
Expandable Storage	Up to 256GB via SD card
Battery Capacity	6000mAh (up to 8+ hours use)
Connectivity	Wi-Fi 6, Bluetooth 5.0
Cameras	Dual Cameras (Front & Rear)
Audio	Dual 1W Speakers
Dimensions (LxWxH)	9.59 x 6.78 x 0.39 inches
Weight	Approximately 1 pound (1.82 pounds shipping weight)

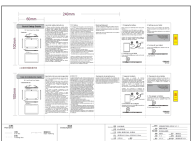
## 8. Warranty and Support

DigiLand is committed to providing comprehensive customer support. For any questions, technical assistance, or warranty inquiries regarding your tablet, please refer to the contact information provided with your purchase or visit the official DigiLand support website. Please retain your proof of purchase for warranty claims.

© 2025 DigiLand. All rights reserved.

### Related Documents - MID1050-AE

	<p><a href="#">DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide   MID1016</a></p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
---	--

	<p><a href="#">Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</a></p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p><a href="#">DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</a></p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p><a href="#">Digiland M11 Pro Quick Start Guide</a></p> <p>A quick start guide for the Digiland M11 Pro tablet, covering initial setup, charging, basic operations, and important FCC compliance information.</p>
	<p><a href="#">Digiland Limited Product Warranty Information</a></p> <p>Official limited product warranty details for Digiland electronics, covering terms, exclusions, and claim procedures. Includes 90-day parts and labor warranty.</p>
	<p><a href="#">DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide   MID1016</a></p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>