Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Kismile /
- > Kismile HZB-12M Crescent-Shaped Countertop Ice Maker User Manual

Kismile HZB-12M

Kismile HZB-12M Crescent-Shaped Countertop Ice Maker User Manual

Model: HZB-12M

1. Introduction

Thank you for choosing the Kismile HZB-12M Crescent-Shaped Countertop Ice Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Ensure the ice maker is connected to a properly grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the ice maker before cleaning, servicing, or when not in use.
- Keep children away from the ice maker. Close supervision is necessary when used near children.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or is damaged.
- Place the ice maker on a stable, level surface, away from direct sunlight, heat sources, and corrosive gases.
- Allow at least 6 inches of clearance around the appliance for proper ventilation.
- Use only potable water in the water tank.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

3. PRODUCT OVERVIEW

The Kismile HZB-12M is a compact countertop ice maker designed for convenience and efficiency. It produces unique crescent-shaped ice cubes and features a self-cleaning function and an intuitive LED display.

Key Features:

- Crescent-Shaped Ice: Produces ice that cools beverages quickly and melts slowly.
- **High Output:** Generates 16 ice cubes per cycle in 10-15 minutes, with a daily capacity of 26.5 lbs (12KG/24H).
- Self-Cleaning Function: One-touch automatic cleaning mode for hygiene.
- Smart LED Display: Intuitive controls with a 24-hour programmable timer.
- **Portable Design:** Space-saving with a removable transparent water tank (1.8L capacity) and ice basket (2 lbs capacity).

Components:

- Control Panel (LED Display)
- Ice Making Area
- Removable Water Tank
- Ice Basket
- Ice Scoop
- Drain Plug (located at the bottom)



Figure 3.1: Kismile HZB-12M Ice Maker with ice bucket and various applications.



Figure 3.2: Detailed view of the Kismile HZB-12M Ice Maker showing the water tank and ice basket.

4. SETUP

- 1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Keep packaging for future storage or transport.
- 2. **Placement:** Place the ice maker on a firm, level surface. Ensure there is adequate ventilation (at least 6 inches) around the unit. Avoid placing it near heat sources or in direct sunlight.
- 3. **Stabilization:** After placing the unit, allow it to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle.
- 4. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the 'Maintenance' section for detailed cleaning instructions.
- 5. Power Connection: Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

- 1. Open the top lid of the ice maker.
- 2. Remove the ice basket.
- 3. Pull out the transparent water tank.
- 4. Fill the water tank with potable water up to the 'MAX' fill line (approximately 1.8 liters).
- 5. Carefully slide the water tank back into place, ensuring it clicks securely.
- 6. Replace the ice basket and close the top lid.



Figure 5.1: Illustration of refilling the pull-out water tank.

5.2 Starting Ice Production

- 1. Press the **Power Button** () on the control panel to turn on the ice maker.
- 2. The ice maker will automatically begin the ice-making cycle. The LED display will show the remaining time for the current cycle.
- 3. The first batch of ice may take slightly longer and might be smaller due to the initial cooling process. Subsequent batches will be produced more quickly.

5.3 Adjusting Ice Thickness

The ice maker allows you to adjust the thickness of the ice cubes. This feature is typically controlled by pressing and holding a specific button (often the power button or a dedicated 'thickness' button) until the display flashes, then using '+' or '-' buttons to select the desired thickness level (e.g., 1 to 5, where 5 is thicker).

5.4 LED Display Indicators

- **Ice Full Indicator:** An icon will illuminate when the ice basket is full, and the ice making process will pause. Remove ice to resume operation.
- Add Water Indicator: An icon will illuminate when the water level in the tank is low. Add water to the tank to resume ice production.
- Timer: The display may show a countdown for the current ice-making cycle or a programmed timer.

6. MAINTENANCE

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your ice maker.

6.1 Self-Cleaning Function

The Kismile HZB-12M features a one-touch self-cleaning function:

- 1. Ensure the ice maker is empty of ice and water.
- 2. Fill the water tank with clean water.
- 3. Press and hold the **Clean Button** (refer to your control panel for the specific icon, often a brush or water droplet symbol) for approximately 3-5 seconds to activate the 20-minute self-cleaning cycle.
- 4. Once the cycle is complete, drain the water from the unit using the drain plug at the bottom.



Figure 6.1: Visual representation of the self-cleaning function in action.

6.2 Manual Cleaning

- **Daily/Weekly:** Remove the ice basket and water tank. Wash them with mild detergent and warm water, then rinse thoroughly.
- **Interior:** Wipe the interior surfaces with a soft cloth dampened with a mild cleaning solution. Ensure all areas are dry before reassembling.
- **Descaling:** It is recommended to descale the unit twice a week to prevent mineral buildup, especially in hard water areas. Use a descaling solution suitable for ice makers or a mixture of water and vinegar. Follow the product instructions for the descaling agent.
- Exterior: Wipe the exterior with a soft, damp cloth.

6.3 Draining Water

To drain residual water from the unit, locate the drain plug at the bottom of the ice maker. Place a container underneath, remove the plug, and allow all water to drain. Replace the plug securely afterward.

7. TROUBLESHOOTING

If you encounter issues with your ice maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice maker not working	No power; Water tank not properly seated; Ice basket full.	Check power connection; Ensure water tank clicks into place; Empty ice basket.
'Add Water' indicator on	Water level is low.	Refill the water tank with potable water.
Ice cubes are small or soft	Room temperature too high; Water temperature too high; Ice thickness setting too low.	Ensure proper ventilation; Use colder water; Adjust ice thickness setting to a higher level.
Unusual noise during operation	Normal operation sounds (compressor, water pump); Unit not level.	Ensure the unit is on a stable, level surface. If noise is excessive or unusual, contact support.
Ice has an odd taste	Unit needs cleaning; Stale water.	Perform self-cleaning cycle; Clean water tank and interior; Use fresh, potable water.

If the problem persists after attempting these solutions, please contact Kismile customer support.

8. SPECIFICATIONS

• Model Name: HZB-12M

• Brand: Kismile

• **Product Dimensions:** 14.09"D x 9.45"W x 15.75"H

Weight: Approximately 25 PoundsWater Tank Capacity: 1.8 Liters

• Ice Basket Capacity: 2 lbs

• Daily Ice Output: 26.5 lbs (12KG/24H)

• Ice Production Cycle: 10-15 minutes per batch (16 cubes)

Refrigerant: R600aManufacturer: Kismile



Figure 8.1: Dimensions and capacities of the Kismile HZB-12M Ice Maker.

9. WARRANTY AND SUPPORT

Your Kismile HZB-12M Ice Maker is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Kismile customer service through the retailer where the product was purchased or visit the official Kismile website for contact information.

© 2025 Kismile. All rights reserved.

INSTRUCTION MANUAL ICE MAKER IMPORTANT INSTRUCTIONS AND OPERATING MANUAL ICE MAKER ICE MAKER

Kismile ICM1262A Ice Maker Instruction Manual

User manual for the Kismile ICM1262A ice maker. Provides detailed instructions on operation, safety, cleaning, and troubleshooting for this portable ice maker.

Kismile Z4701H Ice Maker: Operating Manual, Safety Instructions, and Troubleshooting

Comprehensive operating manual for the Kismile Z4701H ice maker (Model IMB1001A-UL). Includes safety instructions, usage guide, cleaning procedures, troubleshooting tips, and technical specifications from Rowan Electric Appliance LLC.

Ice Maker Operating Manual: Z4701-BLACK / IMB1001-UL

Comprehensive operating manual for the Z4701-BLACK / IMB1001-UL ice maker, including important safety instructions, setup guide, operation procedures, cleaning and maintenance tips, troubleshooting, and technical specifications.

User Manual for HZB-160F Automatic Ice Maker

Comprehensive user manual for the HZB-160F Automatic Ice Maker, covering safety, installation, operation, maintenance, and troubleshooting.

Kismile HZB-15YLR Ice Maker with Water Dispenser: Care and Use Guide

Comprehensive guide for the HZB-15YLR Ice Maker with Water Dispenser, covering important safety information, setup, operation, and troubleshooting. Learn how to use and maintain your appliance for optimal performance.

INSTRUCTION MANUAL

care suse



Ice Make

CB24C Ice Maker Instruction Manual

Comprehensive instruction manual for the Kismile CB24C Ice Maker, covering safety precautions, product introduction, control panel operation, usage, cleaning, maintenance, troubleshooting, and specifications.