

YKYI GYSQ001

YKYI GYSQ001 Cordless Pressure Washer Instruction Manual

Your guide to safe and efficient operation of your YKYI GYSQ001 Cordless Pressure Washer.

1. INTRODUCTION

Thank you for choosing the YKYI GYSQ001 Cordless Pressure Washer. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always prioritize safety when operating any power tool. Failure to follow these instructions may result in injury or damage to the product.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the pressure washer.
- **Wear Protective Gear:** Always wear appropriate eye protection (safety glasses) and hearing protection.
- **Keep Children Away:** Do not allow children or untrained persons to operate the pressure washer.
- **Avoid Direct Spray:** Never direct the water jet at people, pets, electrical devices, or the unit itself.
- **Secure Connections:** Ensure all hoses and attachments are securely connected before operating.
- **Use Proper Water Source:** Only use clean water. Do not use corrosive or flammable liquids.
- **Battery Safety:** Use only the specified battery and charger. Do not expose the battery to extreme temperatures or moisture.
- **Storage:** Store the pressure washer in a dry, secure location away from children.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- YKYI Cordless Pressure Washer Unit
- 21V Rechargeable Lithium-Ion Battery (30000mAh)
- Fast Charger
- 24FT High-Elastic Hose
- Versatile 6-in-1 Nozzle
- Foam Sprayer Bottle
- Car Wash Gloves (Microfiber Mitt)
- Water Stop Valve
- Fast Interface Connector
- Water Faucet Adapter
- Water Faucet Connection
- Filter Screen
- Storage Toolbox
- Instruction Manual



Image: The YKY! Cordless Pressure Washer with its battery, hose, nozzles, foam sprayer, car wash mitt, and various adapters, all neatly organized within its hard-shell carrying case.

4. SETUP

4.1. Battery Installation and Charging

1. Ensure the battery is fully charged before first use. Connect the fast charger to the battery and a power outlet. The indicator light on the charger will show charging status.
2. Once charged, slide the 21V Lithium-Ion battery into the base of the pressure washer handle until it clicks securely into place.

You Will Get These

- 1 x Washing machine
- 1 x 6-in-1 nozzle
- 1 x 45° nozzle connector
- 1 x Linear nozzle
- 1 x Fan-shaped nozzle
- 1 x Extension rod
- 1 x Quick connector
- 1 x Foam pot
- 1 x Filter
- 1 x 197 inch water pipe
- 1 x Hose clamp
- 1 x Battery
- 1 x Battery charger
- 1 x Storage box
- 1 x Manual



Image: A diagram illustrating the 4.0AH powerful battery, highlighting its 4-5 hour charging time and 60-90 minute working time.

4.2. Connecting the Water Hose

The YKYI pressure washer offers dual water source flexibility:

- **From a Bucket/Container:** Attach the filter screen to one end of the 24FT high-elastic hose. Submerge the filter end into a bucket, pool, or any water container. Connect the other end of the hose to the water inlet on the pressure washer unit.
- **From a Garden Hose/Faucet:** Use the provided water faucet adapter and connection to attach the 24FT high-elastic hose directly to a standard garden hose or outdoor faucet. Ensure the water stop valve is correctly installed to prevent backflow.

Draw Water from Anywhere

The weighted filter allows it to draw water from buckets, ponds or any source.



Custom 4.3 oz Weighted Filter Screen

Keeps Hose Fully Submerged for Stable Water Draw.

Multiple Water Sources

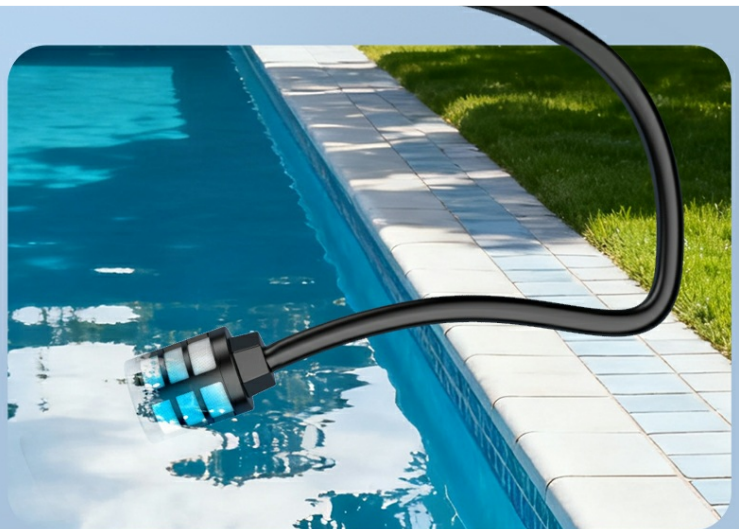


Image: Illustration demonstrating how to draw water from a bucket using the weighted filter screen attached to the hose, ensuring stable water draw.



Image: A diagram illustrating the faucet-compatible design, showing the water tap connector, transition connector, 1/2" & 3/4" faucet adapters, and stop valve for instant water supply.

4.3. Attaching the Nozzle and Foam Sprayer

1. **Nozzle:** Insert the desired nozzle attachment (e.g., the 6-in-1 multi-function nozzle) into the front end of the pressure washer unit and twist to secure it.
2. **Foam Sprayer:** For applying soap, fill the foam sprayer bottle with car wash fluid or appropriate cleaning solution. Attach the foam sprayer directly to the pressure washer unit.

5. OPERATING INSTRUCTIONS

5.1. Powering On and Adjusting Pressure

1. Press the power button on the unit to turn it on. The LCD screen will display the battery level and current speed setting.
2. Use the '+' and '-' buttons on the unit to adjust between the 30 available speed/pressure levels. Start with a lower setting and increase as needed for the cleaning task.
3. Squeeze the trigger to begin spraying water. Release the trigger to stop.

SUITABLE FOR ALL SCENARIOS CORDLESS & PORTABLE



Cleaning of Car



Clean the barbecue grill



Swimming pool



Lrrigation



Glass Windows

Image: A close-up view of the pressure washer's control panel, highlighting the 30 adjustable speed levels for precise control over cleaning intensity.

5.2. Changing Spray Patterns (6-in-1 Nozzle)

The 6-in-1 multi-function nozzle allows you to easily switch between different spray patterns by rotating the nozzle head:

- **0° Spray:** A concentrated, high-impact jet for tough stains.
- **15° Spray:** A narrow fan spray for intense cleaning on smaller areas.
- **25° Spray:** A medium fan spray for general cleaning tasks.
- **40° Spray:** A wide fan spray for gentle rinsing or watering plants.
- **Concentrated Jet:** A powerful stream for stubborn dirt.
- **Shower Mode:** A gentle, wide spray for delicate surfaces or watering.

6-IN-1 MULTI-FUNCTION NOZZLE

Turn the knob to select the spray mode you need.



Image: A visual guide to the 6-in-1 multi-function nozzle, demonstrating atomization, oblique spray, 0°, 15°, 25°, and 40° spray patterns.

5.3. Using the Foam Sprayer

1. Attach the foam sprayer bottle filled with cleaning solution to the pressure washer.
2. Spray the foam evenly over the surface to be cleaned. Allow the foam to dwell for a few minutes (refer to your cleaning solution's instructions).
3. Remove the foam sprayer and attach the desired nozzle for rinsing.

5.4. General Cleaning Applications

The YKYI GYSQ001 is suitable for various cleaning tasks:

- **Car Washing:** Use the foam sprayer for soap application, then rinse with a 25° or 40° spray.
- **Garden & Patio:** Tackle dirt on garden furniture, patios, and driveways with appropriate spray patterns.
- **Plant Watering:** Use the gentle shower mode for watering plants.
- **Window Cleaning:** A wide, gentle spray can be used for windows.

POWERFUL CORDLESS PRESSURE WASHER

An ideal cleaning tool for every home.



Image: A man demonstrating the use of the YKYI Cordless Pressure Washer for car cleaning, highlighting its powerful performance.

Your browser does not support the video tag.

Video: Official product video from YKYI US Store demonstrating the YKYI Cordless Pressure Washer in various cleaning scenarios, including car washing and garden tasks.

6. MAINTENANCE

6.1. Cleaning the Filter Screen

Regularly inspect and clean the water filter screen to prevent debris from entering the pump and affecting performance. Rinse the filter under running water to remove any accumulated particles.

6.2. Battery Care

- Always charge the battery in a well-ventilated area.
- Do not store the battery in direct sunlight or in areas with high temperatures.
- For long-term storage, charge the battery to approximately 50% and store it in a cool, dry place.

6.3. Unit and Hose Storage

- After each use, disconnect the hose and drain any remaining water from the unit and hose to prevent freezing damage in cold weather.
- Clean the exterior of the pressure washer with a damp cloth.
- Store all components in the provided storage toolbox to protect them from damage and keep them organized.

7. TROUBLESHOOTING

If you encounter issues with your YKYI GYSQ001 pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water pressure or weak spray	Low battery; Clogged filter; Air in the system; Improper nozzle setting; Insufficient water supply.	Charge battery; Clean filter; Prime the pump by running without nozzle until water flows steadily; Adjust nozzle; Ensure adequate water source.
Unit does not turn on	Battery not installed correctly; Battery discharged; Faulty battery or unit.	Re-install battery; Charge battery; Contact customer support.
Water leakage	Loose connections; Damaged O-rings or seals.	Tighten all connections; Inspect and replace O-rings/seals if damaged.

8. SPECIFICATIONS

Feature	Specification
Brand	YKYI
Model Number	GYSQ001
Power Source	Battery Powered
Battery Type	21V Lithium-Ion (30000mAh)
Maximum Pressure	1200 PSI
Maximum Flow Rate	3 Gallons Per Minute (GPM)
Motor Power	300W, 20000 RPM
Speed Levels	30 Adjustable Levels
Nozzle Type	6-in-1 Multi-Function Nozzle
Hose Length	24 Feet
Item Weight	7 Pounds
Product Dimensions	1"L x 1"W x 1"H

9. WARRANTY AND SUPPORT

YKYI products are designed for durability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, claims, or technical support, please refer to the warranty card included in your package or contact YKYI customer service directly. Our 24-hour online service is available to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question