

[Manuals.plus](#) /

› [IDIMEX](#) /

› IDIMEX Simona TV Room Rack 75 Inches with 2 Drawers Instruction Manual

## IDIMEX 84158

# IDIMEX Simona TV Room Rack 75 Inches with 2 Drawers - Instruction Manual

Model: 84158

Brand: IDIMEX

### IMPORTANT SAFETY INFORMATION

- Read all instructions before assembly and use.
- Keep small parts away from children.
- Ensure all connections are secure before use.
- Do not overload the rack.
- Do not expose to direct sunlight or rain.
- Assembly should be performed by a professional for best results.

### PACKAGE CONTENTS

Verify all components are present before beginning assembly.

- Wooden panels (various sizes)
- Rattan sliding doors
- Drawer components
- Metal slides for drawers
- Tapered feet
- Assembly hardware (Minifix, dowels, screws)
- Assembly Manual




Image showing the various components of the IDIMEX Simona TV Room Rack, including wooden panels, rattan doors, drawers, and hardware, ready for assembly.

## SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that assembly be performed by a professional.

1. **Unpack Components:** Carefully remove all parts from the packaging. Check for any damage. If damage is found, do not proceed with assembly and contact customer support.
2. **Identify Parts:** Refer to the included assembly manual to identify each component.
3. **Assemble Frame:** Connect the main wooden panels using the provided Minifix, dowels, and screws. Ensure all connections are tight and secure.
4. **Install Drawer Slides:** Attach the metal drawer slides to the designated areas within the frame.
5. **Assemble Drawers:** Construct the two drawers using the drawer components and attach the remaining parts of the metal slides.
6. **Insert Drawers:** Carefully slide the assembled drawers into the installed slides.

7. **Install Rattan Doors:** Place the rattan sliding doors into their tracks. Ensure they slide smoothly.
8. **Attach Feet:** Securely attach the four tapered feet to the base of the rack.

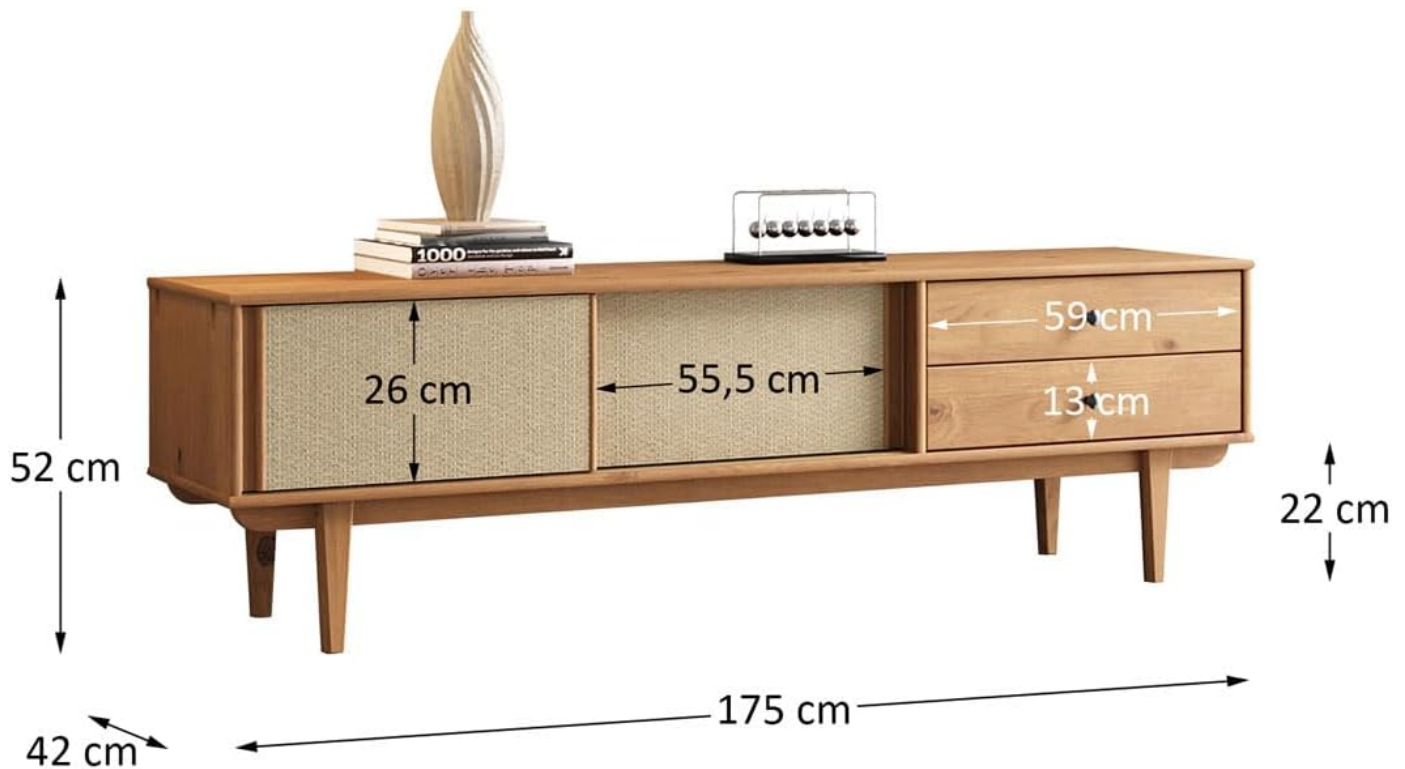

This image provides a detailed diagram of the IDIMEX Simona TV Room Rack, illustrating its overall dimensions: 175 cm width, 52 cm height, and 42 cm depth. It also shows internal measurements for the rattan door compartments (26 cm height, 55.5 cm width) and the drawers (59 cm width, 13 cm height), along with the 22 cm height of the feet.

## OPERATING INSTRUCTIONS

The IDIMEX Simona TV Room Rack is designed for organizing and displaying media equipment and other items.

- **Placement:** Position the rack on a flat, stable surface. Ensure adequate space for ventilation around electronic devices.
- **Weight Distribution:** Distribute weight evenly across the top surface and within the drawers and compartments. Avoid placing excessively heavy items on one side.
- **Drawer Use:** The two drawers feature smooth telescopic metal slides for easy opening and closing. Use them to store accessories, remote controls, or other small items.
- **Sliding Doors:** The rattan panel doors slide horizontally to conceal or reveal the storage compartments.



A front view of the IDIMEX Simona TV Room Rack, showcasing its two rattan sliding doors and two drawers on the right side. The solid wood construction and tapered feet are visible.



This image displays the IDIMEX Simona TV Room Rack in a living room setting, adorned with decorative items such as a vase, books, and a Newton's cradle. The rattan sliding doors are partially open, and the two drawers are visible on the right.

## MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your TV room rack.

- **Cleaning:** Use a slightly damp cloth for cleaning. Avoid harsh chemicals, abrasive cleaners, or excessive moisture.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth.
- **Spills:** Wipe up spills immediately to prevent staining or damage to the wood.
- **Sunlight Exposure:** Do not expose the rack to direct sunlight for prolonged periods, as this may cause fading or warping of the wood.
- **Moisture:** Keep the rack away from areas of high humidity or direct contact with water.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Tighten if necessary.



A close-up view of the open compartment behind one of the rattan sliding doors of the IDIMEX Simona TV Room Rack, showing a storage box inside. This highlights the internal storage space.



A detailed shot focusing on the natural braided rattan panel of the sliding door and the design of the tapered wooden leg of the IDIMEX Simona TV Room Rack, emphasizing the craftsmanship.



A close-up image showing the two drawers with their black knobs and the sturdy base of the IDIMEX Simona TV Room Rack, including the tapered legs.



An image of an open drawer of the IDIMEX Simona TV Room Rack, revealing its internal space and demonstrating its capacity to hold items like books and decorative objects.

**TROUBLESHOOTING**

This section addresses common issues you might encounter.

| Problem                                       | Possible Cause                                     | Solution                                                                                                    |
|-----------------------------------------------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Drawers do not slide smoothly.                | Misaligned slides, debris in tracks, loose screws. | Check that drawer slides are correctly aligned and securely fastened. Clean tracks of any dust or debris.   |
| Rattan doors stick or are difficult to slide. | Debris in tracks, misaligned doors.                | Clean the door tracks. Ensure doors are properly seated in their grooves.                                   |
| Rack feels unstable or wobbly.                | Loose assembly screws, uneven floor.               | Tighten all assembly screws. Ensure the rack is placed on a level surface. Use furniture pads if necessary. |

| Problem                           | Possible Cause                            | Solution                                                                                                                 |
|-----------------------------------|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Minor scratches or dents on wood. | Accidental impact during use or assembly. | For minor blemishes, wood repair markers or furniture polish can be used. Consult a professional for significant damage. |

SPECIFICATIONS

**Model:** 84158

**Brand:** IDIMEX

**Dimensions (W x H x D):** 175 cm x 52 cm x 40 cm (68.9 x 20.47 x 15.75 inches)

**Weight:** 28 kg (62 lbs)

**Material:** Solid Wood (Pinus), MDF background and drawers, Natural Rattan

**Color:** Freijó

**Drawers:** 2, with metal slides

**Doors:** 2, sliding rattan panels

**Assembly Required:** Yes (Minifix / Dowels / Screws)

**Included Components:** Assembly Manual & Installation Hardware

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty.

- **Manufacturer Warranty:** 12 months.
- **Warranty Coverage:** Covers manufacturing defects. Does not cover damage due to improper assembly, misuse, or normal wear and tear.
- **Customer Support:** For warranty claims, missing parts, or assembly assistance, please contact IDIMEX customer service. Refer to your purchase documentation for contact details.
- **Important Note:** Assembly and disassembly are not included with the product and are the customer's responsibility.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**