

BLUETTI Elite 10

BLUETTI Elite 10 Mini Portable Power Station User Manual

Model: Elite 10

Introduction	Safety	Features	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty
& Support								

1. INTRODUCTION

The BLUETTI Elite 10 Mini Portable Power Station is a compact and versatile power solution designed for various applications, including camping, travel, and emergency backup. Featuring a 128Wh LiFePO4 battery and a 200W AC outlet, it provides reliable power for small electronic devices. Its lightweight and airline-friendly design makes it an ideal companion for on-the-go power needs.



Figure 1: BLUETTI Elite 10 Mini Portable Power Station, showcasing its compact design and front panel.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the BLUETTI Elite 10. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not disassemble, repair, or modify the unit.
- Keep the unit away from fire, water, and extreme temperatures.
- Avoid dropping or subjecting the unit to strong impacts.
- Use only approved accessories and charging cables.
- Ensure proper ventilation during use and charging.
- Keep out of reach of children.

3. PRODUCT FEATURES

- **Versatile Power Output:** Equipped with a 200W AC outlet, 100W USB-C fast charging, and multiple DC ports to power various devices.
- **Compact & Portable:** Weighs approximately 4.0 lbs (1.8 kg) with an ergonomic handle, making it easy to carry.
- **Airline-Friendly Capacity:** 128Wh battery capacity falls within the 100–160Wh range, allowing it to be carried on most major airlines with prior approval (limit 2 per passenger).
- **Uninterruptible Power Supply (UPS):** Features a built-in 10ms UPS and 350W bypass output for seamless power during outages.
- **Multiple Charging Options:** Supports 150W AC charging (full in 70 mins), 100W solar charging, and 100W car charging.
- **Smart App Control:** Connect via Bluetooth to customize charging modes, adjust lighting, and monitor power status in real time.
- **Integrated LED Lighting:** Offers 3 lighting modes (warm/cool light, SOS) for up to 50 hours of illumination.

4. GETTING STARTED & SETUP

4.1. Unboxing and Package Contents

Upon opening the package, ensure all components are present:

- BLUETTI Elite 10 Mini Power Station
- AC Charging Cable
- Car Charging Cable
- User Manual

Packing List

Elite 10 Palm-Size Power Station



Documentation



AC Charging Cable



Car Charging Cable



Figure 2: Contents of the BLUETTI Elite 10 package.

4.2. Initial Charging

Before first use, fully charge the BLUETTI Elite 10. Connect the AC charging cable to the AC input port on the unit and then to a wall outlet. The display will indicate charging status. A full charge via AC takes approximately 70 minutes.

5. PRODUCT OVERVIEW

5.1. Front Panel

The front panel features the main display, control buttons, and various output ports:

- **DC Output (12V/5A):** For compatible DC devices.
- **Display Screen:** Shows input/output wattage, battery percentage, and remaining runtime.
- **DC Button:** Activates DC output ports.
- **Power Button:** Turns the unit on/off.
- **AC Button:** Activates the AC output outlet.

- **USB-C 100W Output:** For fast charging compatible USB-C devices.
- **USB-A 15W Outputs (x2):** Standard USB-A ports for charging.
- **USB-C 15W Output:** Additional USB-C port.



Figure 3: Front panel layout of the BLUETTI Elite 10.

5.2. Side and Rear Panels

The side and rear panels house additional input/output ports and the LED light:

- **DC/PV Input (12-28V/8A, 100W Max):** For solar or car charging.
- **AC Output (120V/200W):** Standard wall outlet for AC-powered devices.
- **AC Input:** For charging the unit via wall outlet.
- **LED Light:** Multi-mode light for illumination.

Airline Approval

perfect size for hassle-free travel



Note: This 128Wh battery (100–160Wh range) is allowed as carry-on on most airlines, subject to prior approval and a limit of two per passenger.

Figure 4: Rear panel showing AC output and LED light.

5.3. Dimensions and Weight

The Elite 10 is designed for portability:

- **Dimensions:** Approximately 7.8"L x 5.7"W x 4.3"H (19.8cm x 14.5cm x 11cm)
- **Weight:** Approximately 4.0 lbs (1.8 kg)

Palm-Sized Power Station

128Wh | 40000mAh \approx 4 power banks



7.9×5.8×4.3 in
size



4.0 lbs
weight



Figure 5: Visual representation of the Elite 10's compact size.

6. OPERATING INSTRUCTIONS

6.1. Powering On/Off

Press and hold the main power button on the front panel to turn the unit on or off. The display will illuminate upon activation.

6.2. Using AC Outlets

To use the AC outlet, press the 'AC' button on the front panel. The AC icon on the display will light up. Plug your AC-powered device into the AC output port on the rear panel. Ensure your device's power consumption does not exceed 200W.

6.3. Using DC Outputs

To use the DC output ports (USB-C, USB-A, 12V/5A), press the 'DC' button on the front panel. The DC icon on the display will light up. Connect your devices to the appropriate USB or 12V DC output ports.

6.4. Charging the Elite 10

The Elite 10 supports three charging methods:

- **AC Charging:** Connect the AC charging cable to the AC input port and a wall outlet. Max 150W, full charge in approximately 70 minutes.
- **Solar Charging:** Connect a compatible solar panel (e.g., BLUETTI PV60L/PV60F/PV100) to the DC/PV input port. Max 100W.
- **Car Charging:** Connect the car charging cable to the DC/PV input port and your vehicle's cigarette lighter socket. Max 100W.

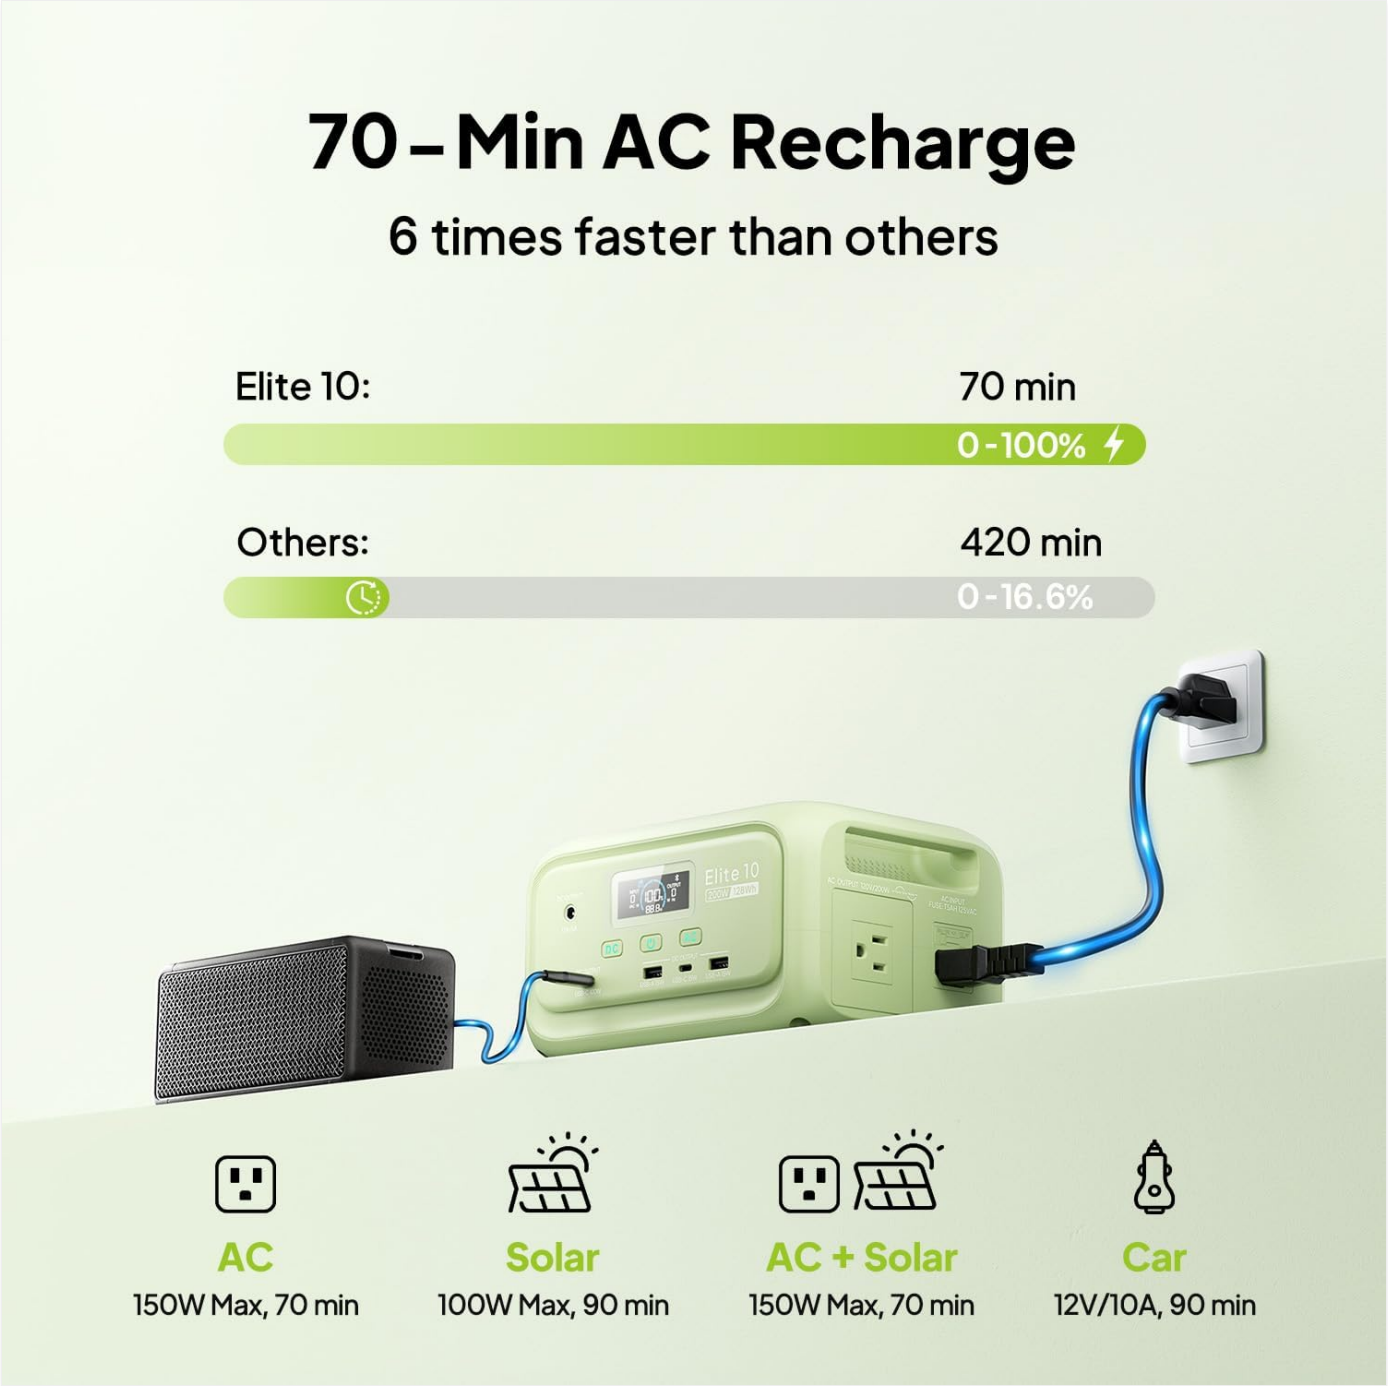


Figure 6: Various charging methods for the Elite 10.

6.5. Uninterruptible Power Supply (UPS) Function

When the Elite 10 is connected to an AC wall outlet and has devices plugged into its AC output, it can function as a UPS. In case of a power outage, the unit will automatically switch to battery power within 10 milliseconds, providing continuous power to connected devices up to 350W bypass output.

< 10ms UPS

Avoid data loss in outages



UPS
< 10ms



350W
Bypass



Figure 7: Illustration of the Elite 10's UPS capability.

6.6. LED Lighting

The LED light on the rear panel offers three modes: warm light, cool light, and SOS. Press the dedicated light button to cycle through modes or turn it off. The light can provide up to 50 hours of illumination.

6.7. Smart App Control

Download the BLUETTI app and connect to your Elite 10 via Bluetooth. The app allows you to monitor power status, customize charging modes, and adjust lighting settings remotely.

BLUETTI App Control

Power control in hand



Charging Mode



LED Light Control



Power Lifting



Eco Mode

 Bluetooth

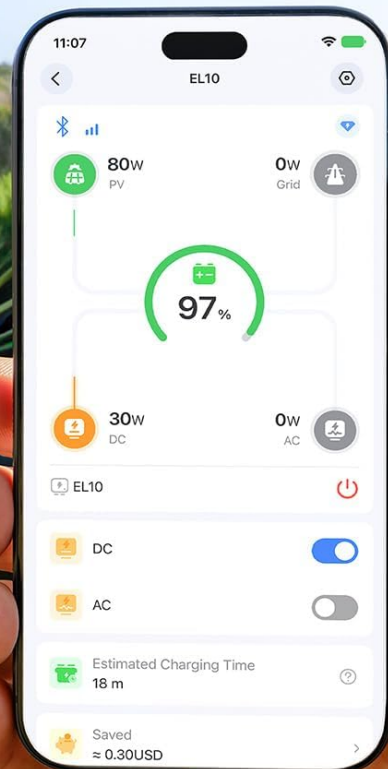


Figure 8: Managing the Elite 10 via the BLUETTI mobile application.

7. MAINTENANCE AND STORAGE

- **Cleaning:** Use a dry, soft cloth to clean the unit. Do not use abrasive cleaners or solvents.
- **Temperature:** Store and operate the unit within the recommended temperature range (typically 0°C to 40°C or 32°F to 104°F).
- **Long-Term Storage:** If storing for extended periods, charge the unit to 50-80% every 3-6 months to prolong battery life. Store in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your BLUETTI Elite 10, refer to the following common solutions:

- **Unit Not Turning On:** Ensure the battery is charged. If not, connect to an AC outlet for charging.
- **No Output from Ports:** Verify that the respective DC or AC output buttons are pressed and their indicators are lit. Check if the device connected requires more power than the unit can provide.




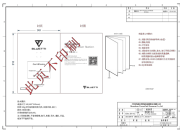
- For persistent issues, contact BLUETTI customer support.

Feature	Detail
Model	Elite 10
Battery Capacity	128Wh LiFePO4
AC Output	120V/200W (Pure Sine Wave)
USB-C Output	1 x 100W, 1 x 15W
USB-A Output	2 x 15W
DC Output	12V/5A
DC/PV Input	12-28V/8A, 100W Max
AC Charging Time	Approx. 70 minutes (150W Max)
UPS Function	10ms switchover, 350W bypass
Dimensions (L x W x H)	7.8" x 5.7" x 4.3" (19.8cm x 14.5cm x 11cm)
Weight	4.0 lbs (1.8 kg)

The BLUETTI Elite 10 Mini Portable Power Station comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official BLUETTI website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or any product-related inquiries, please contact BLUETTI customer service through their official channels.

[illegible]

<p>AC200L Portable Power Station</p> <p>User Manual v1.1</p> <p>BLUETTI</p>	<p>BLUETTI AC200L Portable Power Station User Manual</p> <p>User manual for the BLUETTI AC200L Portable Power Station, covering safety instructions, product overview, charging, discharging, settings, troubleshooting, and specifications.</p>
<p>BLUETTI EB55</p> <p>User Manual</p> 	<p>BLUETTI EB55 Portable Power Station User Manual</p> <p>User manual for the BLUETTI EB55 portable power station. Learn about safety, operation, specifications, charging methods (AC, PV, Car, Generator, Dual), discharging capabilities, and FAQs.</p>
<p>BLUETTI EB3A</p> <p>User Manual</p> 	<p>BLUETTI EB3A Portable Power Station User Manual</p> <p>Comprehensive user manual for the BLUETTI EB3A portable power station, covering safety, specifications, operation, charging methods, and troubleshooting. Learn how to use your EB3A for various power needs.</p>
<p>Elite 10 Portable Power Station</p> <p>User Manual v1.0</p> <p>Important instructions</p>  <p>BLUETTI</p>	<p>BLUETTI Elite 10 Portable Power Station User Manual</p> <p>Comprehensive user manual for the BLUETTI Elite 10 Portable Power Station, detailing its features, operation, charging methods, specifications, troubleshooting, and maintenance for optimal performance and longevity.</p>
	<p>BLUETTI Elite 200 V2 Portable Power Station User Manual</p> <p>Comprehensive user manual for the BLUETTI Elite 200 V2 Portable Power Station, covering safety, setup, operation, features, specifications, and troubleshooting.</p>