

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FlyFrost](#) /

› [FlyFrost 4K Digital Camera DC202 Instruction Manual](#)

**FlyFrost DC202**

# FlyFrost 4K Digital Camera DC202 Instruction Manual

Model: DC202

## 1. INTRODUCTION

Welcome to the FlyFrost 4K Digital Camera DC202. This compact and versatile camera is designed to capture high-quality photos and videos with ease. Featuring 4K video recording, 48MP photo resolution, 16X digital zoom, and anti-shake technology, it is suitable for various photography and vlogging needs. Please read this manual thoroughly to understand the camera's functions and ensure optimal performance.



Figure 1.1: FlyFrost 4K Digital Camera DC202 and included accessories.

## 2. PRODUCT OVERVIEW AND WHAT'S INCLUDED

The FlyFrost DC202 camera package includes everything you need to start capturing moments immediately.

### Package Contents:

- 1x FlyFrost 4K Digital Camera DC202
- 1x 32GB Micro SD Card
- 2x Rechargeable Lithium-Ion Batteries
- 1x USB Cable
- 1x Charging Plug (Adapter)
- 1x Lens Cap
- 1x Camera Pouch
- 1x Wrist Strap
- 1x User Manual

- 1x Cleaning Cloth



Figure 2.1: Detailed view of all components included with the camera.

## 3. SETUP

### 3.1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert a fully charged Lithium-Ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

### 3.2. Charging the Battery

Use the provided USB cable and charging plug to charge the camera battery. The charging indicator light will show the charging status.

### 3.3. SD Card Installation

1. Locate the SD card slot, usually near the battery compartment.
2. Insert the 32GB Micro SD card with the metal contacts facing the correct direction until it clicks into place.
3. To remove, press the card gently until it pops out.

## 4. OPERATING INSTRUCTIONS

### 4.1. Power On/Off

Press and hold the power button (usually on the top of the camera) to turn the camera on or off.

## 4.2. Taking Photos

1. Turn on the camera. The 2.8" LCD screen will display the live view.
2. Frame your shot using the LCD screen or the optical viewfinder.
3. Lightly press the shutter button to activate autofocus. The camera will focus on the subject.
4. Fully press the shutter button to capture the photo.



Figure 4.1: Demonstrating 48MP photo capture, autofocus, and 16X digital zoom.

## 4.3. Zoom Function

The camera features 16X digital zoom. Use the zoom controls (often a rocker switch or dedicated buttons) to zoom in or out on your subject. Note that digital zoom may reduce image quality compared to optical zoom.

## 4.4. Video Recording

1. Switch the camera to video mode (if applicable, via the mode dial or menu).
2. Press the video record button to start recording 4K video.
3. Press the button again to stop recording.



Figure 4.2: Illustrating 4K video quality and anti-shake feature.

#### 4.5. Anti-Shake Feature

The camera includes an anti-shake function to help stabilize your photos and videos, reducing blur caused by camera movement. This feature is particularly useful when shooting handheld or in challenging conditions.

#### 4.6. Low-Light Photography

The camera is equipped to handle low-light conditions, allowing you to capture clear images even in dimly lit environments. Adjusting settings like ISO or using the built-in flash (if available) can further enhance results.



Figure 4.3: Camera performance in low-light conditions.

#### 4.7. Using the Rotary Button and Menu

The intuitive rotary button allows for easy navigation through various camera modes and settings. Rotate the dial to select different functions such as photo mode, video mode, playback, and scene modes. Use the directional buttons and 'OK' button to adjust settings within each mode.

# QUITE INTUITIVE ROTARY BUTTON

Easy to operate in use



Figure 4.4: Rotary button and menu interface for various functions.

## 4.8. Advanced Features

- **Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button. Ideal for action shots.
- **Motion Detection:** The camera can automatically start recording when it detects movement.
- **Slow Motion:** Record videos in slow motion for dramatic effects.
- **Timed Shooting:** Set a delay (e.g., 2s, 5s, 10s) before a photo is taken, useful for self-portraits or group shots.
- **20 Filter Options:** Apply various creative filters directly to your photos.
- **Face Detection & Smile Capture:** Automatically detects faces and can capture a photo when a smile is detected.



Figure 4.5: Viewfinder functionality.

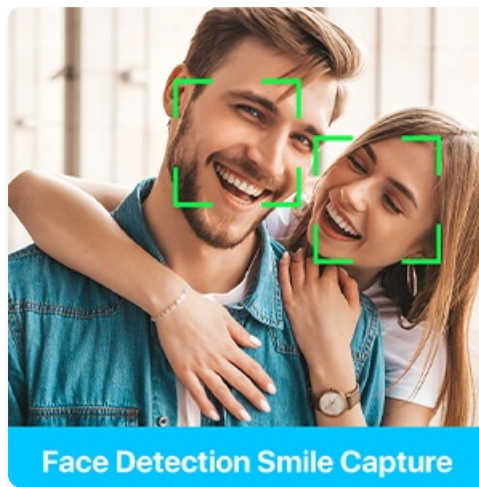 


Figure 4.6: Face Detection and Smile Capture in action.

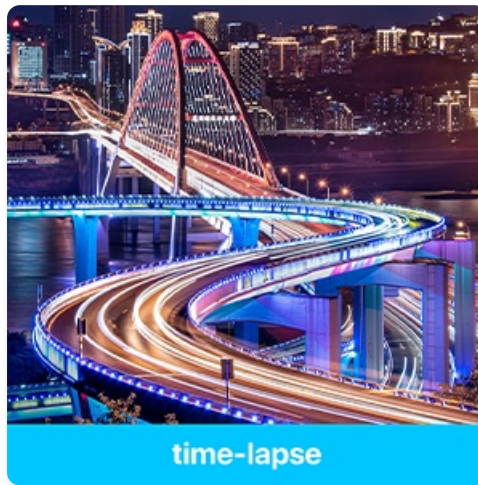 


Figure 4.7: Timed shooting options.




Continous Shooting

Figure 4.8: Continuous shooting for action sequences.



time-lapse

 Figure 4.9: Time-lapse photography example.

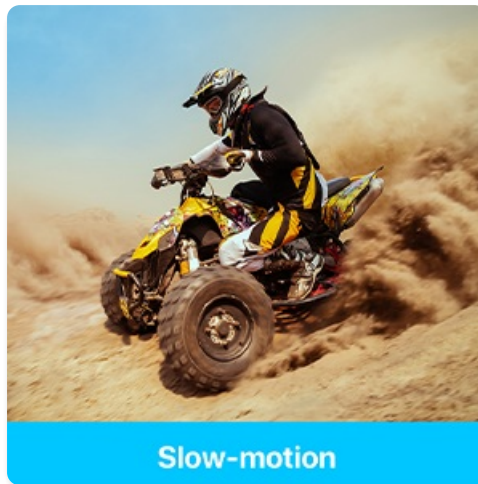

Slow-motion

Figure 4.10: Slow-motion video capture.

## 4.9. File Transfer

Connect the camera to a computer, smartphone, or tablet using the provided USB cable to transfer photos and videos. The camera will appear as a removable storage device.

Video 4.1: An overview of the FlyFrost 4K Digital Camera, highlighting its 48MP capabilities and features. This video demonstrates the camera's physical appearance and some of its core functionalities.

## 5. MAINTENANCE

### 5.1. Cleaning the Camera

- Use the provided cleaning cloth to gently wipe the camera body and LCD screen.
- For the lens, use a specialized lens cleaning solution and cloth to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

### 5.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Charge batteries fully before extended storage.

## 6. TROUBLESHOOTING

### Common Issues and Solutions:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Blurry images:** Check if autofocus is engaged. Ensure sufficient lighting. Clean the lens.
- **Memory card error:** Reinsert the SD card. Format the SD card (this will erase all data). Try a different SD card.
- **Camera freezes:** Remove and reinsert the battery to reset the camera.

If you encounter persistent issues, please refer to the warranty and support section.

## 7. SPECIFICATIONS

Feature	Specification
Brand	FlyFrost
Model Name	DC202
Maximum Webcam Image Resolution	48 MP
Photo Sensor Technology	CMOS
Supported File Format	JPG/AVI
Image Stabilization	Digital
Digital Zoom	16X
Screen Size	2.88 Inches
Display Type	LCD

Feature	Specification
Video Resolution	2160p (4K)
Battery Type	Lithium Ion
Memory Storage Capacity	32 GB (included)
Autofocus	Yes
Connectivity Technology	USB
Color	Brown

## 8. WARRANTY AND SUPPORT

### 8.1. Manufacturer's Warranty

This FlyFrost DC202 camera comes with a 1-Year Manufacturer's Warranty. Please retain your proof of purchase for warranty claims.

### 8.2. Customer Support

For any questions, technical assistance, or warranty inquiries, please contact the seller or manufacturer through the platform where the product was purchased.