

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BESTTAB](#) /

› [BESTTAB T60 12-Inch Tablet User Manual](#)

BESTTAB T60

BESTTAB T60 12-Inch Tablet User Manual

Model: T60

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your BESTTAB T60 12-inch Android 16 Tablet. The T60 is designed for versatile use, featuring a 12.2-inch 2.5K display, 48GB RAM, 256GB internal storage (expandable up to 2TB), an Octa-Core T7280 processor, and a 10000mAh battery. It runs on the Android 16 operating system and includes accessories such as a keyboard, mouse, and stylus to enhance productivity and entertainment.

2. WHAT'S IN THE BOX

Upon unboxing your BESTTAB T60 tablet, please ensure all the following items are present:

- BESTTAB T60 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- Stylus
- Screen Protector
- Protective Case
- USB-C Charging Cable
- 18W Fast Charger

Android 16 System: Smarter, Smoother & Safer



Privacy &
Security Enhanced
(50% Stronger)



Performance & Stability
Deep Optimized



Battery Life
Longer Lasting



Personalized Settings
Smart Version

AI Features
(AI Image Editing)



Image: All items included in the BESTTAB T60 package.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet using the provided 18W fast charger and USB-C cable. Connect the USB-C cable to the tablet's charging port and the charger to a power outlet. The battery indicator on the screen will show charging progress.

3.2 Powering On/Off

- To power on: Press and hold the power button located on the side of the tablet until the screen lights up.
- To power off: Press and hold the power button, then select "Power off" from the options that appear on the screen.
- To restart: Press and hold the power button, then select "Restart" from the options.

3.3 Initial Configuration

Follow the on-screen prompts to complete the initial setup, which includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring security features like Face ID.

3.4 Connecting Accessories

The BESTTAB T60 comes with a Bluetooth keyboard, wireless mouse, and stylus. To connect them:

1. **Bluetooth Keyboard/Mouse:** Turn on the accessory. Go to **Settings > Connected devices > Bluetooth** on your tablet. Enable Bluetooth and select the accessory from the list of available devices to pair.
2. **Stylus:** The stylus typically connects automatically or requires a simple pairing process via Bluetooth, similar to the keyboard and mouse. Refer to the stylus's specific instructions if needed.

Android 16 System



48(12+36)GB RAM + 256GB ROM



16MP+8MP



10000 mAh



T7280



TÜVRheinland CERTIFIED



GPS+ GLONASS+Galileo+ Beidou



Face Unlock



3 in 1 Tablet



Image: The BESTTAB T60 tablet configured with its keyboard and mouse accessories, ready for use.

4. OPERATING INSTRUCTIONS

4.1 Navigating the Android 16 Interface

Your tablet runs on Android 16, offering an intuitive user experience. Swipe up from the bottom to access the app drawer, swipe down from the top for quick settings and notifications. Use gestures or the navigation bar for Home, Back, and Recent Apps functions.

4.2 Split-Screen Operation

To use two applications simultaneously, open one app, then swipe up slightly from the bottom of the screen and hold to reveal the recent apps. Drag the desired second app to one side of the screen to activate split-screen mode. This allows for multitasking, such as video calls while viewing documents.



Google Smart AI Lens, Lens as Encyclopedia

Translate the text you see



Identify unknown animals/plants

Take action on text

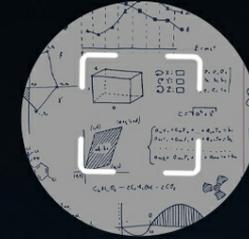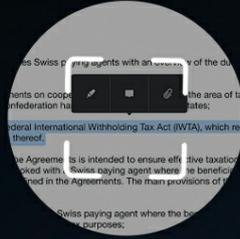

Solving homework queries

Explore mysterious buildings



Image: A user demonstrating the split-screen feature on the BESTTAB T60 tablet.

4.3 Camera Usage

The tablet features a 16MP rear camera and an 8MP front camera. Open the Camera app to capture photos and videos. Tap the screen to focus, and use the on-screen controls to switch between modes (photo, video, portrait) and adjust settings.

90Hz AdaptiveSync Display



Widevine L1 2.5K Display

Image: Close-up of the dual rear cameras on the BESTTAB T60 tablet.

4.4 Connectivity (5G WiFi & 4G LTE)

Connect to the internet via 5G WiFi or 4G LTE (if a SIM card is installed). Access these settings through **Settings** > **Network & internet**. For 4G LTE, ensure your SIM card is correctly inserted into the tablet's SIM tray.

4.5 Gemini AI 2.0 Features

Leverage the integrated Gemini AI 2.0 for enhanced productivity. This includes AI-powered optimization for workflows, converting voice memos to reports, and enhancing low-light photos. The Google Smart AI Lens can translate text, identify objects, and assist with homework queries.



Image: Overview of key features including AI capabilities and connectivity options.

5. MAINTENANCE

5.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.

5.2 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal long-term health. Use only the provided charger or a certified compatible charger.

5.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

6. TROUBLESHOOTING

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger and wait a few minutes before attempting to power it on again. If it still doesn't turn on, try holding the power button for 10-15 seconds.
- **Slow performance:** Close unused applications, clear cache, or restart the tablet. Ensure you have sufficient free storage space.
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Forget the network in tablet settings and reconnect. Ensure you are within range of the Wi-Fi signal.
- **Accessories not connecting:** Ensure Bluetooth is enabled on the tablet and the accessory is in pairing mode. Check battery levels of the accessories.
- **Screen not responding:** Restart the tablet. If the issue persists, perform a factory reset (backup data first).

7. SPECIFICATIONS

Feature	Detail
Brand	BESTTAB

Feature	Detail
Model Name	T60
Operating System	Android 16
Screen Size	12.2 Inches
Screen Resolution	2400 x 1600 Pixels (2.5K)
RAM	48 GB (12GB Physical + 36GB Expansion)
Memory Storage Capacity	256 GB (Expandable to 2 TB via TF card)
Processor	Unisoc T7280 Octa-Core (up to 2.2GHz)
Graphics Coprocessor	Mali GPU (850MHz)
Rear Webcam Resolution	16 MP
Front Webcam Resolution	8 MP
Battery Capacity	10000 mAh
Charging	18W Fast Charging
Wireless Type	802.11ac (5G WiFi), 4G LTE
Dimensions (LxWxH)	27.7 x 19.1 x 0.8 inches
Item Weight	3.3 pounds
Color	Black

8. WARRANTY AND SUPPORT

The BESTTAB T60 tablet comes with a 4-year warranty. For any technical assistance, troubleshooting, or warranty claims, please contact BESTTAB customer support. Refer to the warranty card included in your package for specific terms and contact information. 24/7 CA support is available for all potential problems.

9. PRODUCT VIDEOS

Your browser does not support the video tag.

Video: An overview of the BESTTAB T60 tablet, highlighting its key features such as the 12.2-inch 2.5K display, Android 16 operating system, 48GB RAM, 256GB storage, T7280 Octa-Core processor, 10000mAh battery, 16MP dual camera, 5G WiFi, and included accessories.

