

## Moukey MPS5

# Moukey MPS5 Portable Karaoke Machine User Manual

Model: MPS5  
Brand: Moukey

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Moukey MPS5 Portable Karaoke Machine. Please read this manual thoroughly before operating the device and retain it for future reference. The MPS5 is a versatile portable speaker system designed for various audio playback needs, including karaoke, music streaming, and public address, featuring wireless microphones and multiple connectivity options.

## 2. WHAT'S IN THE BOX

Carefully unpack all items from the box. Ensure all components listed below are present and in good condition.

- Moukey MPS5 Portable Karaoke Machine (1 unit)
- Wireless Microphones (2 units)
- USB Charging Cable (1 unit)
- 3.5mm AUX Cable (1 unit)
- Shoulder Strap (1 unit)
- User Manual (1 unit)




*Image: All components included in the Moukey MPS5 package.*

### **3. PRODUCT OVERVIEW**

The Moukey MPS5 is a compact yet powerful portable karaoke machine. It features a robust design with integrated LED lighting on the sides, enhancing the user experience. A sturdy handle and an included shoulder strap provide convenient portability.

# STABLE TWS PAIRING


Enjoy Lag-Free, High-Fidelity Stereo Sound  
Up to 8 Meters/ 26 Feet

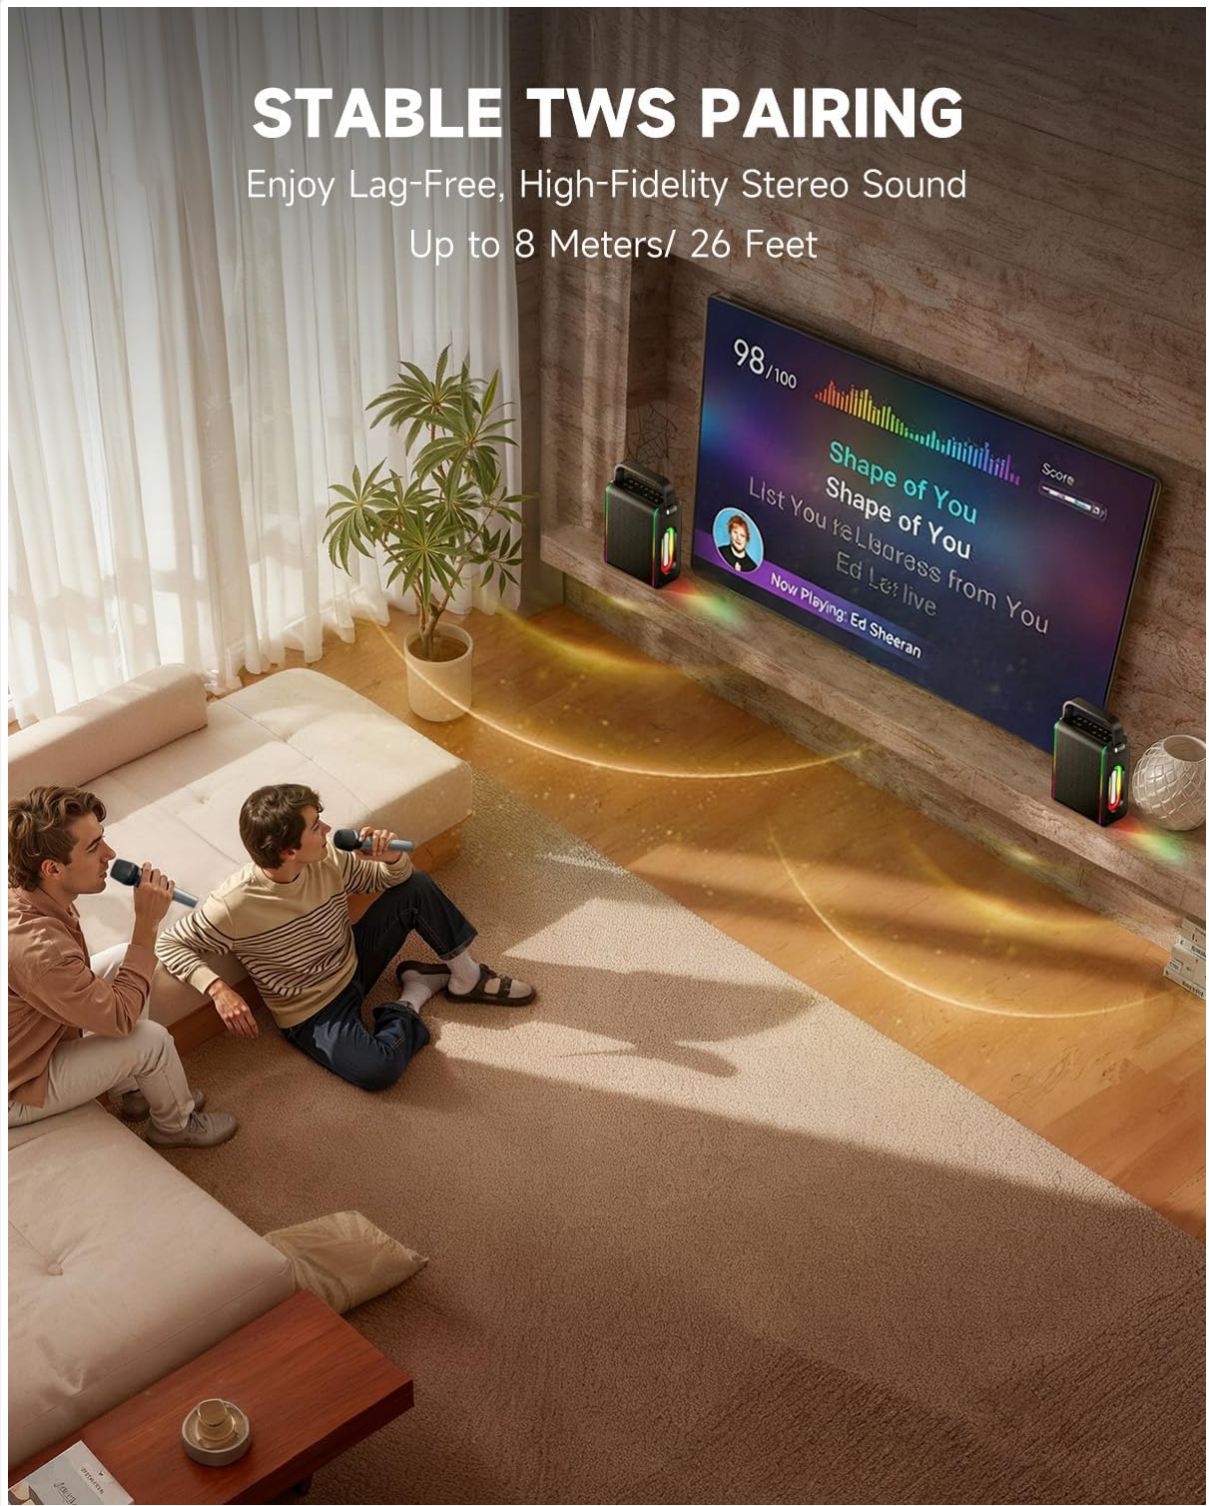 

*Image: Front view of the Moukey MPS5 speaker.*

# 200W PEAK POWER

Covering 10000 Square Feet

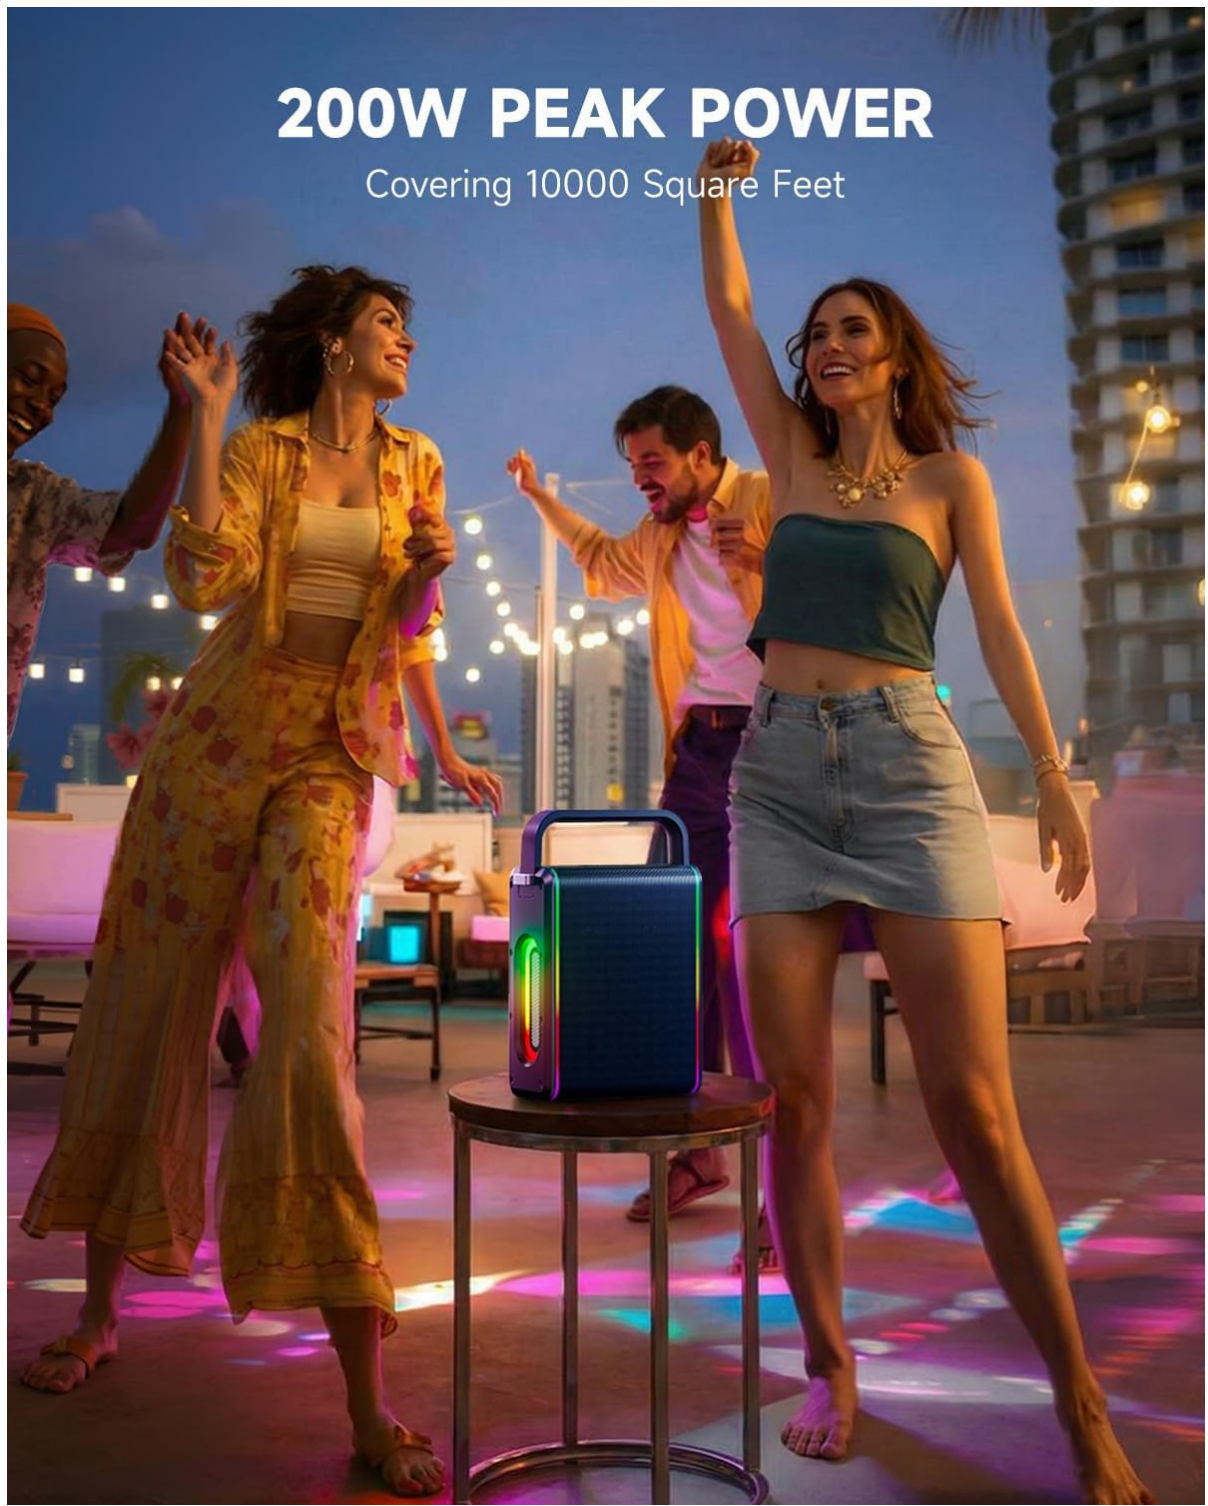 

*Image: Side view of the Moukey MPS5, showing the LED lighting.*

## 4. KEY FEATURES

- **Excellent Sound Output:** The MPS5 delivers 200W peak power (RMS 60W) through a 4-inch woofer and two 2-inch tweeters, providing full-range stereo sound with enhanced bass.



*Image: Internal speaker components of the MPS5.*

- **Powerful Functionality:** Supports Bluetooth 5.3 for wireless connection to various devices. Also includes Micro TF card, Flash USB, MP3, and AUX IN playback options. Features stable TWS (True Wireless Stereo) pairing for connecting two MPS5 units for a wider stereo soundstage.



*Image: MPS5 connected to multiple devices via Bluetooth.*

- **Ultra-Long Battery Life:** The rechargeable battery provides up to 8 hours of continuous music playback on a 2-hour charge, suitable for extended use indoors or outdoors.



*Image: Battery life and charging details for the MPS5.*

- **Lightweight & Portable Design:** Weighing only 2kg, the MPS5 is designed for easy transport. It can be carried by hand using the integrated handle or with the included shoulder strap.




- Effortless Control With A Single Touch
- Simple operation for a seamless music experience

- Multiple connection interfaces
- Support multiple device connections and outputs

*Image: Demonstrating the portability of the MPS5 with hand and shoulder strap options.*

 - **Dual Wireless Microphones:** Includes two 2.4Ghz rechargeable microphones with a connection range of up to 60 feet and up to 8 hours of use time per charge (2-3 hours charging time). Features one-tap connectivity for effortless pairing.

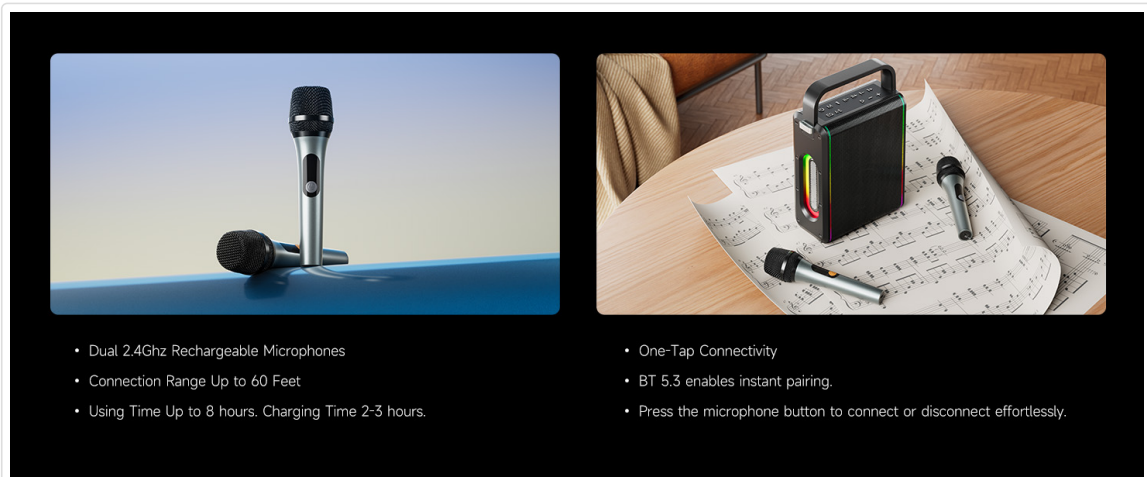

- Dual 2.4Ghz Rechargeable Microphones
- Connection Range Up to 60 Feet
- Using Time Up to 8 hours. Charging Time 2-3 hours.

- One-Tap Connectivity
- BT 5.3 enables instant pairing.
- Press the microphone button to connect or disconnect effortlessly.

*Image: The two wireless microphones for the MPS5.*

## 5. SETUP

### 5.1 Charging the Speaker and Microphones

Before first use, fully charge the MPS5 speaker and both wireless microphones.

- **Speaker:** Connect the provided USB Type-C cable to the charging port on the speaker and to a compatible USB power adapter (not included). The charging indicator light will show charging status. A full charge takes approximately 2 hours.
- **Microphones:** Each microphone has a charging port. Connect them to a USB power source using the provided USB cable. Charging time for microphones is 2-3 hours.

### 5.2 Power On/Off

- To power on the speaker, press and hold the power button (U) on the top panel for 2 seconds.
- To power off, press and hold the power button (U) again for 2 seconds.

### 5.3 Bluetooth Pairing

1. Ensure the MPS5 speaker is powered on and in Bluetooth mode (indicated by a blue LED). If not,

press the 'M' (Mode) button to switch to Bluetooth mode.

2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'Moukey MPS5' from the list of devices to pair. A voice prompt will confirm successful connection.

## 5.4 TWS (True Wireless Stereo) Pairing

To achieve stereo sound, you can pair two Moukey MPS5 speakers together.

1. Ensure both MPS5 speakers are powered on and in Bluetooth mode, but not connected to any other device.
2. On one of the speakers, double-press the 'M' (Mode) button. The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. A voice prompt will confirm successful TWS pairing.
4. Once TWS is established, connect your mobile device to one of the MPS5 speakers via Bluetooth as described in section 5.3. Both speakers will then play audio in stereo.

Your browser does not support the video tag.

*Video: A quick overview of the MPS5 Karaoke Machine, demonstrating TWS pairing and other features.*

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Controls Overview

The top panel of the MPS5 speaker features several buttons for controlling playback, volume, and microphone settings.

# SMALL BOX, POWERFUL SOUND

Portable BT Speaker



RMS 60W



4" Woofer



2x2" tweeter



Dual Diaphragms Bass



Punchy Beats



*Image: Top control panel of the MPS5.*

- **Power Button (U)**: Press and hold for 2 seconds to power on/off.
- **Mode Button (M)**: Short press to cycle through input modes (Bluetooth, AUX, USB, TF Card). Double-press to initiate TWS pairing.
- **Microphone Volume (Mic - / Mic +)**: Adjusts the volume of the connected microphones.
- **Echo Adjustment (R- / R+)**: Adjusts the echo effect for the microphones.
- **Play/Pause (▶)**: Plays or pauses the current track.
- **Volume Down (-)**: Decreases the main speaker volume.
- **Volume Up (+)**: Increases the main speaker volume.
- **EQ A/E**: Short press to switch between EQ modes. Long press to toggle between original sound and accompaniment elimination.

## 6.2 Microphone Usage

The MPS5 comes with two wireless microphones for karaoke and vocal performances.

- **Power On/Off:** Press and hold the power button on the microphone to turn it on or off.
- **Pairing:** The microphones are pre-paired with the speaker. If re-pairing is needed, ensure the speaker is on, then power on the microphone. They should connect automatically.
- **Microphone Disconnect/Reconnect:** Press the dedicated microphone button on the speaker's control panel to quickly disconnect or reconnect the microphones.

## 6.3 Audio Input Modes

In addition to Bluetooth, the MPS5 supports several wired and local storage input options.

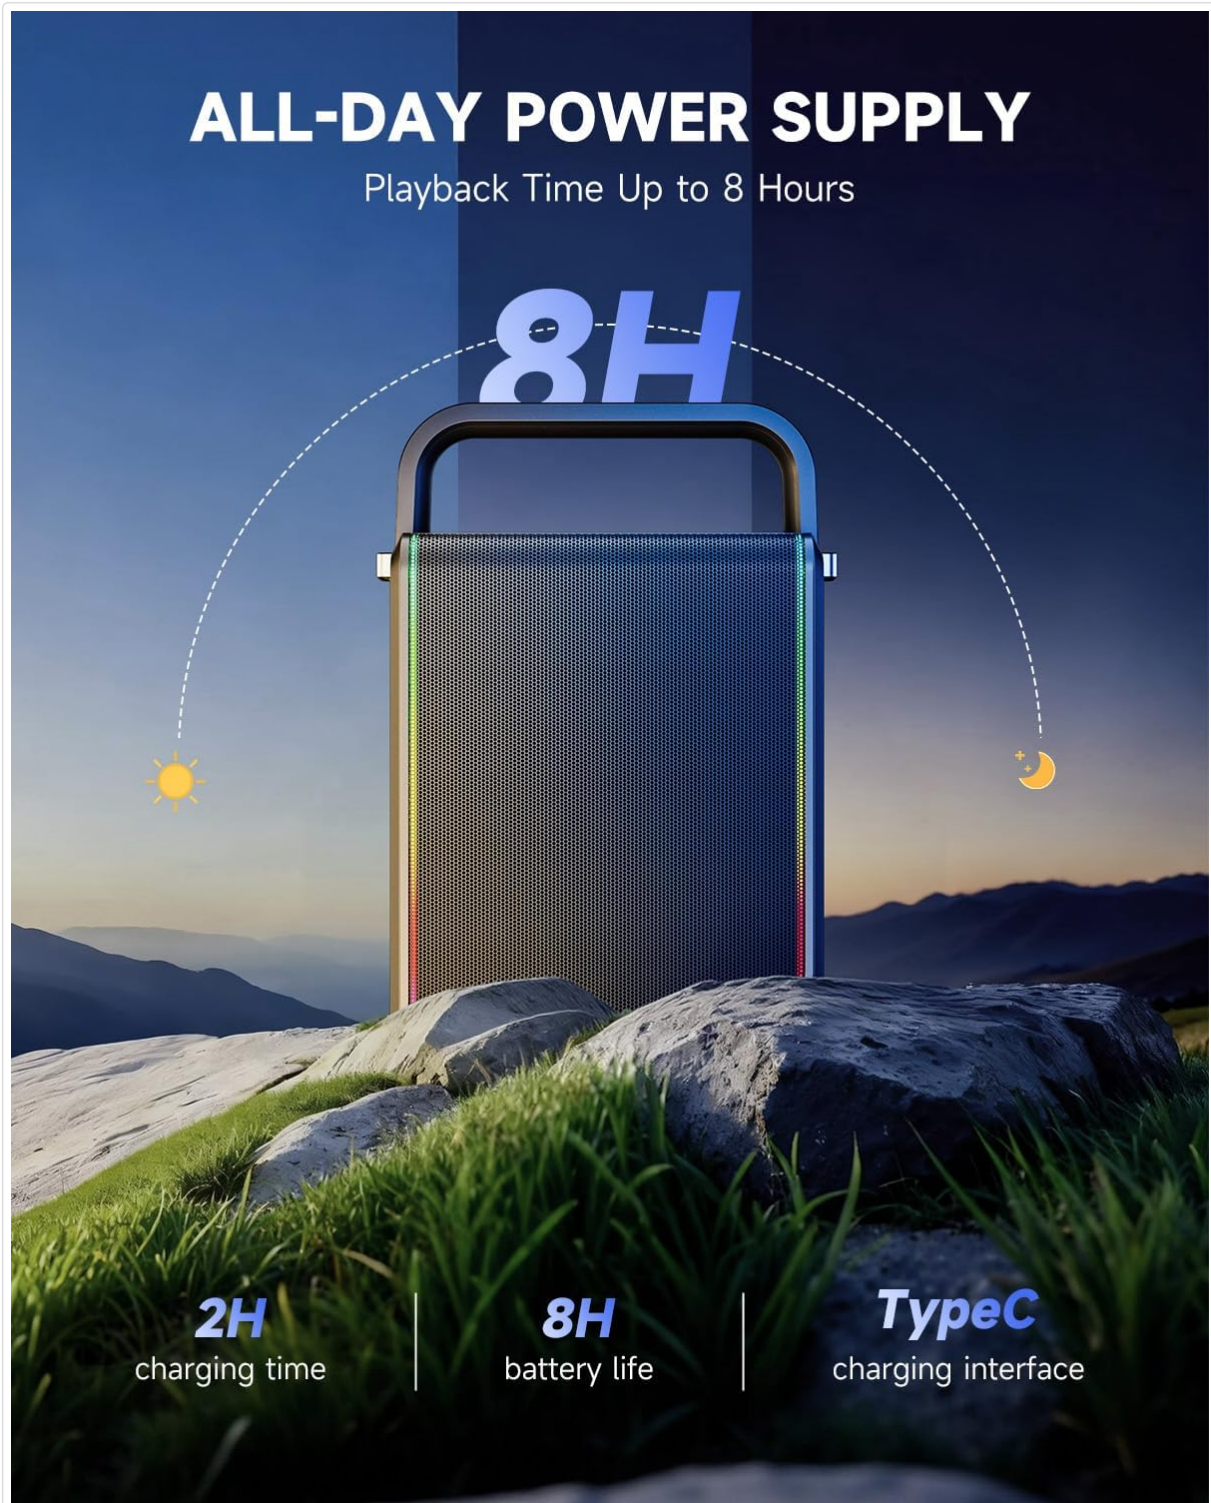


Image: Input ports on the MPS5 speaker.

- **AUX Input:** Connect an external audio device using the 3.5mm AUX cable. Select AUX mode using the 'M' button.
- **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically switch to USB mode and begin playback.
- **TF Card Playback:** Insert a Micro TF card containing MP3 audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.

## 6.4 LED Lighting

The MPS5 features dynamic LED lighting on its sides. Use the dedicated LED button (if available, or refer to the 'M' button for light control if combined) to cycle through different light modes or turn them off.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## 8. TROUBLESHOOTING

If you encounter issues with your Moukey MPS5, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker using the provided USB Type-C cable.
No sound from speaker	Volume is too low or muted. Incorrect input mode selected.	Increase volume using the '+' button. Press 'M' to cycle through input modes.
Bluetooth pairing failed	Speaker is not in pairing mode. Device is too far.	Ensure speaker is in Bluetooth mode. Move device closer to speaker. Try restarting both devices.
Microphone not working	Microphone is off or uncharged. Microphone is disconnected.	Ensure microphone is charged and powered on. Press the microphone button on the speaker to reconnect.
TWS pairing failed	Speakers are already connected to another device.	Ensure both speakers are not connected to any other Bluetooth device before initiating TWS pairing.

## 9. SPECIFICATIONS

- **Brand:** Moukey
- **Model Number:** MPS5

- **Output Wattage:** 200 Watts (Peak)
- **Connectivity Technology:** Bluetooth 5.3
- **Audio Input:** Bluetooth, TF card, USB, MP3, AUX, Wired microphones
- **Number of Channels:** 2
- **Power Source:** Battery Powered
- **Connector Type:** USB Type C
- **Item Dimensions (L x W x H):** 2.36 x 6.3 x 12.2 inches
- **Item Weight:** Approximately 2 kg
- **Compatible Devices:** Smartphone, Tablet, Laptop, MP3 Player, Microphone
- **Color:** Black with Silver Accents

## 10. WARRANTY & SUPPORT

---

The Moukey MPS5 Portable Karaoke Machine comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact Moukey customer service through the retailer where the product was purchased or visit the official Moukey website for contact information.