

Parrot Uncle BBD3012

Parrot Uncle Flush Mount Ceiling Light Instruction Manual

Model: BBD3012

INTRODUCTION

Thank you for choosing the Parrot Uncle Flush Mount Ceiling Light, Model BBD3012. This vintage-style ceiling fixture is designed to provide versatile illumination with its adjustable color temperature feature, suitable for various indoor spaces such as dining rooms, bedrooms, living rooms, and kitchens. This manual provides essential information for safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury to persons, please read and follow all warnings and instructions carefully.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installing or servicing.
- All electrical connections must be in accordance with local codes and ordinances, and the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.
- This fixture is intended for indoor use only. Do not install in wet locations.
- Ensure the mounting surface is structurally sound and can support the weight of the fixture.
- Do not connect this fixture to a dimmer switch. The color temperature adjustment is controlled by a standard wall switch.
- Do not attempt to modify the fixture or its components.
- Wear safety glasses and gloves during installation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer service for assistance.

- Flush Mount Ceiling Light Fixture (1)
- Mounting Bracket (1)
- Wire Nuts (3)
- Mounting Screws (2)
- Junction Box Screws (2)
- Instruction Manual (1)

SETUP AND INSTALLATION

Pre-Installation

1. **Turn off power:** Before starting installation, ensure the power to the circuit is turned off at the main fuse box or circuit breaker.
2. **Prepare the area:** Clear the work area and gather all necessary tools (screwdriver, wire strippers, electrical tape, safety glasses).
3. **Unpack contents:** Carefully remove all parts from the packaging and place them on a clean, soft surface to prevent scratches.

Installation Steps

1. **Attach Mounting Bracket:** Secure the mounting bracket to the junction box in the ceiling using the provided junction box screws. Ensure the bracket is firmly attached.



Image: The underside of the light fixture, showing the mounting points and the central LED panel. This image helps visualize where the mounting bracket would attach.

2. **Make Electrical Connections:**

- Connect the **black** wire from the fixture to the **black** (live) wire from the junction box using a wire nut.

- Connect the **white** wire from the fixture to the**white** (neutral) wire from the junction box using a wire nut.
- Connect the **ground** wire (bare copper or green) from the fixture to the**ground** wire from the junction box (or to the green ground screw on the mounting bracket) using a wire nut.

Ensure all wire nuts are securely tightened.

- 3. Tuck Wires:** Carefully tuck all wires into the junction box, ensuring no wires are pinched.
- 4. Attach Fixture to Mounting Bracket:** Align the fixture with the mounting bracket and secure it using the provided mounting screws. Tighten the screws until the fixture is flush with the ceiling.



Image: The Parrot Uncle flush mount ceiling light installed in a dining room, demonstrating its appearance when mounted.

- 5. Restore Power:** Once the installation is complete and secure, restore power at the main fuse box or circuit breaker.
- 6. Test Fixture:** Turn on the wall switch to test the light fixture.

OPERATING INSTRUCTIONS

This Parrot Uncle Flush Mount Ceiling Light features an integrated LED board with three adjustable color temperatures (3000K, 4500K, 6000K). The color temperature is controlled by cycling your standard wall switch.

- 1. Turn On:** Flip the wall switch to the "ON" position. The light will illuminate at its last selected color temperature. If it's the first use, it will typically default to 3000K (Warm White).



Image: The ceiling light emitting a warm white glow, suitable for cozy environments (3000K).

- 2. Change Color Temperature:** To cycle through the color temperatures (3000K Warm White, 4500K Neutral White, 6000K Cool White), quickly flip the wall switch "OFF" and then "ON" again within 1-2 seconds. Each toggle will advance to the next color temperature.



Image: The ceiling light emitting a neutral white glow, ideal for general tasks (4500K).



Image: The ceiling light emitting a cool white glow, suitable for bright task lighting (6000K).

- 3. Memory Function:** The fixture includes a memory function that will recall the last selected color temperature when turned off for more than 5 seconds and then turned back on.
- 4. No Dimmer Required:** This fixture is not compatible with dimmer switches. The brightness is fixed at 1170 lumens, and color temperature is adjusted via the wall switch.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your lighting fixture.

- Cleaning:** Always disconnect power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the exterior of the fixture. Do not use harsh chemicals, abrasive cleaners, or polishes as they may damage the finish or acrylic shade.
- Bulb Replacement:** This fixture uses an integrated LED light source and does not require bulb replacement.
- Inspection:** Periodically check all electrical connections and mounting hardware for tightness.

TROUBLESHOOTING

If you experience issues with your fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none"> Power is off at the circuit breaker. Loose wire connections. Faulty wall switch. 	<ul style="list-style-type: none"> Check the circuit breaker and ensure power is on. Turn off power, check all wire connections. Test the wall switch with another device or consult an electrician.
Light flickers or dims.	<ul style="list-style-type: none"> Loose wire connections. Incompatible dimmer switch (fixture is non-dimmable). 	<ul style="list-style-type: none"> Turn off power, check all wire connections. Ensure the fixture is connected to a standard ON/OFF switch, not a dimmer.
Color temperature does not change.	<ul style="list-style-type: none"> Switching too slowly or too quickly. Internal LED driver issue. 	<ul style="list-style-type: none"> Ensure you are flipping the wall switch OFF and ON within 1-2 seconds. If the issue persists, contact customer support.

SPECIFICATIONS

Brand	Parrot Uncle
Model Name	Flush Mount Ceiling Light
Model Number	BBD3012
Product Dimensions	17.5" L x 17.5" W x 3.7" H (44.45 cm L x 44.45 cm W x 9.4 cm H)
Material	Iron, Resin, Acrylic
Color	Vintage White with Gold Accents
Light Source Type	Integrated LED
Wattage	18 Watts
Brightness	1170 Lumens
Color Temperatures	3000K (Warm White), 4500K (Neutral White), 6000K (Cool White)
Voltage	120 Volts
Installation Type	Flush Mount

Indoor/Outdoor Usage	Indoor Use Only
Special Feature	Adjustable Color Temperature (via wall switch)

WARRANTY AND CUSTOMER SUPPORT

This Parrot Uncle lighting fixture comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, missing parts, or warranty claims, please contact the manufacturer, Eileen Grays LLC, or your retailer.

Manufacturer: Eileen Grays LLC

For support, please visit the [Parrot Uncle Store on Amazon](#) or contact your point of purchase.