



Manuals.plus /

› AREYZIN /

› AREYZIN 2-in-1 Facial Hair Trimmer User Manual

AREYZIN B0FS72MTFG

AREYZIN 2-in-1 Facial Hair Trimmer User Manual

Model: B0FS72MTFG

INTRODUCTION

Thank you for choosing the AREYZIN 2-in-1 Facial Hair Trimmer. This device is designed for effective and comfortable removal of unwanted hair from various facial areas. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

SAFETY INFORMATION

- Keep the device out of reach of children.
- Do not use the device on irritated, damaged, or infected skin. Consult a doctor if you have any skin conditions.
- Avoid direct contact with eyes.
- Do not immerse the main body of the device in water. The trimmer heads are washable, but the main unit is not.
- Use only the provided charging cable or a certified USB-C cable for charging.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Store the device in a cool, dry place when not in use.

PACKAGE CONTENTS

Verify that all items are present in your package:

- AREYZIN 2-in-1 Facial Hair Trimmer (Main Unit)
- Eyebrow Trimmer Head
- Facial Trimmer Head
- USB-C Charging Cable
- Cleaning Brush
- User Manual

PRODUCT OVERVIEW

The AREYZIN 2-in-1 Facial Hair Trimmer features two interchangeable heads for versatile hair removal. The device is designed for portability and ease of use.

2-IN-1 Eyebrow Trimmer

Facial Hair Remover for Women

For Eyebrow

For Facial

3mm

5mm

No Cut-Safe and Clean

No Pain - Skin Friendly

Charging USB A to C

Image: The AREYZIN 2-in-1 Facial Hair Trimmer, illustrating its dual functionality with both the precision eyebrow trimmer head and the wider facial hair remover head. Includes 3mm and 5mm comb attachments for the facial trimmer.

- **Eyebrow Trimmer Head:** For precise shaping and removal of eyebrow hair, as well as hair in the nose and ear areas.

- **Facial Trimmer Head:** For removing peach fuzz, upper lip hair, and other fine facial hair.
- **USB-C Charging Port:** Convenient and universal charging.
- **Power Button:** Activates and deactivates the device.

SETUP

1. Charging the Device

Before first use, fully charge the trimmer. Connect the USB-C charging cable to the port at the bottom of the device and plug the other end into a USB power source (e.g., laptop, power bank, USB charger). The indicator light will show charging status.

USB CHARGING & RECHARGEABLE

Only USB-A to USB Type-C



Laptop



Power Bank



USB charger



USB-A to C
Rechargeable



2 Hour
Charging



90 Mins
Running

Image: Close-up of the AREYZIN trimmer's USB-C charging port, illustrating how to connect the USB-C cable for charging from various sources like a laptop or power bank. A red indicator light is visible, signifying charging.

- Charging Time: Approximately 2 hours for a full charge.
- Operating Time: Up to 90 minutes of continuous use on a full charge.

2. Attaching/Changing Trimmer Heads

The device comes with two interchangeable heads: one for eyebrows and one for facial hair. To change heads:

1. Ensure the device is turned off.
2. Gently twist the current head counter-clockwise to unlock and remove it.
3. Align the desired head with the main unit and twist clockwise until it clicks into place.

Eyebrow Trimmer



Eyebrow



Nose



Ear



2-IN-1

Facial Trimmer



Eyebrow



Face



Lip



Image: The AREYZIN 2-in-1 trimmer displaying its two distinct heads: a precision eyebrow trimmer and a wider facial trimmer, indicating their specific uses for different facial areas like eyebrows, nose, ears, face, and lips.

General Use

1. Ensure your skin is clean and dry before use.
2. Press the power button to turn on the device.
3. Hold the trimmer at a slight angle against the skin.
4. Move the trimmer gently and slowly against the direction of hair growth.
5. Do not apply excessive pressure.
6. After use, press the power button to turn off the device.

Using the Eyebrow Trimmer Head

This head is ideal for shaping eyebrows, removing stray hairs, and trimming hair in sensitive areas like the nose and ears.

Eyebrow Trimmer

Painless and Quick to Shape Your Beautiful Eyebrows



Image: A woman demonstrating the use of the AREYZIN Eyebrow Trimmer head to precisely shape and remove unwanted hair from her eyebrows, highlighting its painless and quick operation.

- For eyebrows, gently glide the trimmer along the desired shape.
- For longer eyebrow hairs, use the included comb attachments (3mm or 5mm) to trim to an even length.
- For nose and ear hair, carefully insert the trimmer head no more than 5mm into the nostril/ear canal and move in a circular motion.

Using the Facial Trimmer Head

Use this head for larger areas of fine facial hair, such as peach fuzz on cheeks, chin, or upper lip.

- Stretch the skin taut with one hand.
- Move the trimmer in small, gentle strokes against the direction of hair growth.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your trimmer.

Design Waterproof

— .
IPX7 Washable and Easy to Clean



Rotate counterclockwise
and remove the head



Rinse with water



Dry and Install Clockwise



Image: Step-by-step guide for cleaning the AREYZIN trimmer head. It shows rotating the head counter-clockwise to remove it, rinsing the detached head under water, and then drying and re-installing it clockwise.

1. **Turn Off Device:** Always ensure the trimmer is turned off before cleaning.
2. **Remove Trimmer Head:** Twist the head counter-clockwise and pull it off.
3. **Clean with Brush:** Use the provided cleaning brush to remove any loose hairs from the trimmer head and the main unit's connection point.
4. **Rinse Head:** The trimmer heads are washable. Rinse them under running water. Do NOT rinse the main body of the device.

5. **Dry Thoroughly:** Allow the trimmer head to air dry completely before reattaching it to the main unit.

6. **Reattach Head:** Align the dry head and twist clockwise until it locks.

Storage: Store the trimmer in a dry place, away from direct sunlight and extreme temperatures. The compact size makes it ideal for travel.



4.7 Inch

**PORTABLE
FOR GOING OUT**

Image: The AREYZIN Facial Hair Trimmer, measuring 4.7 inches, shown being easily stored in a small handbag alongside other personal items, emphasizing its compact and portable design for on-the-go use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted.	Charge the device for at least 2 hours.
Trimmer performance is weak.	Battery is low. Trimmer head is clogged with hair.	Recharge the device. Clean the trimmer head thoroughly with the brush and rinse.
Hair is not being removed effectively.	Trimmer head is dirty or damaged. Incorrect technique.	Clean the trimmer head. If damaged, replace it. Ensure you are moving the trimmer gently against the direction of hair growth.
Skin irritation after use.	Skin was not clean/dry. Excessive pressure applied. Device used on irritated skin.	Ensure skin is clean and dry. Use gentle strokes. Do not use on irritated or damaged skin.

SPECIFICATIONS

- **Model:** B0FS72MTFG
- **Brand:** AREYZIN
- **Power Source:** Rechargeable USB-C
- **Charging Time:** Approximately 2 hours
- **Operating Time:** Up to 90 minutes
- **Motor Speed:** 9000 RPM
- **Blade Material:** Stainless Steel
- **Water Resistance:** IPX7 (Trimmer heads only, main unit is not waterproof)
- **Recommended Uses:** Grooming, Trimming (peach fuzz, ears, eyebrows, lips, face)
- **Color:** White
- **Dimensions:** Approximately 4.7 inches in length

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official AREYZIN website. Do not attempt to repair the device yourself, as this may void your warranty.

For further assistance, please contact:

- **AREYZIN Customer Service:** [Insert Customer Service Contact Information Here, e.g., email, phone, website]

