

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› **THINK 30** /

› **THINK 30 Wood Dining Table Set for 6, Model 089 - Instruction Manual**

THINK 30 089

THINK 30 Wood Dining Table Set for 6, Model 089

Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and care of your THINK 30 Wood Dining Table Set, Model 089. Please read this manual thoroughly before assembly and use to ensure safe and proper handling of the product. Keep this manual for future reference.

SAFETY INFORMATION

- Do not overload the table or chairs beyond their weight capacity to prevent tipping.
- Be cautious of sharp edges during assembly and use.
- Always follow the assembly instructions for safe installation.
- Ensure all fasteners are tightened securely before use and periodically check for looseness.
- Keep small parts away from children during assembly.

PACKAGE CONTENTS

Your THINK 30 Wood Dining Table Set, Model 089, is shipped in 3 separate boxes. Please ensure all boxes have arrived before beginning assembly. Verify that all components listed below are present and undamaged.

- 1 x Extendable Dining Table
- 4 x Upholstered Dining Chairs
- 1 x Padded Dining Bench
- Assembly Hardware Kit (screws, bolts, tools)
- Assembly Instructions Document

Solid Wood Dining Table Set

Dining Room →



Family Gathering



Easy to assemble



Rubber Wood Frame



Durable Build



Made for daily use, it's both functional and stylish.

Image: Overview of the THINK 30 Wood Dining Table Set, including the extendable table, four upholstered chairs, and a padded bench.

SETUP AND ASSEMBLY

Assembly is required for this dining set. It is recommended that two adults perform the assembly. Clear a spacious area for assembly and lay out all components on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging. Refer to the included assembly instructions document to identify each component.
2. **Assemble Table:** Follow the step-by-step instructions provided in the separate assembly guide to construct the dining table. Ensure all bolts and screws are securely fastened.
3. **Assemble Chairs:** Assemble each of the four upholstered chairs according to the instructions. Pay attention to the orientation of chair legs and backrests.
4. **Assemble Bench:** Construct the padded dining bench as per the assembly guide.
5. **Adjust Foot Pads:** The table and chairs are equipped with adjustable foot pads. After assembly, place the furniture in its desired location and adjust the foot pads to ensure stability and prevent wobbling on uneven surfaces. This also helps protect your flooring.

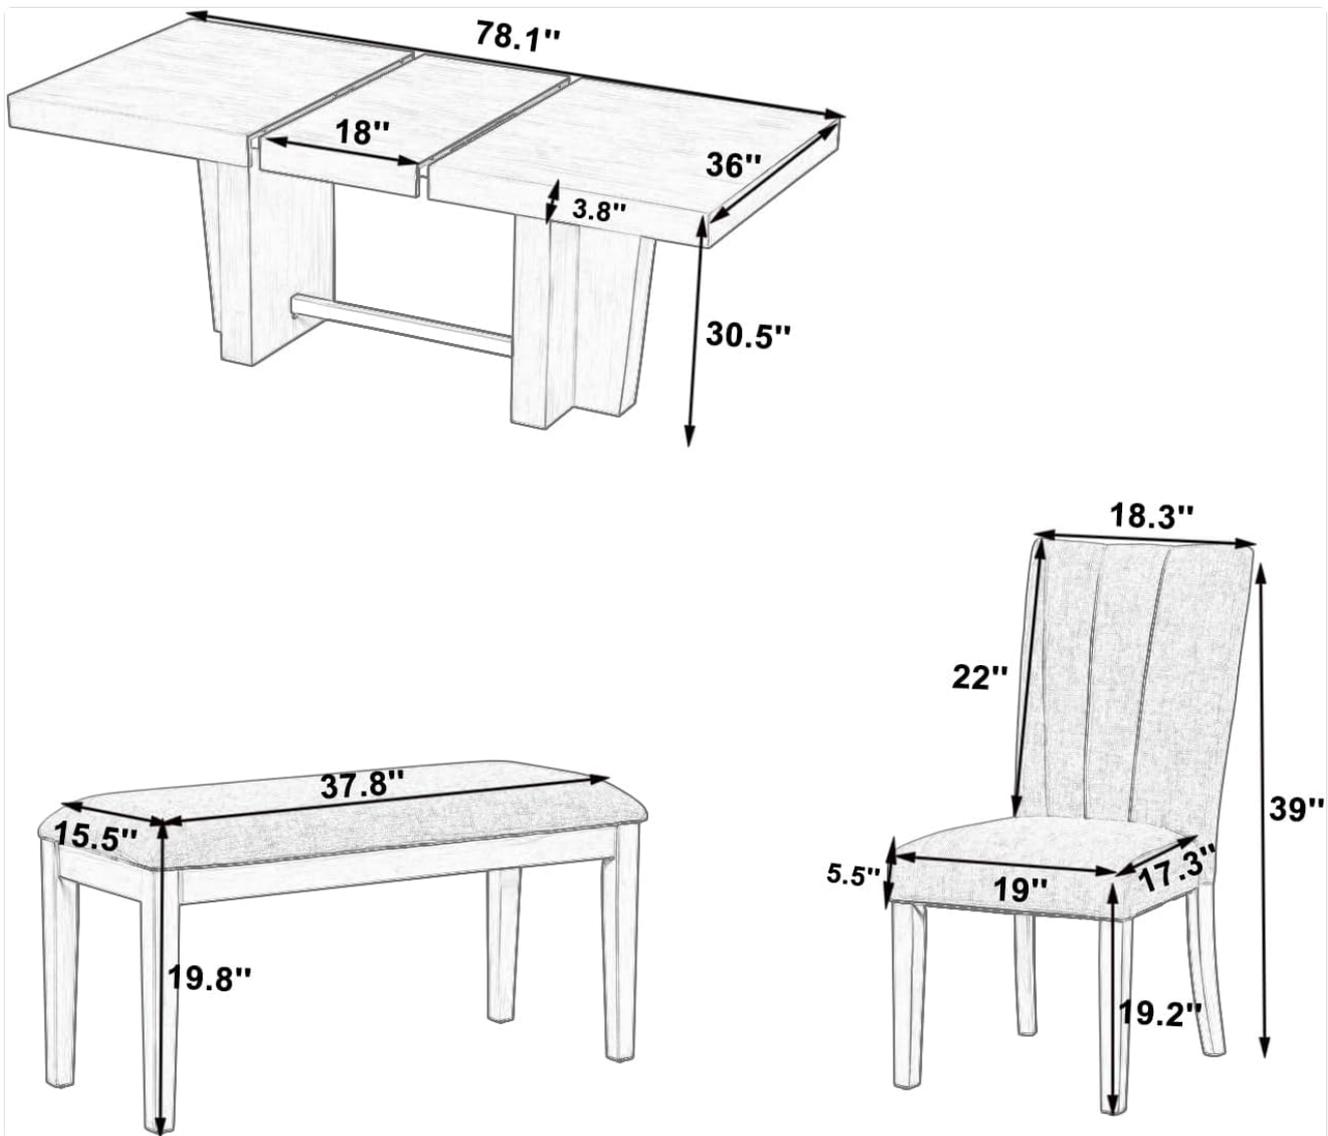


Image: Detailed dimension diagram showing the measurements of the extendable dining table, chairs, and bench for assembly reference.

OPERATING INSTRUCTIONS

Extending the Dining Table

The dining table features a smooth extension mechanism to adjust its length from 60 inches to 78.1 inches, accommodating more guests when needed.

1. **Unlock Tabletop:** Locate any locking mechanisms under the tabletop that secure the two halves of the table. Release these locks.
2. **Slide Table Halves Apart:** Gently pull the two halves of the tabletop apart. The smooth slide rails will allow for easy separation.
3. **Insert Extension Leaf:** Place the 18-inch removable extension leaf into the gap created between the table halves. Ensure it is properly seated and aligned.
4. **Push Table Halves Together:** Carefully push the two table halves back together until they meet the extension leaf, creating a continuous surface.
5. **Secure Tabletop:** Re-engage any locking mechanisms under the tabletop to secure the extended table.

Retracting the Dining Table

To return the table to its compact size:

1. **Unlock Tabletop:** Release any locking mechanisms.
2. **Slide Table Halves Apart:** Gently pull the table halves apart to create a gap.
3. **Remove Extension Leaf:** Carefully lift and remove the 18-inch extension leaf. Store it safely to prevent damage.
4. **Push Table Halves Together:** Slide the two main table halves back together until they meet.
5. **Secure Tabletop:** Re-engage the locking mechanisms to secure the table in its compact form.

78 inch Extendable Kitchen Table

With an **18-inch** removable leaf, this **solid wood** dining table is perfect for any occasion



Smooth
Slide Rail



Adjustable
Foot Pads



3.8inch
Table Top

Image: Close-up view of the extendable dining table, illustrating the 18-inch removable leaf, smooth slide rails, and adjustable foot pads.

MAINTENANCE

Wood Surfaces (Table Frame, Legs)

- **Cleaning:** Wipe wood surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish. Dry immediately with a clean cloth.
- **Protection:** Use coasters under drinks and placemats under hot dishes to prevent water rings and heat

damage. Avoid direct sunlight and extreme temperature changes, which can cause warping or cracking.

- **Polishing:** Periodically apply a wood-safe polish or wax to maintain the luster and protect the finish.

Upholstered Surfaces (Chairs, Bench)

- **Cleaning:** Vacuum regularly with an upholstery attachment to remove dust and debris.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub. For stubborn stains, use a mild fabric cleaner following the product instructions, testing on an inconspicuous area first.
- **Avoid Moisture:** Do not saturate the fabric with water or cleaning solutions.

General Maintenance

- **Check Fasteners:** Periodically inspect all bolts, screws, and connections to ensure they are tight. Re-tighten as necessary to maintain structural integrity and prevent wobbling.
- **Adjust Foot Pads:** Re-adjust the foot pads if the furniture becomes unstable.

TROUBLESHOOTING

Table or Chairs are Wobbly

- **Solution:** Check all assembly bolts and screws and tighten them securely. Adjust the leveling foot pads on the bottom of the table and chair legs to compensate for uneven flooring.

Difficulty Extending/Retracting Table

- **Solution:** Ensure the tabletop locking mechanisms are fully disengaged. Check the slide rails for any obstructions or debris. Clean the rails if necessary. Apply a silicone-based lubricant if movement remains stiff.

Missing Parts or Damaged Components

- **Solution:** Refer to the package contents list and assembly instructions. If parts are missing or damaged, contact customer support immediately for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	089
Brand	THINK 30
Color	Natural
Material	Table top: MDF + Rubberwood veneer Table frame: Rubberwood Chair/Bench: Rubberwood + Linen fabric
Dining Table Dimensions (LxWxH)	78.1 x 36 x 30.5 inches (Extended) 60 x 36 x 30.5 inches (Compact)
Tabletop Thickness	3.8 inches

Feature	Detail
Dining Chair Dimensions (LxWxH)	19 x 17.3 x 39 inches
Chair Seat Depth	5.5 inches
Chair Seat to Ground Height	19.2 inches
Dining Bench Dimensions (LxWxH)	37.8 x 15.5 x 19.8 inches
Total Item Weight	Approximately 240 pounds
Seating Capacity	6 persons (4 chairs + 1 bench)
Assembly Required	Yes

Comfortable Upholstered

Seating

The set includes **4** upholstered dining chairs with **5.5-inch** thick cushions, offering exceptional comfort during long meals.



Soft Cushion



Solid Wood Frame



Soft Backrest

Image: Close-up of an upholstered dining chair, highlighting the 5.5-inch thick cushion and solid wood frame for comfort and durability.



37.8" Padded Long Bench



Soft
Cushion



Foot
Pads



Comfortable
Fabric

Image: Detailed view of the padded dining bench, showcasing its comfortable fabric and sturdy construction.

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your THINK 30 Wood Dining Table Set, please contact our customer support team. Refer to the contact information provided in your product packaging or on the THINK 30 official website.

When contacting support, please have your model number (089) and purchase information readily available.

