

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DigiLand](#) /
- › [DigiLand 10.1" Android 15 Tablet User Manual \(Model: MID1050-AE\)](#)

## DigiLand MID1050-AE

# DigiLand 10.1" Android 15 Tablet

USER MANUAL (MODEL: MID1050-AE)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. Setup

---

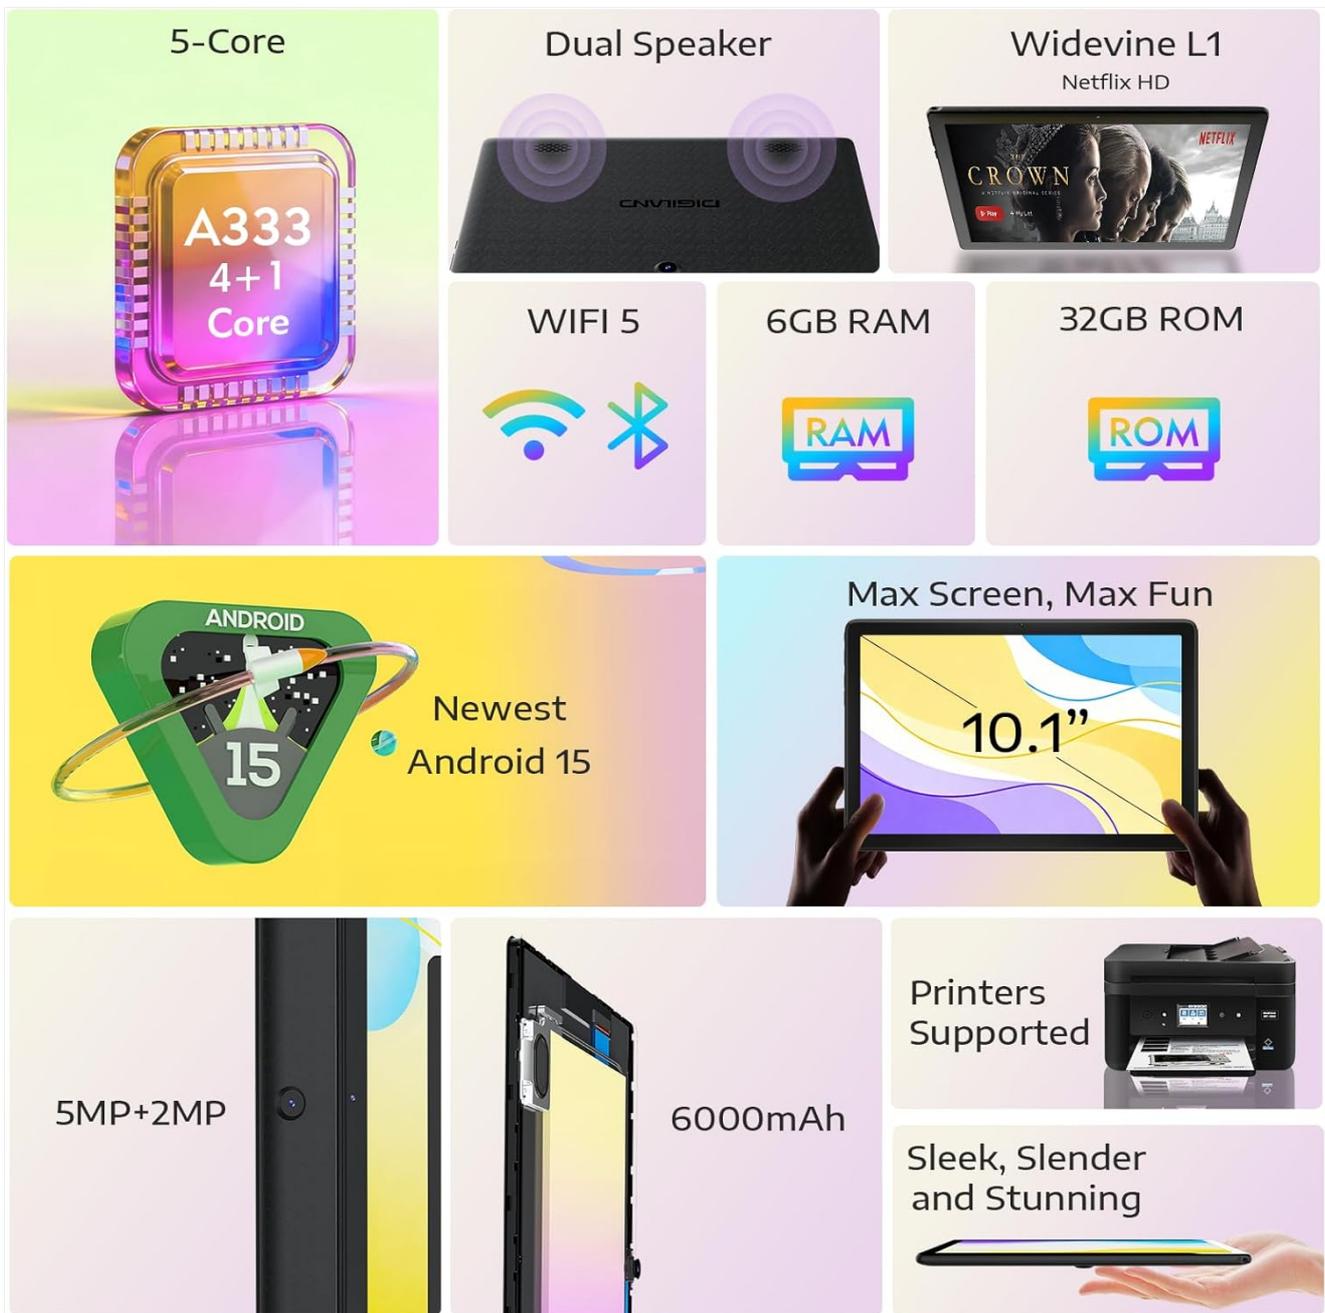


Image: Front and back view of the DigiLand 10.1 inch Android 15 Tablet.

### 1.1 What's in the Box

Verify that all items are present in the packaging:

- DigiLand 10.1" Android 15 Tablet (main device)
- USB Cable
- 5V/1A Power Adapter
- Instruction Manual
- Warranty Card
- Children's Silicone Case (if included with specific model variant)

### 1.2 Initial Charging

Before first use, fully charge the tablet. Connect the provided USB cable to the tablet's USB-C port and the power adapter, then plug the adapter into a wall outlet. The 6000mAh battery provides extended usage, and a full charge ensures optimal performance from the start.

### 1.3 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the DigiLand logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power options menu appears. Select 'Power Off' and confirm.
- **To Restart:** From the power options menu, select 'Restart' and confirm.

### 1.4 Initial Setup (Android 15)

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account (required for Google Mobile Services - GMS and Play Store access), and configuring basic security settings. Follow the on-screen prompts to complete the setup.

## 2. Operating Your Tablet

6000mAh Ultra-long Battery

Music Game

Standby Video

6000mAh

Slim Design & Dual Cameras

5MP 481.5g

2MP Metal body

Image: The tablet's 10.1-inch IPS display showing a colorful image.

## 2.1 Display and Navigation

The tablet features a 10.1-inch IPS touch display with an 800 x 1280 resolution. Navigate the interface by tapping, swiping, and pinching on the screen. The IPS technology provides wide viewing angles and consistent color reproduction.

## 2.2 Connectivity

- **Wi-Fi:** The tablet supports Wi-Fi 6 (802.11ax) with 2.4GHz/5GHz dual-band capabilities for fast and stable internet connections. To connect, go to Settings > Network & internet > Wi-Fi, then select your network and enter the password.
- **Bluetooth:** Bluetooth 5.4 allows for seamless, low-energy connections with compatible devices such as headphones, speakers, and keyboards. To pair, go to Settings > Connected devices > Pair new device, and select your device from the list.

## 2.3 Storage Management

The tablet comes with 6GB of RAM (3GB physical + 3GB virtual) for multitasking and 32GB of internal storage. For additional storage, a TF (microSD) card slot is available, supporting expansion up to 1TB. Insert the TF card into the designated slot to expand your storage capacity for apps, photos, videos, and documents.

## 2.4 Camera Usage

The tablet is equipped with a 2MP front camera for video calls and selfies, and a 5MP rear camera for capturing photos and videos. Open the Camera app to access these functions. Tap the screen to focus and press the shutter button to capture images.

## 2.5 Audio

Experience audio through the integrated dual speaker system. Adjust volume using the physical volume buttons on the side of the tablet or through the on-screen controls. A 3.5mm headphone jack is also available for private listening.

## 2.6 Multimedia Playback

The tablet supports Widevine L1, enabling high-definition streaming from services like Netflix and Amazon Prime Video. Use pre-installed apps or download your preferred media players from the Google Play Store for video and music playback.

Your browser does not support the video tag.

*Video: Overview of the DigiLand Android 15 Tablet features, including display, performance, and entertainment capabilities.*

## 3. Maintenance

### 3.1 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- For optimal battery longevity, avoid frequently discharging the battery completely or keeping it at 100% charge for extended periods.
- Use only the provided charger and cable or certified replacements.

# High-Definition Larger Screen




1280\*800




10.1 inch



Eye protection

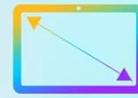

16:9

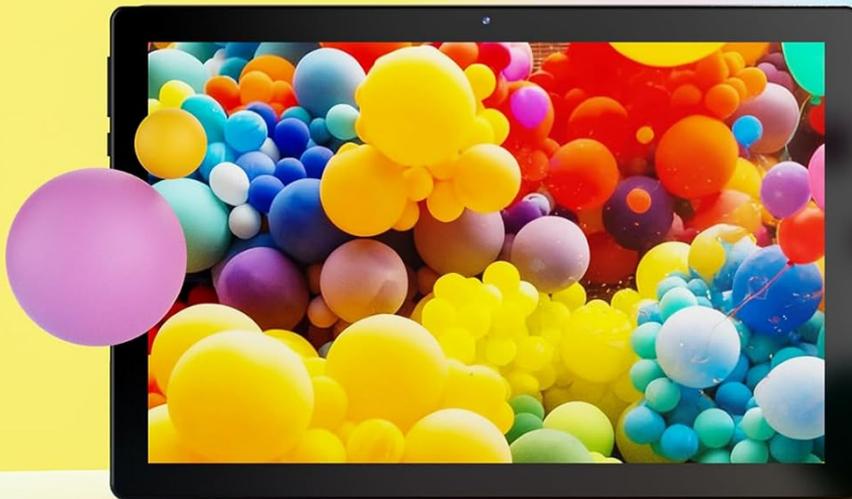

prime video

 YouTube

Widevine L1 & Netflix HD Support

*Image: The tablet's battery settings displaying the 6000mAh capacity and estimated usage time.*

## 3.2 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

## 3.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update to check for available updates.

## 4. Troubleshooting

### 4.1 Device Not Powering On

- Ensure the battery is charged. Connect the tablet to its charger and allow it to charge for at least 30 minutes before attempting to power on again.
- Try a different charging cable and adapter to rule out faulty accessories.

- Perform a forced restart by holding the Power button for 10-15 seconds.

## 4.2 Slow Performance

- Close unnecessary background applications.
- Clear cache data for frequently used apps (Settings > Apps > [App Name] > Storage & cache > Clear cache).
- Ensure sufficient storage space is available. Uninstall unused apps or move large files to an external TF card.
- Restart the tablet.

## 4.3 Connectivity Issues (Wi-Fi/Bluetooth)

- Toggle Wi-Fi or Bluetooth off and on again.
- Restart your Wi-Fi router or Bluetooth device.
- Forget the network/device in settings and reconnect/re-pair.
- Ensure the tablet is within range of the Wi-Fi network or Bluetooth device.

## 4.4 Screen Unresponsive

- Restart the tablet by holding the Power button.
- Ensure the screen is clean and free of moisture or debris.

## 5. Specifications

---

# A333 5-Core Processor



## Rapid Response Speed

Redefining Mobile Processing Efficiency !

- Quad Core + Single Core
- CPU A333 1.75GHz Frequency

### Antutu benchmark



Image: Details of the tablet's A333 5-Core Processor and performance benchmarks.

Feature	Detail
Model Number	MID1050-AE
Operating System	Android 15 GO
Processor	1.75 GHz 5-Core Processor
RAM	6GB (3GB physical + 3GB virtual)
Internal Storage	32GB
Expandable Storage	Up to 1TB via TF Card
Screen Size	10.1 Inches
Screen Resolution	800 x 1280 IPS

Feature	Detail
Battery Capacity	6000mAh
Front Camera	2MP
Rear Camera	5MP
Wireless Connectivity	Wi-Fi 6 (802.11 ax), Bluetooth 5.4
Audio	Dual Speaker System
Dimensions (LxWxH)	7 x 4 x 0.5 inches
Item Weight	2.01 pounds

## 6. Warranty & Support

---

### 6.1 Warranty Information

This DigiLand tablet is covered by a limited manufacturer's warranty. Please refer to the included Warranty Card for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

### 6.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact DigiLand customer support. Contact information can typically be found on the official DigiLand website or on the Warranty Card included with your product.