

[manuals.plus](#) /› [Whirlpool](#) /› **Whirlpool MWP329TSS Free Standing All-in-One Microwave Oven User Manual****Whirlpool MWP329TSS**

# **Whirlpool MWP329TSS Free Standing All-in-One Microwave Oven User Manual**

Model: MWP329TSS

## **1. Introduction**

---

Thank you for choosing the Whirlpool MWP329TSS Free Standing All-in-One Microwave Oven. This appliance is designed to offer versatile cooking solutions, combining microwave, air fry, steam, grill, and convection functions in a single unit. With a 32-liter capacity and a powerful 2100W total power output, it is suitable for a wide range of culinary tasks. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before operation and retain it for future reference.



Figure 1: Front view of the Whirlpool MWP329TSS All-in-One Microwave Oven.

## 2. Important Safety Instructions

---

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not store or use this appliance outdoors.
- Always ensure the appliance is properly grounded.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the power cord away from heated surfaces.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when the appliance is used by or near children. The appliance features a child safety lock.

## 3. Setup and Installation

---

### 3.1 UNPACKING

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.

### 3.2 PLACEMENT

This is a freestanding appliance. Place the oven on a flat, stable surface that can support its weight (approximately 29.5 kg) and the heaviest food item likely to be cooked in it. Ensure adequate ventilation around the oven. Maintain a minimum clearance of 20 cm above the oven, 10 cm at the rear, and 5 cm on each side.

- **Dimensions:** 49.3D x 48.7W x 38.2H centimetres.
- Do not block air vents.
- Do not place the oven near heat sources or in a damp environment.

### 3.3 ELECTRICAL CONNECTION

Ensure the electrical outlet meets the appliance's requirements. The oven operates at 2100 watts. Plug the oven into a properly grounded wall outlet. Do not use extension cords or adapters.

### 3.4 ACCESSORY INSTALLATION

Your oven comes with several accessories to enhance its versatility.

- **Grill Rack:** Use for grilling functions.
- **Air Fry Basket:** Designed for air frying.
- **Steam Tray:** For steaming food.
- Ensure accessories are correctly placed before operation. Refer to specific cooking mode instructions for appropriate accessory usage.



Figure 2: Interior view showing the stainless steel cavity and accessory placement area.

## 4. Operating Instructions

---

### 4.1 CONTROL PANEL OVERVIEW

The oven features a touch control panel with an LED display and a rotary knob for settings adjustment.



Figure 3: Close-up of the touch control panel and LED display.

- **LED Display:** Shows time, temperature, and selected functions.
- **Touch Buttons:** For selecting cooking modes, power levels, and special functions.
- **Rotary Knob:** Used to adjust time, temperature, and weight settings.

## 4.2 COOKING MODES

The Whirlpool MWP329TSS offers 8-in-1 cooking modes:

1. **Microwave:** For rapid heating and cooking.
2. **Air Fry:** For crispy results with minimal oil. Use the air fry basket.
3. **Steam:** For healthy cooking. Fill the 800ml water tank before use.
4. **Upper Grill:** For browning and toasting. Use the grill rack.
5. **Bottom Grill:** For cooking from below.
6. **Conventional Bake:** Standard oven baking.
7. **Turbo Convection:** Faster and more even convection cooking.
8. **Convection + Steam:** Combines convection heat with steam for moist and tender results.

**Temperature Range:** Cooking temperatures can be set between 30°C and 230°C, depending on the selected mode.

## 4.3 SPECIAL FEATURES

- **Auto Cook:** Pre-programmed settings for various food types. Select the desired program and weight, and the

oven will adjust cooking time and power automatically.

- **Child Safety Lock:** To prevent accidental operation, especially by children. Refer to the control panel instructions for activation and deactivation.
- **Defrost:** For thawing frozen foods by weight or time.



Figure 4: Example of food being cooked inside the oven, demonstrating its capacity.

## 5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

### 5.1 EXTERIOR CLEANING

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

### 5.2 INTERIOR CLEANING

- The oven features a stainless steel cavity. Clean the interior with a mild detergent and a soft cloth after each use.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 5-10 minutes. The steam will loosen the residue, making it easier to wipe clean.
- Ensure the oven is cool before cleaning.

### 5.3 WATER TANK CLEANING (FOR STEAM FUNCTION)

- Empty and clean the 800ml water tank regularly to prevent mineral buildup.
- Use a descaling solution if necessary, following the product instructions.

#### 5.4 ACCESSORY CLEANING

- Wash the grill rack, air fry basket, and steam tray with warm, soapy water. They may also be dishwasher safe; refer to individual accessory care instructions.

## 6. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Improper stirring/turning; Food placed incorrectly; Incorrect power level/time.	Stir or turn food halfway through cooking; Ensure food is centered; Adjust power level and cooking time.
Steam not being generated (Steam mode)	Water tank empty or improperly installed.	Fill the water tank and ensure it is correctly inserted.
Child lock activated	Oven controls are unresponsive.	Refer to the operating instructions to deactivate the child safety lock.

## 7. Specifications

Detailed technical specifications for the Whirlpool MWP329TSS All-in-One Microwave Oven.

Feature	Specification
Brand	Whirlpool
Model	MWP329TSS
Type	Free Standing All-in-One Microwave Oven
Capacity	32 Liters
Total Power	2100 watts
Cooking Modes	Microwave, Air Fry, Steam, Upper Grill, Bottom Grill, Conventional Bake, Turbo Convection, Convection + Steam (8-in-1)
Temperature Range	30°C to 230°C
Water Tank Capacity	800 ml
Control Type	Touch Control Panel with LED Display and Rotary Knob

Feature	Specification
Interior Material	Stainless Steel
Special Features	Auto Cook, Child Safety Lock, Defrost
Product Dimensions (D x W x H)	49.3 x 48.7 x 38.2 cm
Item Weight	29.5 kg
Included Components	Grill Rack, Air Fry Basket, Steam Tray

## 8. Warranty Information

Specific warranty details for the Whirlpool MWP329TSS are typically provided with the product packaging or can be found on the official Whirlpool website for your region. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, please visit the official Whirlpool website or contact their customer support.

## 9. Customer Support

Should you encounter any issues not covered in this manual or require further assistance, please contact Whirlpool customer support.

- **Whirlpool Official Website:** [www.whirlpool.com](http://www.whirlpool.com) (Please select your regional site for local contact information).
- **Service Center:** Refer to your product documentation for local service center details.