

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Indesit](#) /
- › [Indesit IN2FE14CNP80W Freestanding Dishwasher User Manual](#)

Indesit IN2FE14CNP80W

Indesit IN2FE14CNP80W Freestanding Dishwasher User Manual

Model: IN2FE14CNP80W

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Indesit IN2FE14CNP80W freestanding dishwasher. Please read these instructions carefully before installation, operation, and maintenance. Keep this manual for future reference.



Image 1.1: Front view of the Indesit IN2FE14CNP80W freestanding dishwasher, showcasing its white finish and control panel.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric

shock, and injury to persons.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.
- Disconnect the appliance from the power supply before performing any maintenance or cleaning.

3. SETUP AND INSTALLATION

The Indesit IN2FE14CNP80W is a freestanding dishwasher designed for easy placement in your kitchen.

3.1 Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any transport damage. Report any damage immediately to your retailer.

3.2 Positioning

Place the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully.

- **Dimensions (W x D x H):** 59 cm x 62.5 cm x 91 cm (Product dimensions) / 59P x 62I x 85H cm (Installation dimensions)
- **Weight:** 98 kg



Image 3.1: The Indesit IN2FE14CNP80W dishwasher seamlessly integrated into a kitchen environment, demonstrating its freestanding design.

3.3 Water Connection

- Connect the water inlet hose to a cold water supply.
- Connect the drain hose to a suitable drain pipe.
- Ensure all connections are secure and leak-free.
- **Inlet Hose Length:** 1.55 m
- **Drain Hose Length:** 1.5 m
- The dishwasher features an overflow protection system.

3.4 Electrical Connection

- Connect the power cord to a properly grounded electrical outlet.
- **Power Cord Length:** 1.3 m

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and loading procedures for optimal washing results.

4.1 Control Panel

The dishwasher is controlled via buttons and a rotary knob. An LED program indicator provides status updates.



Image 4.1: Angled view of the Indesit IN2FE14CNP80W dishwasher, highlighting the user-friendly control panel with buttons and a central knob.

4.2 Loading the Dishwasher

The dishwasher has a capacity for 14 place settings. The upper basket is adjustable to accommodate larger items.

- Place larger items in the lower basket.
- Place glasses, cups, and smaller items in the upper basket.
- Cutlery should be placed in the designated cutlery basket.
- Ensure spray arms are not obstructed.



Image 4.2: Interior view of the Indesit IN2FE14CNP80W dishwasher with the door open, displaying the empty upper and lower baskets and cutlery basket.



Image 4.3: A close-up view of the Indesit IN2FE14CNP80W dishwasher's interior, showing dishes, glasses, and cutlery properly loaded in the baskets.

4.3 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid dispenser and refill if the rinse aid indicator is lit.
- The dishwasher includes a salt indicator to remind you to refill the salt reservoir.

4.4 Program Selection

Select a wash program using the control knob. The dishwasher offers 6 wash programs:

- **Daily 50°C:** For everyday soiled dishes.
- **Eco 50°C:** Energy-efficient program for normally soiled dishes (cycle duration: 270 min).
- **Intensive 65°C:** For heavily soiled pots, pans, and dishes.
- **Mixed:** For mixed loads with varying soil levels.
- **Pre-wash:** A short rinse cycle for dishes that will be washed later.
- **Rapid:** A quick wash for lightly soiled dishes.

The maximum wash temperature is 65°C.

4.5 Starting a Cycle

- Close the dishwasher door securely.
- Press the Start button.
- You can use the delayed start function to postpone the cycle start.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning the Filters

- Regularly check and clean the filter system at the bottom of the dishwasher.
- Remove food particles and rinse the filters under running water.

5.2 Cleaning the Spray Arms

- Periodically check the spray arm nozzles for blockages.
- Remove any debris with a thin object, such as a toothpick.

5.3 Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and water to prevent odors and limescale buildup.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and their solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Incorrect loading, clogged spray arms, insufficient detergent, wrong program.	Reload dishes correctly, clean spray arms and filters, add more detergent, select a more intensive program.
Water remains in the dishwasher	Clogged drain hose or filter, drain pump malfunction.	Clean filters and drain hose, check for kinks in the hose.
White film on dishes	Hard water, insufficient rinse aid or salt.	Refill rinse aid and salt, adjust water softener settings if applicable.

7. SPECIFICATIONS

Detailed technical specifications for the Indesit IN2FE14CNP80W dishwasher.

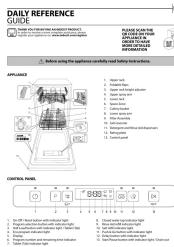
Specification	Value
Appliance Placement	Freestanding
Size	Full size (60 cm)
Door Color	White
Control Panel Color	White
Control Type	Buttons, Rotary knob
Power Cord Length	1.3 m
Inlet Hose Length	1.55 m
Drain Hose Length	1.5 m
Number of Baskets	2 baskets
Upper Basket Adjustment	Yes
Cutlery Compartment Type	Basket
Number of Place Settings	14 place settings
Number of Wash Programs	6
Noise Emission Class	C
Noise Level	49 dB
Special Programs	Daily 50°C, Eco 50°C, Intensive 65°C, Mixed, Pre-wash, Rapid

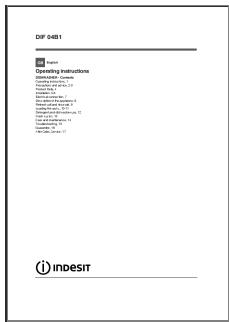
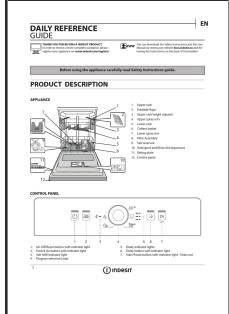
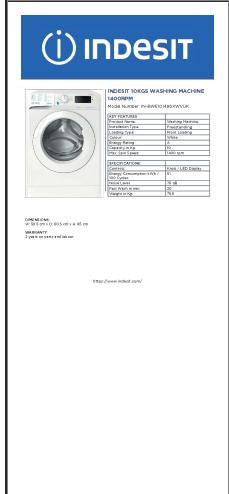
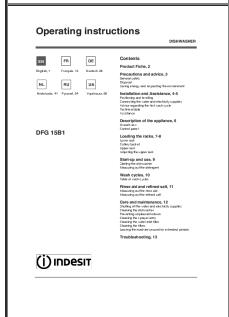
Specification	Value
Maximum Temperature	65 °C
Longest Cycle Duration	270 min
Overflow Protection System	Yes
Delayed Start	Yes
Salt Indicator	Yes
LED Program Indicator	Yes
Energy Efficiency Class	E
Water Consumption per Cycle	12 L
Product Dimensions (W x D x H)	59 x 62.5 x 91 cm
Product Weight	98 kg

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Indesit website. Keep your proof of purchase for any warranty claims. For technical assistance or spare parts, contact Indesit customer service.

Related Documents - IN2FE14CNP80W

	<p>Indesit Dishwasher: Daily Reference Guide and User Manual</p> <p>Your essential guide to operating, maintaining, and troubleshooting your Indesit dishwasher. Learn about programs, functions, and best practices for optimal performance and longevity.</p>
	<p>Indesit DSIO 3M24 C S Dishwasher Technical Specifications and Energy Label</p> <p>Comprehensive technical specifications, main features, technical features, and energy label details for the Indesit DSIO 3M24 C S built-in dishwasher.</p>

	<p><u>Indesit DIF 04B1 Dishwasher: Operating Instructions and User Guide</u></p> <p>Comprehensive operating instructions, safety precautions, installation guide, and maintenance tips for the Indesit DIF 04B1 dishwasher. Learn how to use, care for, and troubleshoot your appliance.</p>
	<p><u>Indesit Dishwasher Daily Reference Guide</u></p> <p>User guide for Indesit dishwashers, providing essential information on product description, first-time use, salt, rinse aid, and detergent, program selection, options, rack loading, daily operation, advice, care, maintenance, and troubleshooting.</p>
	<p><u>Indesit 10kg Washing Machine 1400RPM - Model IN-BWE101496XWVUK Specifications</u></p> <p>Detailed specifications and features for the Indesit 10kg Washing Machine 1400RPM, model IN-BWE101496XWVUK, including dimensions, energy rating, capacity, and warranty.</p>
	<p><u>Indesit DFG 15B1 Dishwasher Operating Instructions</u></p> <p>User manual for the Indesit DFG 15B1 dishwasher, covering installation, operation, maintenance, safety precautions, and troubleshooting.</p>