

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MOKKOM](#) /

› [MOKKOM Cold Press Juicer Instruction Manual - Model B0FS765JKP](#)

MOKKOM B0FS765JKP

MOKKOM Cold Press Juicer Instruction Manual

Model: B0FS765JKP

1. INTRODUCTION

Thank you for choosing the MOKKOM Cold Press Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new juicer. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The MOKKOM Cold Press Juicer, showcasing its sleek black design and compact form factor, surrounded by fresh produce.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the juicer.
- Do not immerse the motor base in water or other liquids.

- Keep hands and utensils out of the feed chute during operation to prevent injury. Use only the provided food pusher.
- Ensure all parts are correctly assembled before turning on the appliance.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT FEATURES

- **Upgraded Brushless AC Motor:** Provides powerful, stable, and quiet performance with minimal noise (only 35dB). Reduces friction and heat, extending the juicer's lifespan.
- **Detachable Juice Pulp Outlet:** Designed for effortless use and easy maintenance, detaching in seconds for quick, thorough cleaning. Its wide opening prevents clogs.
- **Updated Large Feed Chute:** Allows juicing of whole fruits and vegetables without pre-cutting, saving time and effort.
- **45 RPM Slow Cold Press Technology:** Minimizes damage to cellular structure, preserving natural flavors and nutrients. Results in smoother, higher-quality juice with less sediment and foam, maximizing yield.
- **Easy to Operate:** Features one-touch forward and reverse control to easily switch modes and prevent clogging.
- **Easy to Assemble & Clean:** Simple 3-part design for quick assembly and disassembly. Parts are easy to rinse under water and include a cleaning brush.

Strong Power & Quiet Operation

Powerful Motor, Peaceful Performance



Image: The juicer in operation, highlighting its quiet performance with a sleeping child in the background, emphasizing its brushless AC motor.

4. SETUP

Follow these steps to assemble your MOKKOM Cold Press Juicer before first use:

1. Place the motor base on a stable, flat surface.
2. Set up the juicing bowl onto the motor base, ensuring it clicks into place.

3. Insert the juicing auger into the center of the juicing bowl.
4. Push down the hopper (feed chute assembly) and twist until it clicks securely into place. Note: Keep the lid open during assembly; otherwise, the hopper will not be assembled correctly.
5. Place the juice cup under the juice outlet and the pulp cup under the pulp outlet.



Image: A visual guide illustrating the three simple steps for assembling the juicer: setting up the juicing bowl, inserting the auger, and attaching the hopper.

5. OPERATING INSTRUCTIONS

Prepare your ingredients and begin juicing with ease.

5.1 Ingredient Preparation

- Wash all fruits and vegetables thoroughly.
- Thanks to the large feed chute, most whole fruits and vegetables can be juiced without pre-cutting. For very large items, you may cut them into smaller pieces that fit comfortably into the chute.
- Remove hard pits from fruits like peaches, plums, or cherries.

Updated Extra Large Feed Chute

For Whole Vegetables
And Fruits



Image: The juicer's large feed chute is shown, demonstrating its capacity to handle whole fruits and vegetables, reducing preparation time.

5.2 Juicing Process

1. Ensure the juicer is properly assembled and the juice and pulp cups are in place.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the control knob to the "ON" position to start the juicer.
4. Slowly feed ingredients into the large feed chute. Use the food pusher only if necessary to gently guide ingredients. Avoid forcing ingredients.

5. The juicer will extract juice into the juice cup and separate pulp into the pulp cup.
6. If ingredients become clogged, turn the control knob to the "REV" (Reverse) position for a few seconds to clear the blockage, then return to "ON" to continue juicing.
7. Once juicing is complete, turn the control knob to "OFF" and unplug the appliance.

Simple Twist Control

One Turn to Juice | Forward & Reverse Modes
Easy for Kids & Seniors



Image: A user demonstrates the simple twist control, highlighting the intuitive "ON" and "REV" settings for easy operation.

5.3 Official Product Videos

Video: This video demonstrates the MOKKOM Cold Press Juicer in action, showcasing its efficient juice extraction process and quiet operation with various fruits and vegetables.

Video: A concise overview of the MOKKOM Cold Press Juicer, highlighting its key features and ease of use in a short demonstration.

6. MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer.

6.1 Disassembly for Cleaning

1. Ensure the juicer is turned "OFF" and unplugged.
2. Twist the hopper to unlock it, then lift it upwards to remove.
3. Lift the juicing bowl and auger assembly upwards from the motor base.
4. Separate the juicing auger from the juicing bowl.

6.2 Cleaning Instructions


- Rinse all detachable parts (hopper, juicing bowl, auger, pulp outlet) under running water immediately after use.
- Use the provided cleaning brush to remove any stubborn pulp residue from the filter and other components.
- The detachable juice pulp outlet can be easily opened for thorough cleaning, preventing any buildup.
- Wipe the motor base with a damp cloth. Never immerse the motor base in water.
- All parts, except the motor base, are easy to rinse under water. The juicer is not dishwasher safe.
- Allow all parts to dry completely before reassembling or storing.



Image: A visual guide demonstrating the four steps for cleaning the juicer: twisting off the hopper, removing the juicing bowl and auger, taking out the auger, and rinsing with water.

Innovative Detachable Juice Pulp Outlet

Clog-Free Design — Easy to Use, Easy to Clean

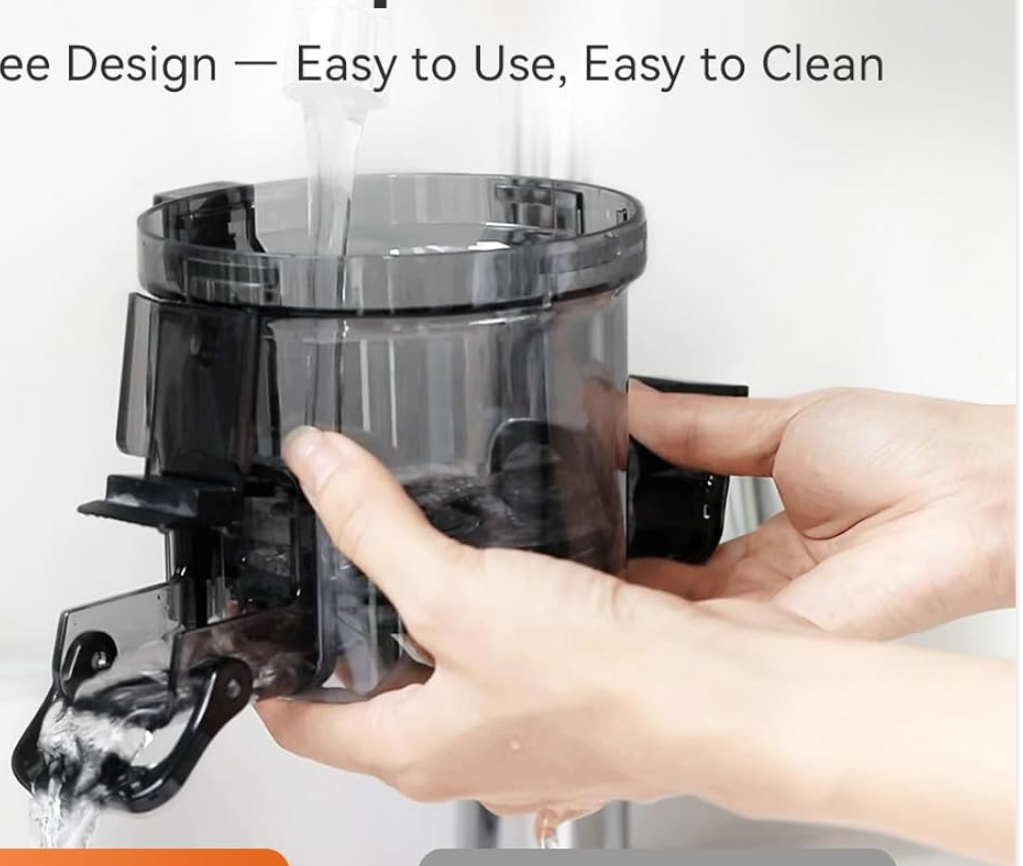

Detachable Juice Pulp Outlet



- ✓ No Clogging
- ✓ Easy to Clean

Vs

Normal Juice Outlet



- ⊗ Clogs Easily
- ⊗ Difficult to Clean

Image: A detailed comparison showing the MOKKOM juicer's innovative detachable juice pulp outlet, emphasizing its clog-free design and ease of cleaning compared to traditional outlets.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Juicer does not turn on	Not plugged in; improper assembly; safety lock not engaged.	Check power connection; ensure all parts are correctly assembled and locked; verify safety sensor is not triggered by an open cover.
Motor stops during operation	Overload; ingredients too hard or large; blockage.	Turn to "REV" to clear blockage, then "ON"; cut harder ingredients into smaller pieces; allow motor to cool if overheated.
Low juice yield or wet pulp	Ingredients not fresh; feeding too quickly; filter clogged.	Use fresh ingredients; feed slowly and steadily; clean the filter thoroughly.
Excessive noise or vibration	Improper assembly; hard ingredients.	Reassemble all parts correctly; ensure ingredients are appropriate for juicing.

8. SPECIFICATIONS

Feature	Detail
Brand	MOKKOM
Model	B0FS765JKP
Color	Black
Product Dimensions	5.31"D x 5.31"W x 15"H
Material	Plastic
Wattage	150 watts
Voltage	120 Volts
Item Weight	2.9 Kilograms
Dishwasher Safe	No

9. WARRANTY & SUPPORT

MOKKOM stands behind the quality of its products. This juicer comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. For specific warranty details, please refer to the warranty card included in your product packaging or contact MOKKOM customer support.

For technical support, troubleshooting assistance, or warranty claims, please contact our customer service team:

- **Email:** support@mokkom.com
- **Website:** [MOKKOM Official Store](#)

