

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Dickie Toys](#) /

› [Dickie Toys Spidey Web Crawler RC Car Instruction Manual](#)

Dickie Toys 203222006

Dickie Toys Spidey Web Crawler RC Car Instruction Manual

Model: 203222006

1. INTRODUCTION

Thank you for choosing the Dickie Toys Spidey Web Crawler RC Car. This manual provides essential information for the safe and proper operation, maintenance, and care of your remote-controlled vehicle. Please read this manual thoroughly before use and retain it for future reference.

Important Safety Information

- This product is intended for children aged 3 years and up.
- Always use this product under the direct supervision of an adult.
- Keep fingers, hair, and loose clothing away from the wheels and moving parts of the vehicle.
- Do not operate the vehicle near roads, water, or in crowded areas.
- Avoid operating the vehicle in wet conditions to prevent damage to electronic components.
- Do not attempt to modify or disassemble the vehicle or remote control.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Spidey Web Crawler RC Car (8 cm)
- 1 x 2-Channel Remote Control (2.4 GHz)
- 1 x 2.4 V/50 mAh Li-ion Battery (for car, pre-installed)
- 2 x 1.5 V LR6 (AA) Batteries (for remote control, included)
- 1 x USB Charging Cable (for car battery)



Image 1: Spidey Web Crawler RC Car and Remote Control as packaged.

3. SETUP

3.1 Charging the Car Battery

1. Locate the USB charging port on the Spidey Web Crawler RC Car.
2. Connect the included USB charging cable to the car's charging port.
3. Plug the other end of the USB cable into a standard USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light on the car will illuminate during charging and turn off or change color when fully charged.
5. Charging time is approximately 15 minutes for about 10 minutes of play time. Do not overcharge.
6. Disconnect the USB cable once charging is complete.

3.2 Installing Remote Control Batteries

1. Locate the battery compartment on the back of the remote control.
2. Using a small screwdriver (not included), open the battery compartment cover.

3. Insert two (2) 1.5 V LR6 (AA) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image 2: Spidey Web Crawler RC Car and its 2.4 GHz remote control.

4. OPERATING INSTRUCTIONS

4.1 Pairing the Remote Control

The car and remote control are typically pre-paired. If they do not connect automatically:

1. Ensure both the car and remote control have fresh or fully charged batteries.
2. Turn on the car using its power switch.
3. Turn on the remote control. The indicator light on the remote should blink and then become solid, indicating a successful connection.
4. If pairing fails, turn both devices off and repeat the process.

4.2 Driving the Vehicle

The 2-channel remote control allows for basic movement:

- **Forward/Backward:** Use the main joystick or button to move the car forward or backward.
- **Left/Right:** Use the steering control (usually a separate button or joystick) to turn the car left or right while moving.

The Spidey Web Crawler RC Car can reach a maximum speed of 6 km/h. Practice in an open area to familiarize yourself with the controls.

4.3 Combining with Other Vehicles

This product can be combined with the RC Spin Techno-Racer (item number 203222007) and the RC Spidey Team Vehicle (item number 203226000). With one remote control, all three vehicles can be controlled by easily switching between models at the touch of a button.

5. MAINTENANCE

5.1 Cleaning

- Wipe the vehicle and remote control with a soft, dry cloth.
- Do not use water or chemical cleaners, as this may damage the electronic components.
- Remove any debris (dust, hair, etc.) from the wheels and axles to ensure smooth operation.

5.2 Storage

- When not in use for extended periods, remove the batteries from the remote control to prevent leakage.
- Store the vehicle and remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

6.1 Car Not Responding to Remote Control

- Ensure both the car and remote control are turned on.
- Check if the car's Li-ion battery is fully charged.
- Check if the remote control batteries are correctly installed and have sufficient power. Replace if necessary.
- Ensure the car and remote are within operating range (typically a few meters).
- Re-attempt the pairing process as described in Section 4.1.

6.2 Short Play Time

- Ensure the car's Li-ion battery is fully charged before each use.
- Battery performance can decrease over time. If play time significantly reduces, the battery may need replacement (contact support).

6.3 Car Moves Slowly or Inconsistently

- Check the car's battery charge level.
- Inspect wheels and axles for obstructions (e.g., hair, lint) that might impede movement.
- Ensure the remote control batteries are not low.

7. SPECIFICATIONS

Model Number	203222006
---------------------	-----------

Product Dimensions	8.5 x 18.5 x 18 cm (L x W x H)
Weight	173 g
Max Speed	6 km/h
Frequency	2.4 GHz
Car Battery	1 x 2.4 V/50 mAh Li-ion (rechargeable via USB)
Remote Control Batteries	2 x 1.5 V LR6 (AA)
Material	Plastic
Recommended Age	3 years and up
Manufacturer	Dickie Toys

8. WARRANTY AND SUPPORT

Dickie Toys products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Dickie Toys website.

If you encounter any issues or have questions not covered in this manual, please contact Dickie Toys customer support:

- **Website:** www.dickietoys.de/en/ (or relevant regional website)
- Refer to your product packaging for specific contact details or regional support information.