

[Manuals.plus](#) /

> [Sweetcrispy](#) /

> Sweetcrispy 26-inch Freestanding Electric Fireplace Heater (Model FP203R-T3-P) Instruction Manual

Sweetcrispy FP203R-T3-P

Sweetcrispy 26-inch Freestanding Electric Fireplace Heater

Model: FP203R-T3-P

Brand: Sweetcrispy

INTRODUCTION

Thank you for choosing the Sweetcrispy 26-inch Freestanding Electric Fireplace Heater. This indoor fireplace heater features a realistic 3D flame effect, an overheating safe design, energy-saving capabilities with a 12-hour timer, and convenient remote control operation. This manual provides essential information for the safe and efficient use of your new electric fireplace.

IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- **Placement:** Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) away from the front of the heater. Ensure the sides, top, and back of the fireplace are clear. Maintain a minimum distance of 3 inches (7.6 cm) from any wall.
- **Overheating Protection:** The electric fireplace includes built-in overheating protection that automatically turns off the unit if it gets too hot.
- **Tip-Over Protection:** The unit is equipped with a tip-over shutoff feature that will automatically turn off the heater if it is accidentally knocked over.
- **Child Lock Function:** A child lock function is available to prevent accidental adjustments to settings.
- **Power Source:** Use only with a properly grounded 120V AC, 60Hz outlet. Do not overload circuits.
- **Supervision:** Close supervision is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.

Safety Instruction



Image: Safety instructions indicating minimum distances from walls and combustible materials. The fireplace should be placed at least 3 inches from a wall and 3 feet from combustible items.

PACKAGE CONTENTS

Your Sweetcrispy Electric Fireplace package includes:

- 1 x Electric Fireplace Unit
- 4 x Legs
- Screws for leg attachment
- 1 x Remote Control
- 1 x User Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly of your Sweetcrispy Electric Fireplace is quick and straightforward:

1. Carefully remove all components from the packaging.
2. Gently place the fireplace unit upside down on a soft, non-abrasive surface to avoid scratching.
3. Align each of the four legs with the designated attachment points on the bottom of the fireplace.
4. Secure each leg using the provided screws. Ensure they are tightened firmly but do not overtighten.
5. Carefully turn the assembled fireplace upright and place it in your desired location, adhering to all safety guidelines.

OPERATING INSTRUCTIONS

Your electric fireplace can be operated using the control panel located behind the front door or with the included remote control.

Control Panel Operation

Open the front door to access the control panel:

- **Power Button:** Press to turn the unit ON/OFF.
- **Heater Mode:** Toggle between 750W (low heat) and 1500W (high heat) settings.
- **Temperature Up/Down:** Adjust the desired room temperature from 50°F to 90°F. The heater will automatically cycle on/off to maintain the set temperature.
- **Timer:** Set the automatic shut-off timer from 1 to 12 hours.
- **Flame Effect:** Cycle through various flame brightness levels and flame colors (Blue, Mixed, Orange) or turn the flame effect off completely.
- **Child Lock:** To activate, press and hold the 'Temp Up' and 'Temp Down' buttons simultaneously for 5 seconds. 'CL' will appear on the display. Repeat to deactivate.

Remote Control Operation

The remote control provides convenient access to all functions from a distance:

- **Power:** Turn the unit ON/OFF.
- **Heater:** Adjust heat settings (low, high, off).
- **Flame:** Control flame brightness and color.
- **Timer:** Set the automatic shut-off timer.
- **Temperature Up/Down:** Adjust the thermostat.
- **Lock:** Activate/deactivate child lock.

Free Control



Image: Illustration of the hidden control panel and the remote control, showing various buttons for power, heat, flame, and timer settings.

Charming Flame Design



Image: Depicts the various flame color options: blue, mixed (blue and orange), and orange, enhancing the ambiance.

KEY FEATURES

- **Various Flame Effects:** Personalize your atmosphere with dazzling 3D flame effects. Choose from various flame lightness and colors (blue, mixed, orange) to suit your mood or decoration style.
- **Energy-Saving Timer:** The built-in timer allows you to set the unit to automatically turn off after a preset time (1-12 hours), reducing unnecessary energy consumption.
- **Powerful Fireplace Heater:** Offers adjustable heat settings ranging from 750W for gentle warmth to 1500W for powerful, efficient heating.
- **Safety Features:** Includes built-in overheating protection and a child lock function for a safe and secure environment.
- **Free Control:** Operate effortlessly with the included remote control or the easy-to-use control panel on the unit.

Powerful Fireplace Heater



750W/1500W



Heat Output



Image: Highlights the powerful heating capability of the fireplace, offering 750W/1500W settings and 5000 BTU heat output.

Over Heat Protection



Image: Illustrates the overheat protection feature, showing a blue shield around the fireplace and a thermometer indicating automatic shut-off if it gets too hot.

Energy Saving

12-hour timer function can help you save more energy



Low Noise



1-12H Timer



Silent Heat



Image: Showcases the energy-saving timer function (1-12 hours) along with low noise and silent heat operation, ideal for use in bedrooms.

MAINTENANCE

To ensure the longevity and optimal performance of your electric fireplace, follow these maintenance guidelines:

- **Cleaning:** Always unplug the unit before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Ventilation:** Ensure the air vents are clear of dust and debris to maintain proper airflow and prevent overheating.
- **Storage:** If storing the unit for an extended period, unplug it and store it in a cool, dry place.

TROUBLESHOOTING

If you experience issues with your electric fireplace, refer to the following common troubleshooting steps:

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a working 120V outlet. Check if the circuit breaker has tripped.
- **No Heat Output:** Verify that the heater mode is activated and the temperature setting is higher than the ambient room temperature. Check for any obstructions in the air vents.
- **Flame Effect Not Working:** Ensure the flame effect is turned on via the control panel or remote. Adjust brightness settings.
- **Unit Shuts Off Unexpectedly:** This may indicate activation of the overheating or tip-over protection. Unplug the unit, allow it to cool down, and ensure it is placed on a stable surface with clear ventilation before restarting.

SPECIFICATIONS

Brand	Sweetcrispy
Model Name	Sweetcrispy Freestanding Electric Fireplace
Item Model Number	FP203R-T3-P
Power Source	Corded Electric
Product Dimensions	13.78"D x 20.2"W x 26"H
Material	Metal
Finish Type	Painted
Installation Type	Floor Mount
Heat Output	1500 Watts
Special Features	Adjustable Flame, Flame Effect, Multicolor Flame, Overheat Protection
Style	Classic
Color	Carbon
Item Weight	25.8 pounds
UPC	753747460674

Product dimensions



Image: Displays the product dimensions: 25.54 inches high, 13.78 inches deep, and 20.2 inches wide, along with voltage and wattage information.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official Sweetcrispy website. Keep your purchase receipt for warranty claims.