

EMG PX01

EMG Artek Black Flame PX01 Wireless Game Controller Instruction Manual

Model: PX01

1. INTRODUCTION

Thank you for choosing the EMG Artek Black Flame PX01 Wireless Game Controller. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new controller. Designed for precision and performance, the PX01 offers a seamless and responsive gaming experience across multiple platforms.

Key Features:

- Multi-platform compatibility: Xbox One, Xbox Series S|X, PS3, PC
- 2.4GHz wireless connection for stable, lag-free gameplay
- Hall effect magnetic sensor joysticks for enhanced accuracy
- Hall effect magnetic sensor triggers for smooth and precise input
- Built-in 600mAh lithium battery for up to 15 hours of continuous play
- Adjustable vibration for immersive gaming feedback

2. PACKAGE CONTENTS

Please check the package for the following items:

- EMG Artek Black Flame PX01 Wireless Game Controller
- USB 2.4GHz Wireless Receiver
- USB Charging Cable
- Instruction Manual (this document)

3. CONTROLLER LAYOUT



Figure 1: Front view of the EMG Artek Black Flame PX01 Wireless Game Controller, showing joysticks, D-pad, action buttons (A, B, X, Y), and central function buttons.



Figure 2: Top view of the controller, highlighting the USB-C charging port located between the shoulder buttons (LB, RB) and triggers (LT, RT).

Familiarize yourself with the buttons and their functions:

- **Left/Right Analog Sticks:** For precise 360-degree movement.
- **D-Pad:** Directional input.
- **Action Buttons (A, B, X, Y):** Primary game actions.
- **Shoulder Buttons (LB, RB):** Additional game actions.
- **Triggers (LT, RT):** Analog input for acceleration, braking, or shooting.
- **Home Button:** Powers on/off the controller, accesses system menus.
- **Select/Start Buttons:** Game-specific functions.
- **USB-C Port:** For charging and wired connection.

4. SETUP AND CONNECTION

4.1 Charging the Controller

Before first use, fully charge the controller. Connect the USB charging cable to the controller's USB-C port and the other end to a USB power source (e.g., console, PC, USB wall adapter). The indicator light will show charging status and turn off when fully charged.

4.2 Wireless Connection (2.4GHz)



Figure 3: The PX01 controller shown with its accompanying USB 2.4GHz wireless receiver.

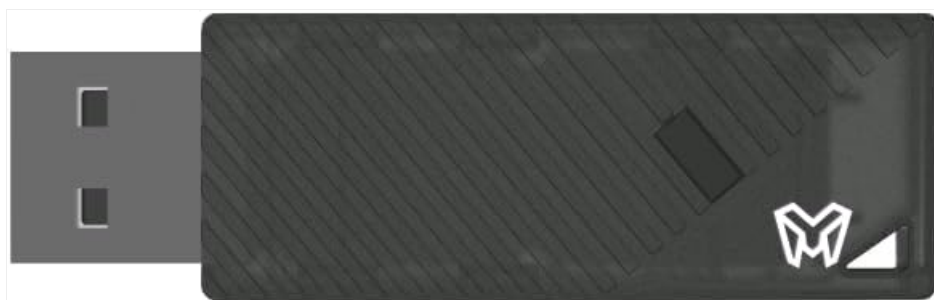


Figure 4: A detailed view of the USB 2.4GHz wireless receiver.

1. Insert the USB 2.4GHz wireless receiver into an available USB port on your console (Xbox One, Xbox Series S|X, PS3) or PC.
2. Press the Home button on the controller to power it on.
3. The controller will automatically attempt to connect to the receiver. The indicator light on the controller will stop flashing and remain solid once connected.
4. If the connection is not established, ensure the receiver is properly inserted and the controller is charged. You may need to press and hold the Home button for a few seconds to initiate pairing mode.

4.3 Wired Connection (PC)

For PC gaming, you can also connect the controller directly via the USB charging cable. Simply plug the USB-C end into the controller and the USB-A end into your PC. The PC should automatically detect and

install the necessary drivers.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press the Home button.
- **To Power Off:** Press and hold the Home button for 5 seconds. The controller will also power off automatically after a period of inactivity to conserve battery.

5.2 Using Hall Effect Joysticks and Triggers

The Hall effect technology in the joysticks and triggers provides enhanced durability and precision by using magnetic sensors instead of physical contacts. This results in smoother, more accurate input and reduces wear over time.

5.3 Adjustable Vibration

The controller features adjustable vibration feedback for a more immersive gaming experience. Specific games or platforms may offer options to customize vibration intensity within their settings.

6. MAINTENANCE

Proper care will extend the life of your controller:

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the controller. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the battery to about 50% to prolong its lifespan.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

7. TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the USB wireless receiver is securely plugged into the console/PC.
 - Make sure the controller is charged.
 - Try restarting the console/PC and the controller.
 - For PC, try a different USB port.
- **Input lag or dropped connection:**
 - Ensure there are no obstructions between the controller and the receiver.
 - Move closer to the receiver.
 - Minimize interference from other 2.4GHz wireless devices.
- **Controller not responding in game:**
 - Check if the controller is properly connected to the console/PC.
 - Verify game settings to ensure controller input is enabled.
 - Some games may require specific controller configurations.

- **PlayStation Compatibility Note:** This controller is not affiliated with or endorsed by Sony. PlayStation may release system updates that introduce changes affecting third-party controllers. In such instances, the controller may require a firmware update to restore full functionality. Please check the manufacturer's website for any available firmware updates.

8. SPECIFICATIONS

Model Number	PX01
Compatibility	Xbox One, Xbox Series S X, PS3, PC
Connectivity	2.4GHz Wireless, USB Wired
Battery	600mAh Lithium-ion
Battery Life	Up to 15 hours (continuous play)
Special Features	Hall Effect Joysticks, Hall Effect Triggers, Adjustable Vibration
Product Weight	195 ± 5 grams
Product Dimensions	156 × 104 × 60 mm
ASIN	B0FS7BQXRP

9. RETURN POLICY

This product is eligible for a 15-day return period from the date of purchase. Please refer to your retailer's return policy for detailed terms and conditions.