

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOMCOM](#) /

› [HOMCOM ND-180ML 22" Electric Fireplace Heater User Manual](#)

## HOMCOM ND-180ML

# HOMCOM ND-180ML 22" Electric Fireplace Heater User Manual

Comprehensive instructions for the safe and efficient use of your HOMCOM ND-180ML Electric Fireplace Heater.

[Safety Instructions](#)

[Product Components](#)

[Setup](#)

[Operating Instructions](#)  
[Warranty & Support](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

## 1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using this electric fireplace heater. Failure to follow these instructions may result in fire, electric shock, or injury.

- **Overheating Protection:** The unit is equipped with an automatic shut-off feature that activates if the heater overheats.
- **Tip-Over Protection:** For enhanced safety, the heater will automatically turn off if it is accidentally tipped over.
- **Cool-to-Touch Top:** The top surface of the fireplace remains cool during operation, reducing the risk of burns.
- Always plug the heater directly into a wall outlet. Do not use with extension cords or power strips.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Do not use outdoors. This heater is intended for indoor use only.



# OVER-HEAT PROTECTION

Shut off when overheating



Figure 1: Overheat Protection Feature. The unit automatically shuts off if it detects overheating, ensuring user safety.

## 2. PRODUCT COMPONENTS

Familiarize yourself with the main components of your HOMCOM Electric Fireplace Heater:

- **Main Frame:** Constructed from durable steel.
- **Tempered Glass Door:** Provides a clear view of the realistic LED flames and logs.
- **Plastic Door Handle:** For opening the front panel to access controls.
- **Control Panel:** Located behind the front panel, featuring buttons for various functions.
- **Heating Element:** Located at the bottom of the unit.
- **Decorative Logs:** Realistic log set for enhanced visual appeal.
- **Feet:** Four sturdy feet for freestanding stability.



## DETAILS



Figure 2: Detailed view of the fireplace components, highlighting the tempered glass, plastic door, and steel main frame.



*Figure 3: Close-up of the decorative door handle.*

### 3. SETUP

The HOMCOM Electric Fireplace Heater requires minimal assembly. Follow these steps to set up your unit:

1. Carefully remove all components from the packaging.
2. Place the main body of the fireplace upside down on a soft, clean surface to prevent scratching.
3. Attach the four feet to the designated mounting points on the bottom of the product using the provided screws. Ensure they are securely fastened.
4. Carefully turn the fireplace upright and place it on a stable, level surface.
5. Ensure the power cord is not pinched or damaged.



**HOMCOM**  
by Aosom

Figure 4: The HOMCOM Electric Fireplace Heater ready for use after assembly.

## 4. OPERATING INSTRUCTIONS

Your electric fireplace can be operated using the control panel located behind the front door or via a remote control (if included with your model). The flame effect can be used independently of the heat function.

### 4.1 Control Panel Functions

Open the front door to access the control buttons:

- **Power On/Off:** Press to turn the unit on or off.
- **Heat Settings:** Adjust between 725W (low heat) and 1450W (high heat) settings.
- **Adjustable Thermostat Control:** Set your desired room temperature. The heater will cycle on and off to maintain this temperature.
- **Flame Effect:** Activate or deactivate the realistic LED flame and log effect. Brightness may also be

adjustable.

- **Timer:** Set a timer for automatic shut-off.



Figure 5: Easy-to-use control panel for adjusting settings.

#### 4.2 Heating Area and Efficiency

This portable fireplace is designed to provide supplemental heat for areas up to 216 sq ft. The 725W and 1450W settings allow for flexible heating based on your needs.



# REALISTIC FLAME EFFECT

Can be used independently without heater

Coverage Area:

**15-20 m<sup>2</sup>**



Figure 6: The fireplace provides warmth for a coverage area of approximately 216 sq ft (15-20 m<sup>2</sup>).

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your electric fireplace heater.

- Always unplug the unit from the power outlet before cleaning or performing any maintenance.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the air intake and exhaust vents are clear of dust and debris. Use a vacuum cleaner with a brush attachment to clean these areas periodically.
- Do not attempt to open the unit or service any internal components. Refer all servicing to qualified service personnel.

## 6. TROUBLESHOOTING

If you experience issues with your electric fireplace, consult the following common troubleshooting steps:

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power switch off, or safety feature activated.	Check power cord connection. Ensure wall outlet is functional. Turn the main power switch on. If the unit overheated or tipped over, unplug it, wait 10-15 minutes, and plug it back in.
No heat output.	Heat function not activated or thermostat set too low.	Ensure the heat setting is selected on the control panel. Increase the thermostat setting.
Flame effect not working.	Flame effect feature is off.	Press the flame effect button on the control panel or remote control to activate.
Unit makes unusual noise.	Dust or debris in the fan/motor.	Unplug the unit and clean the vents as described in the Maintenance section. If the noise persists, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	HOMCOM
Model Name	Electric Fireplace
Item Model Number	ND-180ML
UPC	196393121429
Power Source	Corded Electric
Power Output	725W/1450W
Heat Output	5120 BTU per Hour per Foot per Degree Fahrenheit
Max Square Footage	216 sq ft
Product Dimensions	11"D x 16.25"W x 21.5"H
Item Weight	16 Pounds
Material	Metal

Feature	Detail
Finish Type	Powder Coated
Color	Beige
Installation Type	Freestanding
Special Feature	Flame Effect
Room Type	Living Room
Ventilation Type	Vent Free
Included Components	Mantel
Batteries Required	No

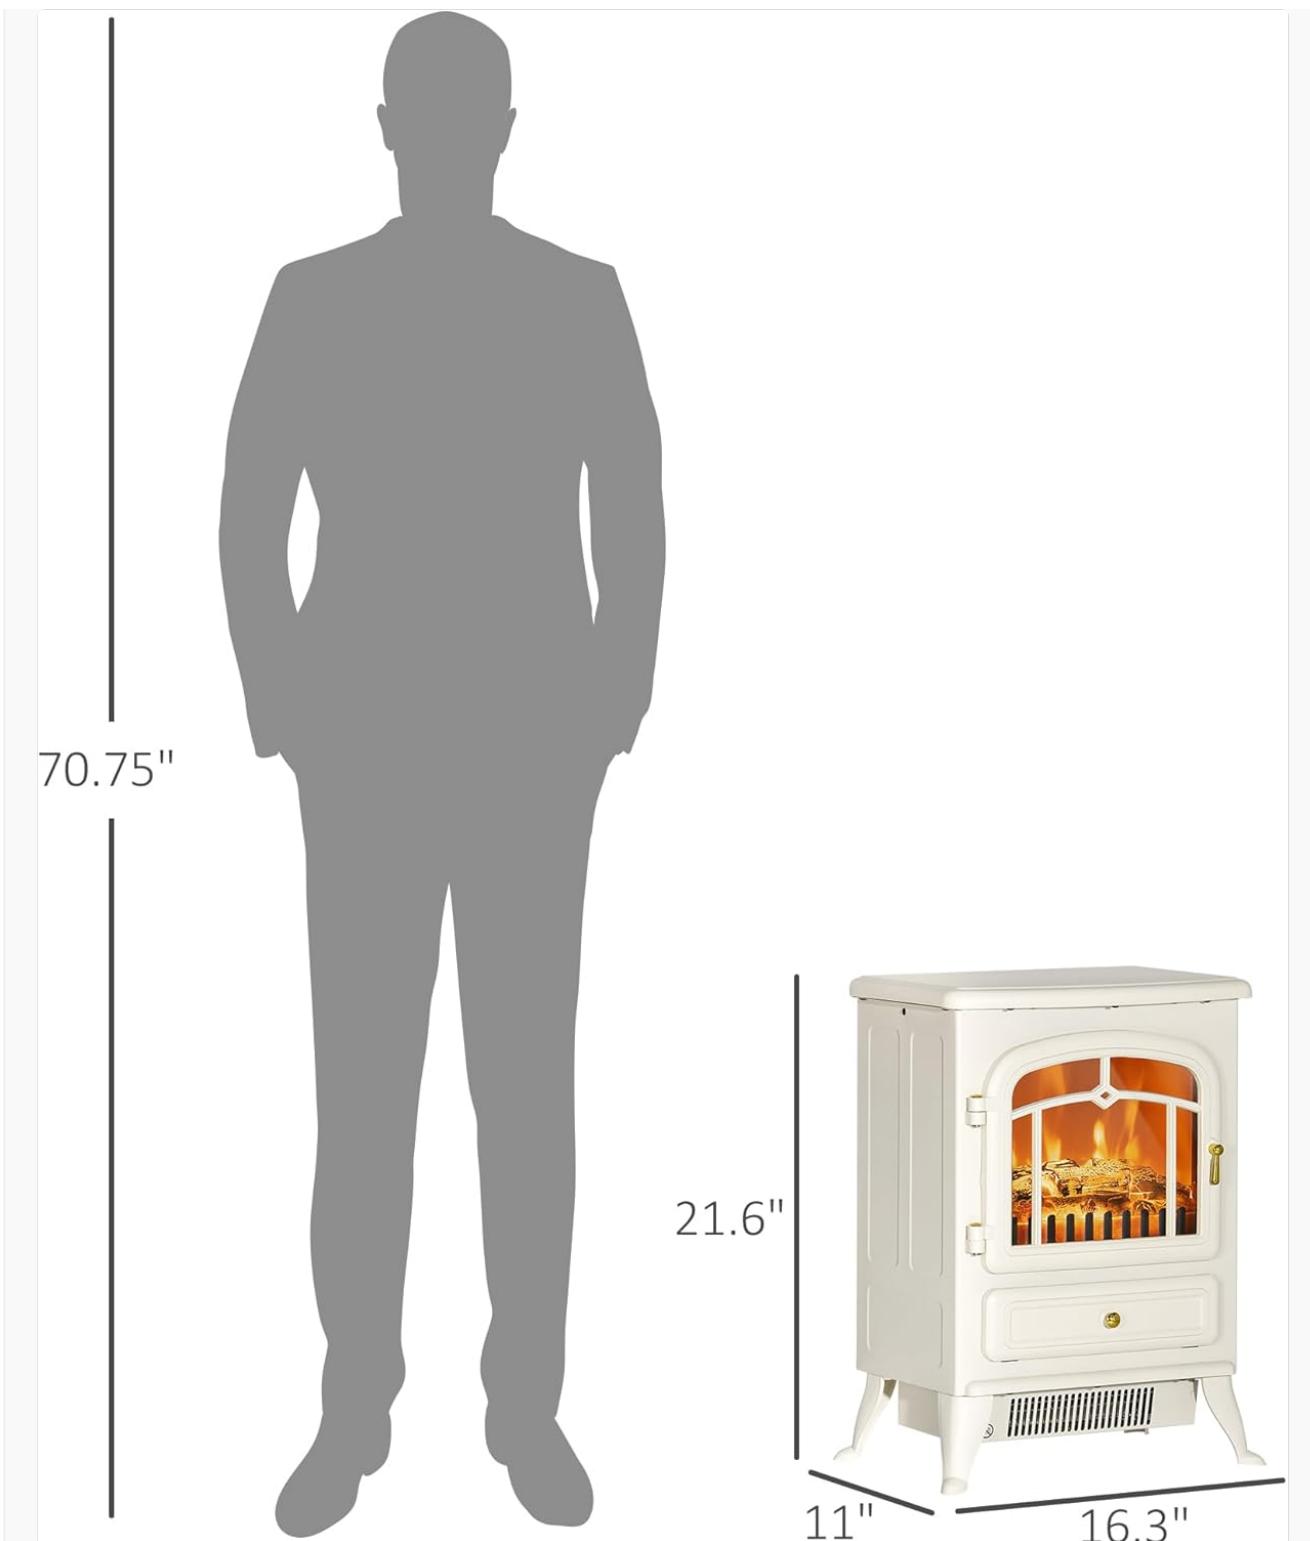


Figure 7: Product dimensions: 16.25" W x 11" D x 21.5" H.

## 8. WARRANTY & SUPPORT

This HOMCOM Electric Fireplace Heater comes with a **Limited Warranty**.

For detailed warranty information, product support, or to inquire about replacement parts, please contact HOMCOM customer service. Keep your purchase receipt and model number (ND-180ML) handy for faster service.

**Manufacturer:** Ningbo City Gengxin Appliance Industry Co., Ltd.

For further assistance, please visit the official HOMCOM website or contact their customer support line.

© 2026 HOMCOM. All rights reserved.