

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY 850W Food Dehydrator QE32613PQ-NWIT Instruction Manual](#)

COSTWAY QE32613PQ-NWIT

COSTWAY 850W Food Dehydrator Instruction Manual

Model: QE32613PQ-NWIT

INTRODUCTION

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your COSTWAY 850W Food Dehydrator. Please read it thoroughly before first use and retain it for future reference.



Image: The COSTWAY 850W Food Dehydrator, a black rectangular appliance with a transparent door, showcasing 10 stainless steel trays filled with colorful sliced fruits and vegetables. The brand name "COSTWAY" is visible on the front.

PRODUCT OVERVIEW AND FEATURES

The COSTWAY 850W Food Dehydrator is designed for efficient and uniform drying of various foods. Key features include:

- 850W Heating Element:** Provides powerful and consistent heat for effective dehydration.
- 360° Air Circulation Technology:** Ensures even drying across all trays, eliminating the need for tray rotation.
- 10 Stainless Steel Trays:** Offers ample capacity for large batches of food.
- Intuitive Control Panel:** Features a digital LED display and backlit buttons for easy operation.
- 10 Preset Programs:** Convenient options for common food types.
- Adjustable Temperature & Timer:** Temperature range of 35-75°C (95-167°F) and a timer up to 48 hours for customized drying.
- Four-Sided Viewing Windows & LED Lights:** Allows clear monitoring of the drying process without opening the door.
- Safety Features:** Integrated thermostat and overheating protection.
- Durable Construction:** Robust metal hinges and anti-slip feet for stability.

Pannello di Controllo Intelligente



Temperatura
35-75°C



Timer 1-48H



10 Programmi
Preimpostati



Display Digitale
a LED



Retroilluminazione
dei Pulsanti



Image: A detailed view of the dehydrator's intelligent control panel, showing a digital display indicating "75°C" and "48:00h", along with various backlit buttons for temperature, timer, and 10 preset food programs (e.g., Apple, Mushroom, Beef, Fish).

Design Visivo su 4 Lati



Superiore



Sinistra



Destra



Image: An illustration highlighting the dehydrator's four-sided visual design, indicating that the drying process can be observed from the top, front, left, and right sides through transparent panels.

SAFETY INSTRUCTIONS

Please read and follow these safety precautions carefully to prevent injury or damage to the appliance:

- Always place the dehydrator on a stable, heat-resistant surface.
- Ensure adequate ventilation around the appliance during operation.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children and pets.
- Unplug the dehydrator from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Avoid touching hot surfaces during and immediately after operation. Use oven mitts if necessary.

- Do not block the air vents during operation.
- This appliance is for household use only.

SETUP


1. **Unpacking:** Carefully remove all packaging materials and inspect the dehydrator for any damage. Retain packaging for future transport if needed.
2. **Initial Cleaning:** Before first use, wash the stainless steel trays, mesh screen, and drip tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the dehydrator on a flat, stable, and heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space around all sides for proper ventilation. Do not place near heat sources or flammable materials.
4. **Power Connection:** Ensure the voltage of your power outlet matches the specifications of the dehydrator (230V, 50Hz). Plug the power cord into a grounded electrical outlet.

Dotato di Accessori per Cottura




10 x Vassoi in Acciaio Inox

Per contenere una grande quantità di cibo

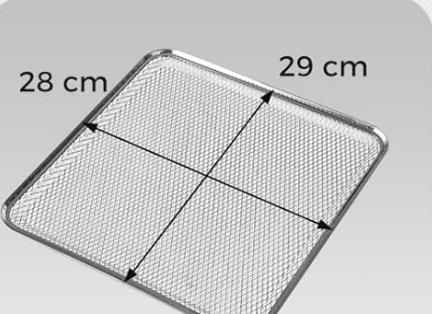

1 x Schermo a Rete

Per accogliere piccoli oggetti

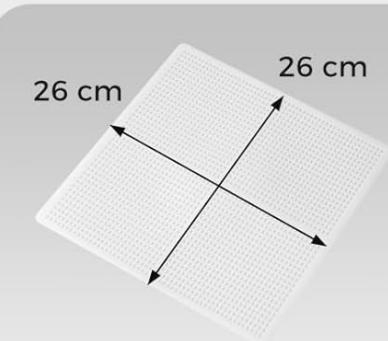

1 x Vassoio di Sgocciolamento

Doppio come foglio per il rotolo di frutta

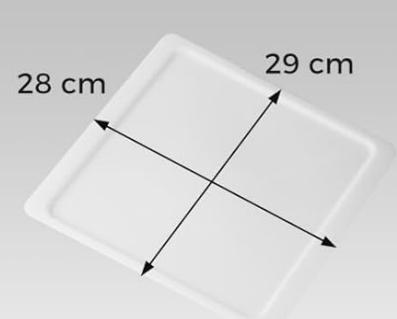


Image: The dehydrator's accessories laid out, including ten stainless steel trays (28x29 cm), one mesh screen (26x26 cm) for smaller items, and one drip tray (28x29 cm) which can also be used as a fruit roll sheet.

OPERATING INSTRUCTIONS

Preparing Food for Dehydration

- Wash and prepare food items (e.g., slice fruits and vegetables evenly, trim fat from meat).
- Arrange food in a single layer on the trays, ensuring air can circulate freely. Do not overlap items.
- For smaller items or herbs, use the mesh screen. For fruit leathers, use the drip tray as a fruit roll sheet.

Using the Control Panel

1. **Load Trays:** Place the prepared trays into the dehydrator. Close the door securely.
2. **Power On:** Plug in the dehydrator. The display will illuminate.
3. **Select Program (Optional):** Press the "Program" button to cycle through the 10 preset programs. Each program has a default temperature and time.
4. **Set Temperature:** If not using a preset program, press the "Temp" button and use the "+" and "-" buttons to adjust the temperature between 35°C and 75°C (95°F - 167°F).
5. **Set Timer:** Press the "Timer" button and use the "+" and "-" buttons to set the desired drying time, up to 48 hours.
6. **Start/Pause:** Press the "Start/Pause" button to begin the dehydration process. The LED lights inside will turn on. Press again to pause.
7. **Monitoring:** Use the four-sided viewing windows and internal LED lights to monitor the drying progress without opening the door.
8. **Completion:** The dehydrator will automatically shut off when the timer expires. Unplug the unit and allow food to cool before removing.

Versatile per Vari Alimenti

Si prega di consultare le istruzioni per le guide di cottura



Image: An illustration showing the versatility of the dehydrator for various foods, including fruits, vegetables, pet food, herbs, and dried meat (jerky).

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your dehydrator.

- Unplug:** Always unplug the dehydrator from the power outlet and allow it to cool completely before cleaning.
- Remove Trays:** Remove all trays, mesh screen, and drip tray from the unit.
- Wash Accessories:** Wash the stainless steel trays, mesh screen, and drip tray in warm, soapy water. A soft brush can be used to remove stubborn food residue. Rinse thoroughly and dry completely. These parts are generally dishwasher safe, but hand washing is recommended for longevity.
- Clean Interior:** Wipe the interior of the dehydrator with a damp cloth. For sticky residue, use a mild detergent solution, then wipe with a clean damp cloth to remove any soap residue. Ensure the interior is completely dry before next use.

5. **Clean Exterior:** Wipe the exterior of the dehydrator with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
6. **Storage:** Store the dehydrator in a clean, dry place when not in use.



Image: A person cleaning the interior of the dehydrator with a cloth, and a separate inset showing a hand washing one of the mesh trays under running water, illustrating the ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dehydrator does not turn on.	Not plugged in; power outage; faulty outlet; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Food is not drying evenly.	Overloaded trays; unevenly sliced food; blocked air vents.	Ensure food is in a single layer and not overlapping. Slice food to uniform thickness. Check that air vents are not obstructed.
Dehydrator stops unexpectedly.	Timer expired; overheating protection activated; power interruption.	Check the timer setting. If the unit is hot, allow it to cool down. Verify power supply.
Unusual noise during operation.	Fan obstruction; loose component.	Unplug the unit and inspect the fan area for any obstructions. If noise persists, contact customer support.

SPECIFICATIONS

Brand	COSTWAY
Model	QE32613PQ-NWIT
Color	Black
Materials	Stainless Steel, Galvanized Metal, PP
Product Dimensions (L x W x H)	40 cm x 33 cm x 35.5 cm
Net Weight	9.4 kg
Voltage	230V
Frequency	50Hz
Current	3.7A
Power	850W
Temperature Range	35°C - 75°C (95°F - 167°F)
Timer Range	1 - 48 hours
Noise Level	<48dB
Number of Trays	10 (Stainless Steel)
Included Accessories	1 Mesh Screen, 1 Drip Tray/Fruit Roll Sheet

Dimensioni del Prodotto

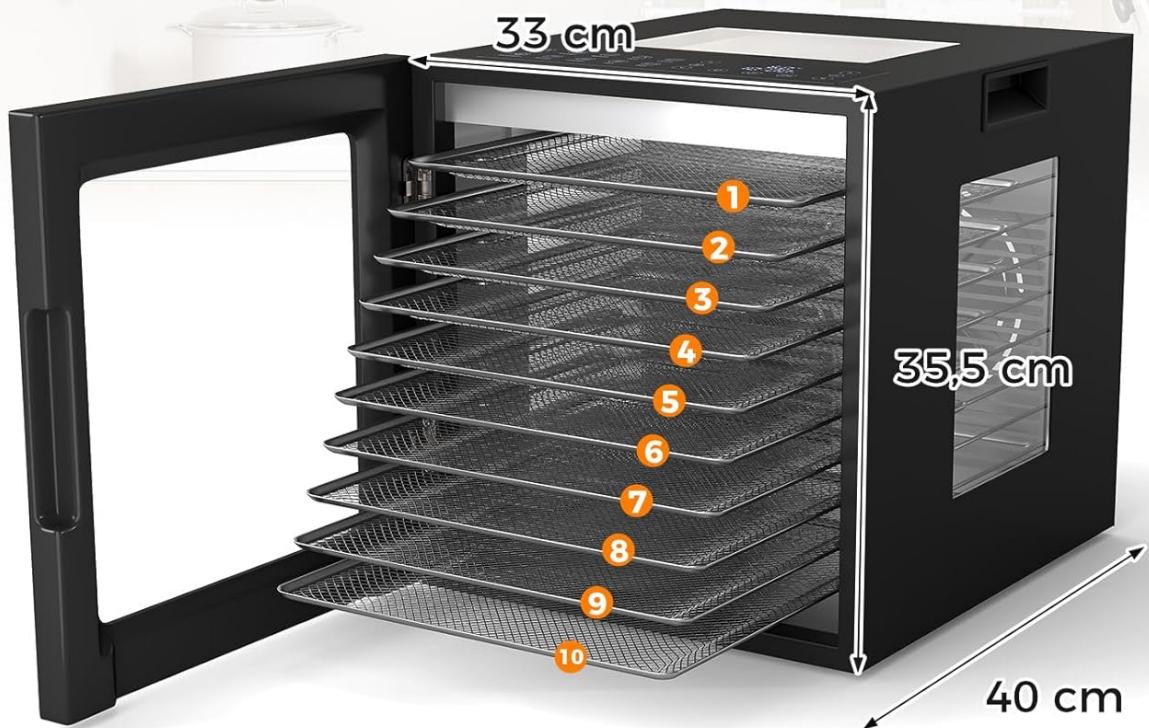


Image: A diagram illustrating the external dimensions of the dehydrator: 33 cm (width), 40 cm (depth), and 35.5 cm (height), with the 10 trays numbered inside.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official COSTWAY website. For technical support, replacement parts, or any questions regarding your product, please contact COSTWAY customer service.

Contact Information: Please refer to the contact details provided in your product packaging or on the official COSTWAY website.

 <p>USER'S MANUAL HW56444 Food Dehydrator</p>	<p>COSTWAY HW56444 Food Dehydrator User Manual</p> <p>User manual for the COSTWAY HW56444 Food Dehydrator, providing essential safety guidelines, operating instructions, food preparation tips, storage advice, cleaning procedures, and recipes.</p>
 <p>USER'S MANUAL KC53790 3-Tier Wire Fruit Basket Stand</p>	<p>Costway 3-Tier Wire Fruit Basket Stand KC53790 User Manual and Installation Guide</p> <p>User manual and installation instructions for the Costway 3-Tier Wire Fruit Basket Stand (Model KC53790). This guide provides step-by-step assembly instructions, safety information, and contact details for customer support.</p>
 <p>USER'S MANUAL EP24925US Air Fryer Oven</p>	<p>Costway EP24925US Air Fryer Oven User Manual</p> <p>Comprehensive user manual for the Costway EP24925US Air Fryer Oven, covering setup, operation, safety precautions, parts, cooking charts, and troubleshooting.</p>
 <p>USER'S MANUAL EP24760 Air Fryer Oven</p>	<p>Costway Air Fryer Oven EP24760 User Manual: Operation, Safety, and Features</p> <p>Comprehensive user manual for the Costway Air Fryer Oven EP24760. Covers safety guidelines, product components, accessory usage, operating instructions, cleaning, maintenance, and troubleshooting tips.</p>
 <p>USER'S MANUAL HW51296/HW51297 Juicer</p>	<p>Costway HW51296/HW51297 Juicer User Manual</p> <p>User manual for the Costway HW51296 and HW51297 juicer, providing instructions on use, safety, technical data, and maintenance.</p>
 <p>USER'S MANUAL KC53791 Insulated Food Pan Carrier</p>	<p>Costway Insulated Food Pan Carrier KC53791 - Installation and Safety Guide</p> <p>Detailed installation instructions, safety precautions, and return/damage claim procedures for the Costway Insulated Food Pan Carrier, model KC53791.</p>