

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tefal](#) /

› [Tefal Essential Kitchen Scale BC5504V0 User Manual](#)

Tefal BC5504V0

Tefal Essential Kitchen Scale BC5504V0 User Manual

Model: BC5504V0 | Brand: Tefal

INTRODUCTION

The Tefal Essential Kitchen Scale is designed for precise weighing of ingredients up to 5 kg. It offers both metric and imperial unit options and features a smart tare function for convenient multi-ingredient weighing. This manual provides comprehensive instructions for safe and efficient use of your kitchen scale.

1. SETUP

1.1 Unpacking

Carefully remove the kitchen scale from its packaging. Ensure all components are present: the scale unit and two AAA batteries.

1.2 Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the two included AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

1.3 Placement

Place the scale on a firm, flat, and stable surface to ensure accurate measurements. Avoid placing it on soft or uneven surfaces, or near strong electromagnetic fields.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off

- To turn on the scale, press the **On/Off** button. The display will show "0" or "0.0".
- To turn off the scale, press and hold the **On/Off** button for a few seconds. The scale also features an automatic shut-off function to conserve battery power.

2.2 Unit Selection

Press the **Unit** button to cycle through the available measurement units: grams (g), kilograms (kg), milliliters (ml), pounds (lb), and ounces (oz). Select the desired unit before weighing.

2.3 Weighing Ingredients

1. Ensure the scale is on and displaying "0".
2. Place the item or container directly onto the center of the weighing platform. The weight will be displayed.



Image: The Tefal Essential Kitchen Scale in use, accurately weighing ingredients for baking. The display shows a clear reading.

2.4 Tare Function (Zeroing)

The tare function allows you to weigh multiple ingredients consecutively in the same container without emptying it. It also lets you subtract the weight of a container.

1. Place the first ingredient or empty container on the scale.
2. Press the **On/Off** button (which also functions as Tare). The display will reset to "0".
3. Add the next ingredient. The scale will display only the weight of the newly added ingredient.

4. Repeat this process for additional ingredients.



Image: The Tefal Essential Kitchen Scale, demonstrating its compact design and suitability for various kitchen tasks, such as preparing ingredients for cookies.

3. MAINTENANCE

3.1 Cleaning

The glass weighing platform is easy to clean. Wipe the scale with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water. Ensure the scale is completely dry before storage or next use.

3.2 Storage

Store the scale in a cool, dry place. Its compact design allows for easy storage in a drawer or cabinet. Avoid placing heavy objects on the scale when not in use.



Image: A clear top-down view of the Tefal Essential Kitchen Scale, highlighting its sleek design and easy-to-clean glass surface.

4. TROUBLESHOOTING

- **"Lo" displayed:** Indicates low battery. Replace the AAA batteries.
- **"Err" displayed:** Indicates overload. Remove items from the scale immediately to prevent damage. The maximum capacity is 5 kg.
- **Inaccurate readings:** Ensure the scale is on a flat, stable surface. Avoid vibrations or drafts. Recalibrate by turning the scale off and on again.
- **Scale does not turn on:** Check battery installation and ensure batteries are not depleted.

5. SPECIFICATIONS

Brand	Tefal
-------	-------

Model Number	BC5504V0
Weight Limit	5 Kilograms
Reading Precision	1 gram (g)
Units of Measurement	g, kg, ml, lb, oz
Display Type	Digital
Material	Glass
Product Dimensions	21 x 18 x 1.5 cm
Product Weight	410 g
Batteries	2 AAA (included)
Manufacturer	Groupe Seb

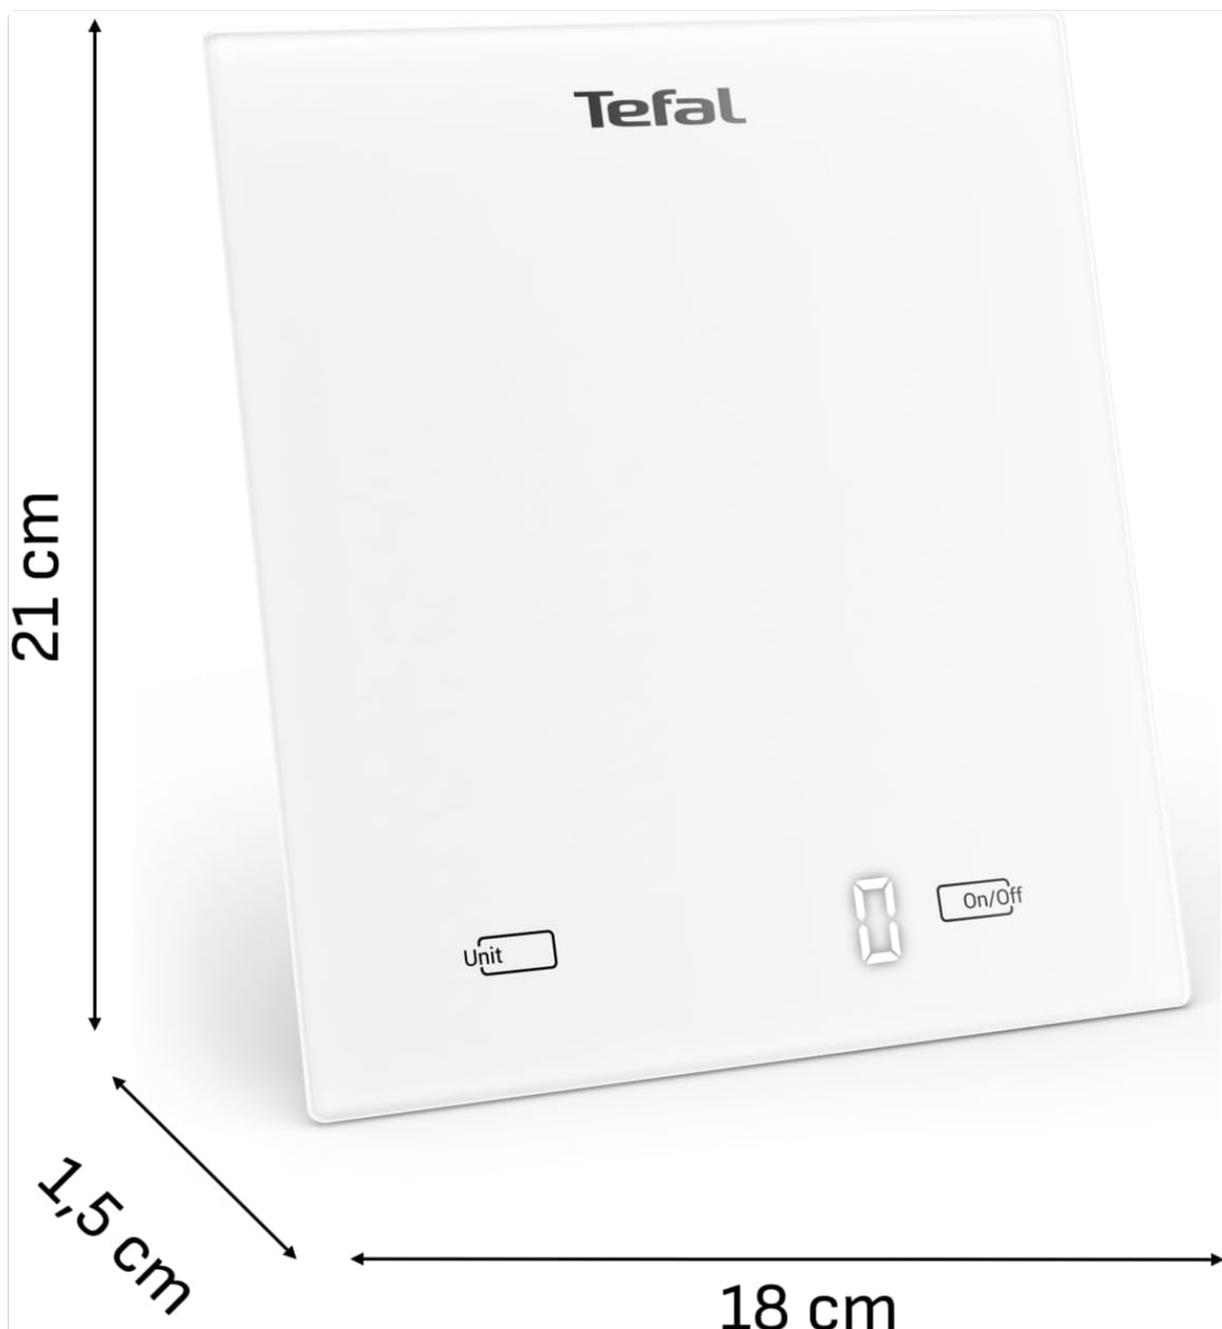


Image: The Tefal Essential Kitchen Scale with its dimensions clearly indicated: 21 cm length, 18 cm width, and 1.5 cm height.

6. WARRANTY

Tefal offers a commitment to reparability for 15 years at a fair price. For enhanced durability and to ensure proper functioning, we recommend having any necessary repairs performed by our authorized service network, which includes 6200 repair centers worldwide.

7. CUSTOMER SUPPORT

For further assistance, product inquiries, or technical support, please visit the official Tefal website or contact your local customer service center. Contact information can typically be found on the product packaging or the official brand website.

You can also visit the [Tefal Store on Amazon](#) for more product information.