

[manuals.plus](#) /› [PUSOKEI](#) /› [PUSOKEI 4G LTE WiFi Router User Manual - Model PUSOKEI5q0urwx4f1](#)

PUSOKEI PUSOKEI5q0urwx4f1

PUSOKEI 4G LTE WiFi Router User Manual

Model: PUSOKEI5q0urwx4f1

1. INTRODUCTION

This manual provides instructions for the PUSOKEI 4G LTE WiFi Router, a portable mobile hotspot designed to convert a 4G LTE signal into a WiFi network. This device supports up to 10 connected devices simultaneously and operates on a 2.4GHz wireless network frequency.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Portable WiFi Hotspot (PUSOKEI 4G LTE WiFi Router)
- 1 x USB Cable
- 1 x User Manual

3. PRODUCT OVERVIEW

The PUSOKEI 4G LTE WiFi Router is a compact device that provides wireless internet connectivity. It features a standard SIM card slot and an integrated 10000mAh lithium-ion battery for extended use.



Figure 3.1: Front view of the PUSOKEI 4G LTE WiFi Router, showing the display and WiFi6 branding.

Key features include:

- **4G to WiFi Conversion:** Converts 4G LTE signals into a WiFi network.
- **Transmission Rate:** Provides up to 300Mbps (2.4GHz) WiFi speeds.
- **Device Connectivity:** Supports connection for up to 10 wireless devices simultaneously.
- **Network Support:** Operates on 2.4GHz WiFi frequency.
- **Battery:** Equipped with a 10000mAh lithium-ion battery.

4. SETUP

Follow these steps to set up your PUSOKEI 4G LTE WiFi Router:

1. **Insert SIM Card:** Locate the SIM card slot on the side of the device. Insert a standard small SIM card into the slot. Ensure the SIM card is correctly oriented.



Figure 4.1: Side view of the router, highlighting the SIM card slot.

2. **Power On:** Press and hold the power button until the device powers on. The device will automatically detect the 4G network signal.

Small dimension, high energy

Detachable 10000mAh lithium battery



Ultra large capacity, lasts a full day without charging



Figure 4.2: The router powered on and ready to provide internet access.

3. **Network Availability:** Once powered on, the device will establish a wireless network. You can then connect your WiFi-enabled devices to this network.

5. OPERATING INSTRUCTIONS

To use your PUSOKEI 4G LTE WiFi Router:

1. **Connect Devices:** On your WiFi-enabled device (e.g., smartphone, laptop), search for available WiFi networks. Select the network name (SSID) broadcast by your PUSOKEI router.
2. **Enter Password:** Enter the WiFi password (usually found on a label inside the device or in the quick start guide) when prompted.

Enjoy online games without falling behind Play computer games without lay

Stable signal,anti-interference and low lag



Figure 5.1: A smartphone connected to the router, showing network performance metrics.

3. **Internet Access:** Once connected, your device will have internet access via the 4G LTE network. The router provides a stable connection for various online activities.
4. **Multiple Devices:** The router can support up to 10 devices simultaneously, making it suitable for sharing internet access in various environments.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your router:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** The router includes a 10000mAh lithium-ion battery. For optimal battery life, avoid extreme temperatures and fully discharge and recharge the battery periodically.

4G EVERYWHERE

Enjoy wireless networks anytime, anywhere

Portable and Mini

Pocket fast wireless 4G MiFi



Figure 6.1: The router's internal 10000mAh battery provides extended usage time.

- **Storage:** When not in use for extended periods, store the device in a cool, dry place.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure optimal performance and security.

7. TROUBLESHOOTING

If you encounter issues with your router, refer to the following common problems and solutions:

- **No Internet Connection:**

- Ensure the SIM card is correctly inserted and active.
- Check if your local SIM card or 4G bands are supported (FDD-LTE B1 B3 B5 B7 B8 B20 TDD-LTE B38 B40 B41).
- Restart the router and your connected device.
- Verify that your SIM card has an active data plan.

- **Slow Connection Speed:**

- Move to an area with better 4G signal reception.
- Reduce the number of connected devices.

- Ensure no applications are consuming excessive bandwidth.
- **Device Not Connecting to WiFi:**
 - Confirm you are entering the correct WiFi password.
 - Ensure the router is powered on and broadcasting its WiFi signal.
 - Restart both the router and the device attempting to connect.
- **Router Only Displays '4G' Network:**
 - The device is designed to display '4G' regardless of whether a 4G or 5G SIM card is inserted. This is normal operation and does not indicate a fault.

8. SPECIFICATIONS

Feature	Specification
Item Type	Portable WiFi Hotspot
Material	ABS
Applicable Region	Europe
Network Frequency	FDD-LTE B1 B3 B5 B7 B8 B20 TDD- B38 B40 B41
Network	4G
Transmission Rate	300Mbps
Protocol Support	802.11ac
Wireless Network Frequency	2.4GHz
Built-in Firewall	Yes
Built-in Battery	1 x 10000mAh Lithium Ion Battery
SIM Card Slot	Small SIM Card (Not Included)
Item Weight	8.9 ounces
Package Dimensions	5.91 x 3.54 x 1.57 inches

9. WARRANTY INFORMATION

Please refer to the warranty card included with your product or contact the retailer for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For technical assistance or further inquiries, please contact PUSOKEI customer support through the contact information provided on the product packaging or the official PUSOKEI website.

