

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- > [AceGamer](#) /
- > [AceGamer Wireless PS4 Controller Instruction Manual \(Pink and White\)](#)

AceGamer B0FS9MXDN3

AceGamer Wireless PS4 Controller Instruction Manual

Model: B0FS9MXDN3 (Pink and White)

Brand: AceGamer

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the AceGamer Wireless PS4 Controller. This manual provides essential information for setting up, operating, and maintaining your new controllers. The AceGamer controller is designed to enhance your gaming experience with its ergonomic design, responsive controls, and wide compatibility.

This package includes two wireless controllers, offering a cost-effective solution for multiplayer gaming or as a backup set. These controllers are compatible with PS4, PS4 Pro, PS4 Slim, and Windows PC.



Image: Two AceGamer wireless controllers, one pink and white, one black and white, highlighting the upgraded version and wireless gamepad functionality.

2. PRODUCT FEATURES

- **Dual Vibration Motors:** Provides excellent dual shock effects for a more sensitive tactile gaming experience.
- **6-Axis Gyro Sensor:** Built-in sensor for realistic and precise motion control.
- **Multi-Touch Pad:** Offers precise control and new interaction possibilities.
- **Light Bar:** Visual feedback for in-game actions and controller status.
- **3.5mm Audio Jack:** Connect your headset for immersive audio.
- **Ergonomic Design:** Optimized buttons and triggers with non-slip grips for comfortable extended play.
- **High-Quality Battery:** Built-in 1000mAh battery for long play sessions and fast charging via USB-C.



Tips: USB-Cable Must be Used for Initial Connection.
(Activate Wireless Function)

Image: Detailed diagram illustrating the layout and functions of the AceGamer PS4 controller buttons and ports.



Image: Close-up view highlighting the superior refined joystick design for accuracy and comfort.



Image: Illustration of the dual vibration feedback feature, providing an immersive gaming experience.

3. PACKAGE CONTENTS

Your AceGamer Wireless PS4 Controller package includes:

- 2 x AceGamer Wireless PS4 Controllers (Pink and White)
- 1 x USB-C Charging Cable
- 1 x User Manual

4. SETUP INSTRUCTIONS

Initial Connection to PS4 Console

1. For the first connection, you must use the provided USB-C cable to physically connect the controller to your PS4 console. This activates the device for initial pairing.
2. Press and hold the **HOME** button on the controller. The controller's LED light bar will flash.
3. Once connected successfully, the LED light bar will remain lit. You can now enjoy your controller wired or wirelessly.
4. For subsequent wireless connections, press and hold the **HOME** and **SHARE** buttons simultaneously for 3-5 seconds. In the PS4's Bluetooth device settings, you should see 'Wireless Controller'. Click to pair

and connect.



Image: Visual guide for the initial wired connection of the controller to a PS4 console.

Connecting to PC

To connect to a Windows PC without Bluetooth, you will need to install a compatible receiver (not included). For PCs with Bluetooth, follow standard Bluetooth pairing procedures after the initial wired connection to a PS4 (if applicable for first-time activation).

5. OPERATING INSTRUCTIONS

Turbo Setting

1. **Customize a Turbo Key:** Hold down the **SHARE** key, then press the button you wish to set as a Turbo key.
2. **Adjust Turbo Frequency:** Hold down the **SHARE** key, then move the right joystick up or down. There are three adjustable gears for turbo frequency.

Charging the Controller

Connect the provided USB-C charging cable to the controller's USB-C port and the other end to your PS4 console or a compatible USB power source. The controller features a high-quality battery for fast charging and long battery life.

6. RESET FUNCTION

If the controller is out of order or unresponsive, it can be reset. Locate the small reset button on the back of the controller (as shown in the image below) and poke it with a thin needle or paperclip.



RESET FUNCTION

When the controller is out of order, which can be reset by poking the reset key with a needle.

ANTI-SLIP

Image: Location of the reset button and the anti-slip texture on the controller's grips.

7. AUDIO PORT

The controller is equipped with a 3.5mm audio jack for connecting your headset. Please note that this product does not include speaker functionality.



Image: Demonstrates the use of the 3.5mm audio port for connecting a headset.

8. COMPATIBILITY

The AceGamer Wireless Controller is compatible with the following platforms:

- PlayStation 4 (PS4)
- PlayStation 4 Pro (PS4 Pro)
- PlayStation 4 Slim (PS4 Slim)
- Windows PC



Image: Visual representation of the controller's compatibility with various PlayStation 4 models and Windows PC.

9. SPECIFICATIONS

Feature	Detail
Model Number	B0FS9MXDN3
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Battery Capacity	1000mAh
Charging Port	USB-C

Audio Port	3.5mm Headphone Jack
Motion Sensor	6-Axis Gyro Sensor
Vibration	Dual Motor Vibration
Weight	1.17 pounds (approx. 0.53 kg)
Package Dimensions	6.69 x 4.88 x 4.57 inches (approx. 17 x 12.4 x 11.6 cm)

10. TROUBLESHOOTING

- **Controller Not Connecting:** Ensure the controller is fully charged. For first-time connection, use the USB-C cable to connect to the PS4. For wireless, ensure Bluetooth is enabled on the PS4 and follow the pairing instructions in Section 4. If issues persist, try the reset function (Section 6).
- **Input Lag/Unresponsiveness:** Ensure the controller is within range of the console. Check for any interference from other wireless devices. Try reconnecting the controller or performing a reset.
- **Vibration Not Working:** Check in-game settings to ensure vibration is enabled. If it's still not working, try resetting the controller.
- **Audio Jack Issues:** Ensure your headset is a 3.5mm 4-right pole earphone. Check the headset connection and volume settings on the console.

11. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Do not expose the battery to high temperatures or attempt to disassemble it. Charge regularly to maintain battery health.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

12. WARRANTY AND SUPPORT

AceGamer focuses on the design, production, and sales of custom controllers and is committed to providing professional after-sales service.

If you have any questions or encounter any issues with your AceGamer Wireless PS4 Controller, please contact our customer support team at any time. Refer to your purchase documentation for specific warranty details and contact information.

Additional Resources

Your browser does not support the video tag.

Video: An official product video showcasing the AceGamer 2 Pack for PS4 Controller in Pink and White, demonstrating its features and design.

Your browser does not support the video tag.

Video: An official product video providing an overview of the AceGamer 2 Pack for PS4 Controller, highlighting its key functionalities.

