

[Manuals.plus](#) /

› [Ejoyous](#) /

› Ejoyous 4G USB WiFi Hotspot Modem: Instruction Manual for Model Ejoyousxnggm2dqyf

Ejoyous Ejoyousxnggm2dqyf

Ejoyous 4G USB WiFi Hotspot Modem

Model: Ejoyousxnggm2dqyf

INTRODUCTION

This manual provides comprehensive instructions for the Ejoyous 4G USB WiFi Hotspot Modem. This device allows you to establish a high-speed 4G internet connection and share it wirelessly with multiple devices. Please read this manual carefully before using the product to ensure proper operation and to maximize its performance and lifespan.

PRODUCT OVERVIEW

Key Features

- **Ultra-Fast 4G Connection:** Enjoy brilliant internet speeds with download rates up to 150 Mbps and upload rates of 50 Mbps, supporting stable LTE 4G across multiple network bands (B1, 3, 5, 7, 8, 20, 40).
- **Multi-Device Sharing:** Share your internet connection with up to 10 devices simultaneously, including smartphones, laptops, tablets, and smart TVs.
- **Plug and Play Simplicity:** Instant connection without complicated setup. Simply insert a standard SIM card and connect to any USB power source.
- **Versatile Compatibility:** Works with various operating systems and supports WiFi standards 802.11 b/g/n. Its compact design is durable and lightweight for daily use.
- **Advanced Security Protection:** Navigate confidently with WPA and WPA2 enterprise-grade encryption, preventing unauthorized access and providing full control over data usage.

Package Contents

- 1 x Ejoyous 4G USB Mobile WiFi Hotspot Modem
- 1 x User Manual

Product Visuals



Support multiple terminals to access the Internet at the same time
Support 10 devices
Such as cell phones, laptops, computers, smart televisions and other devices to access the Internet



Front view of the Ejoyous 4G USB WiFi Hotspot Modem, showing its compact design.





Angled view of the Ejoyous 4G USB WiFi Hotspot Modem, highlighting its USB connector.

SETUP INSTRUCTIONS

1. Insert SIM Card:

Gently slide off the back cover of the USB WiFi Hotspot. Locate the standard SIM card slot. Insert your activated standard SIM card into the slot, ensuring it is correctly oriented. Close the back cover securely.



Image showing the SIM card slot after removing the back cover.

2. Connect to Power:

Plug the USB WiFi Hotspot into any standard USB power source. This can be a computer's USB port, a USB wall adapter, a car charger, or a mobile power bank. The device will power on automatically.



Plug and Play
Connect the power device
and insert the SIM card
Use SIM card data to access
the Internet anytime, anywhere

The device is ready for use after connecting to a USB power source and inserting the SIM card.

3. Initial Connection:

Once powered on, the device will automatically search for a 4G network. The LED indicator (if present, typically a signal icon) will illuminate or change color to indicate network status. Refer to the device's label for default WiFi network name (SSID) and password.

OPERATING INSTRUCTIONS

1. Connecting Devices:

On your smartphone, laptop, tablet, or smart TV, search for available Wi-Fi networks. Select the SSID corresponding to your Ejoyous Hotspot (usually printed on the device or its packaging). Enter the default Wi-Fi password when prompted. You can connect up to 10 devices simultaneously.



The hotspot supports simultaneous connection for up to 10 devices, including phones, laptops, and smart TVs.

2. **Network Security:**

The device uses WPA and WPA2 encryption protocols to secure your wireless network. It is recommended to change the default Wi-Fi password to a strong, unique password for enhanced security. Consult the device's web interface (if available, typically accessed via a browser) for advanced settings.

3. **Data Usage Control:**

Monitor your data usage to avoid exceeding your SIM card's data plan limits. Some devices offer data usage tracking through a web interface.

MAINTENANCE

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.
- Ensure the SIM card is properly seated to maintain a stable connection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Internet Connection	◦ SIM card not inserted correctly or not activated. ◦ No 4G signal in the area. ◦ Data plan exhausted. ◦ Incorrect APN settings (advanced).	◦ Reinsert SIM card, ensure it's activated. ◦ Move to an area with better 4G coverage. ◦ Check data plan balance with your provider. ◦ Access device's web interface to verify/configure APN settings (refer to SIM provider for correct settings).
Cannot Connect to WiFi	◦ Incorrect WiFi password. ◦ Device is out of range. ◦ Too many devices connected.	◦ Verify and re-enter the WiFi password. ◦ Move closer to the hotspot. ◦ Disconnect some devices if more than 10 are connected.
Slow Internet Speed	◦ Weak 4G signal. ◦ Network congestion. ◦ Data throttling by provider.	◦ Relocate the hotspot to an area with stronger signal. ◦ Try connecting during off-peak hours. ◦ Contact your SIM card provider.

SPECIFICATIONS

Brand	Ejoyous
Model Name	Ejoyousxnggm2dqyf
Item Type	USB Mobile WiFi Hotspot
Material	ABS Plastic Alloy
Color	White with Red Accents
Card Slot Type	Standard SIM Card (not included)
4G LTE Bands	B1, 3, 5, 7, 8, 20, 40
3G UMTS Bands	B1
Download Speed	Up to 150 Mbps
Upload Speed	Up to 50 Mbps
WiFi Standard	802.11b/g/n (Wi-Fi 4)
WiFi Frequency	2.4 GHz
Supported Users	Up to 10 devices
Compatible Devices	Smartphones, Laptops, Tablets, Smart TVs
Connectivity Technology	Wi-Fi, 4G LTE

Security Protocols	WPA, WPA2-PSK
Applicable Regions	Europe, Southeast Asia, Africa, Middle East

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact Ejoyous customer service through their official website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question